

Escape SPBT3538

Escape Wireless Speaker

MODEL: SPBT3538 - USER MANUAL

Introduction

Thank you for choosing the Escape Wireless Speaker. This portable speaker is designed to deliver immersive 3D stereo sound with the convenience of Bluetooth 5.0 connectivity. Its IPX4 water-resistant design makes it suitable for various environments, and the built-in microphone allows for hands-free calling. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water sources, despite its water-resistant rating. Do not submerge.
- Do not attempt to disassemble, repair, or modify the speaker yourself. This will void the warranty and may cause damage.
- Use only the charging cable provided or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep out of reach of children.

Package Contents

Please check the box for the following items:

- Escape Wireless Speaker (Model SPBT3538)
- USB Charging Cable
- Carrying Strap
- User Manual (this document)

Product Overview

Familiarize yourself with the various parts and controls of your Escape Wireless Speaker.



Image: The Escape Wireless Speaker showing its controls, strap attachment point, and highlighting features like IPX4 water resistance and Bluetooth 5.0.

- **Power Button:** Press and hold to turn the speaker on/off.
- **Play/Pause Button:** Press to play or pause music.
- **Volume Up Button:** Press to increase volume. Press and hold for next track.
- **Volume Down Button:** Press to decrease volume. Press and hold for previous track.
- **Microphone:** For hands-free calling.
- **Charging Port:** USB port for charging the speaker.
- **Strap Attachment Point:** For attaching the included carrying strap.



Image: The Escape Wireless Speaker with the carrying strap attached, demonstrating its portability.

Setup

Charging the Speaker

1. Connect the small end of the USB charging cable to the charging port on the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red for charging, off when fully charged).
4. Allow approximately 2-3 hours for a full charge.

Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Press and hold the Power button for 2-3 seconds to turn on the speaker. You will hear an audible prompt, and the LED indicator will flash, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, etc.), go to the Bluetooth settings.

4. Enable Bluetooth and search for available devices.
5. Select "Escape Speaker" from the list of devices.
6. Once paired, you will hear a confirmation sound, and the LED indicator will stop flashing and remain solid.
7. The speaker is now ready to play audio from your device.

Operating the Speaker

Playing Music

- After successful Bluetooth pairing, open your favorite music app on your device.
- Press the Play/Pause button on the speaker to start or pause playback.
- Press the Volume Up (+) button to increase the volume.
- Press the Volume Down (-) button to decrease the volume.
- Press and hold the Volume Up (+) button for the next track.
- Press and hold the Volume Down (-) button for the previous track.

Hands-Free Calling

- When a call comes in, the music will pause.
- Press the Play/Pause button once to answer an incoming call.
- Press the Play/Pause button once again to end the call.
- Press and hold the Play/Pause button to reject an incoming call.

Maintenance

- **Cleaning:** Use a soft, lint-free cloth to wipe the speaker's surface. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery; Power button not pressed long enough	Charge the speaker fully; Press and hold the Power button for 2-3 seconds
Cannot pair with Bluetooth device	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker	Ensure speaker LED is flashing; Turn on Bluetooth on device; Move device closer to speaker (within 10m)
No sound or low volume	Volume too low on speaker or device; Speaker not connected	Increase volume on both speaker and device; Re-pair the speaker with your device
Sound distortion	Volume too high; Device too far; Interference	Lower volume; Move device closer; Move away from other electronic devices

Specifications

Feature	Detail
Model Name	SPBT3538
Speaker Type	Tower
Connectivity Technology	Bluetooth 5.0
Audio Output Mode	Stereo (2.0 Surround Sound Channel Configuration)
Maximum Output Power	80 Watts
Water Resistance	IPX4 (Water-Resistant)
Built-in Microphone	Yes
Included Components	Carrying Strap
Product Dimensions	7D x 7W x 12H Centimetres
Color	Black
Manufacturer	Escape
Country of Origin	China

Warranty and Support

The Escape Wireless Speaker is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or the manufacturer directly through their official website or customer service channels.