

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bontempi](#) /

› [Bontempi PlayPodsPro LED Wireless Headphones Model 48 3010 User Manual](#)

## Bontempi 48 3010

# Bontempi PlayPodsPro LED Wireless Headphones User Manual

Model: 48 3010

## INTRODUCTION

Thank you for choosing the Bontempi PlayPodsPro LED Wireless Headphones, Model 48 3010. These headphones are designed to provide an immersive listening experience with advanced features such as Active Noise Cancellation (ANC/ENC) and Bluetooth connectivity. This manual will guide you through the setup, operation, and maintenance of your new headphones to ensure optimal performance.



Image: Bontempi PlayPodsPro LED Wireless Headphones, unfolded and ready for use, with the product packaging visible in the background. This image illustrates the product's design and presentation.

## PACKAGE CONTENTS

Please check the package for the following items:

- Bontempi PlayPodsPro LED Wireless Headphones (Model 48 3010)
- USB Charging Cable
- User Manual (this document)



Image: The retail packaging for the Bontempi PlayPodsPro LED Wireless Headphones. The box highlights key features such as ANC, Bluetooth compatibility, folding design, and USB charging.

## SETUP

### 1. Charging the Headphones

1. Locate the USB charging port on the headphones.
2. Connect the included USB charging cable to the headphones.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer USB port, USB wall adapter).
4. The LED indicator on the headphones will illuminate during charging and change color or turn off when fully charged.
5. Allow approximately 2-3 hours for a full charge before first use.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (often marked with a  $\odot$  symbol) for approximately 3-5 seconds until the LED indicator lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button for approximately 3-5 seconds until the LED indicator turns off and you hear an audible prompt.

### 3. Bluetooth Pairing

To connect your headphones to a Bluetooth-enabled device (smartphone, tablet, MP3 player):

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes rapidly (usually blue and red), indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "Bontempi 48 3010" or "PlayPodsPro LED" from the list of found devices.
5. Once connected, the LED indicator on the headphones will typically show a solid blue light or flash slowly, and you will hear a confirmation tone.
6. If prompted for a password, enter "0000".



Image: The Bontempi PlayPodsPro LED Wireless Headphones in a folded position, clearly displaying the control buttons on the earcup, including power, volume, track control, and LED functions. This view is useful for identifying charging ports and control layout.

## OPERATING THE HEADPHONES

### Controls Overview

The main controls are located on the earcup. Refer to the image in the Setup section for visual identification.

- **Power Button ( ):** Press and hold to power on/off. Short press for Play/Pause during music playback or to Answer/End calls.

- **Volume Up (VOL+ / ►►|):** Short press to increase volume. Long press to skip to the next track.
- **Volume Down (VOL- / |◀◀):** Short press to decrease volume. Long press to skip to the previous track.
- **LED Button:** Activates or changes the LED light patterns.

## Active Noise Cancellation (ANC)

The PlayPodsPro LED headphones feature Active Noise Cancellation (ANC) to reduce ambient noise.

- **To Activate ANC:** Locate the dedicated ANC switch or button (if present, otherwise it might be integrated with the power button or another control). Press or slide it to activate ANC.
- **To Deactivate ANC:** Press or slide the ANC control again.
- A specific LED indicator or audible prompt may confirm ANC status.

## Music Playback

- **Play/Pause:** Short press the Power button.
- **Next Track:** Long press the Volume Up (VOL+) button.
- **Previous Track:** Long press the Volume Down (VOL-) button.

## Call Management

- **Answer/End Call:** Short press the Power button when a call comes in or during a call.
- **Reject Call:** Press and hold the Power button for approximately 2 seconds when a call comes in.

## LED Lights Functionality

The headphones feature integrated LED lights. Use the dedicated LED button to cycle through different light modes or to turn the lights on/off.

## MAINTENANCE

---

### Cleaning

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays.
- Avoid getting moisture into any openings.

### Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use for extended periods, store them in their folded position (if applicable) to save space and protect the earcups.

### Battery Care

- To preserve battery life, fully charge the headphones at least once every three months if not used regularly.
- Avoid completely draining the battery frequently.

## TROUBLESHOOTING

---

Problem	Solution

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect them to a power source using the USB cable.
Cannot pair with a Bluetooth device.	<ul style="list-style-type: none"> <li>Ensure headphones are in pairing mode (flashing LED).</li> <li>Make sure Bluetooth is enabled on your device.</li> <li>Move headphones closer to the device.</li> <li>Forget/remove the headphones from your device's Bluetooth list and try pairing again.</li> <li>Restart both the headphones and your device.</li> </ul>
No sound or low volume.	<ul style="list-style-type: none"> <li>Increase the volume on both the headphones and your connected device.</li> <li>Ensure the headphones are properly connected via Bluetooth.</li> <li>Try playing different audio sources.</li> </ul>
Active Noise Cancellation (ANC) is not working.	Ensure the ANC feature is activated. Check for any specific ANC indicator lights.

## SPECIFICATIONS

<b>Model Name</b>	PlayPodsPro LED
<b>Item Model Number</b>	48 3010
<b>Brand</b>	Bontempi
<b>Color</b>	Black
<b>Form Factor</b>	True Wireless
<b>Connectivity</b>	Bluetooth
<b>Noise Control</b>	Active Noise Cancellation
<b>Special Feature</b>	Lights (LED)
<b>Material</b>	Plastic
<b>Item Weight</b>	12.2 ounces (347 Grams)
<b>Product Dimensions</b>	9.21 x 7.05 x 3.31 inches
<b>Manufacturer</b>	Bontempi

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Bontempi customer service directly. Details for contacting support can typically be found on the official Bontempi website or on the product packaging.