

[Manuals.plus](#) /

› [EPOMAKER](#) /

› EPOMAKER Galaxy70 Wireless Gaming Keyboard User Manual

EPOMAKER Galaxy70

EPOMAKER Galaxy70 Wireless Gaming Keyboard User Manual

Model: Galaxy70 | Brand: EPOMAKER

INTRODUCTION

The EPOMAKER Galaxy70 is a high-performance 75% mechanical gaming keyboard crafted from CNC aluminum. It offers versatile connectivity options including Bluetooth 5.0, 2.4GHz wireless, and USB-C wired modes. Designed for both gaming and professional use, it features hot-swappable switches, customizable RGB backlighting, and a gasket-mounted structure for an enhanced typing experience.



Image: Top-down view of the black EPOMAKER Galaxy70 keyboard, showcasing its 75% layout and keycaps.

Galaxy70

Wireless Gaming Keyboard



75% Layout



3 Modes



Hot Swappable



RGB Backlit



Gasket Mount



South-Facing LEDs



Programmable Software



Full Aluminum Alloy Shell



4000mAh Battery



PBT Keycap

82+1
KEYS

Image: An overview graphic highlighting key features of the Galaxy70, including 75% layout, tri-mode connectivity, hot-swappable switches, RGB backlight, gasket mount, full aluminum alloy shell, and 4000mAh battery.

Your browser does not support the video tag.

Video: A brief overview of the EPOMAKER Galaxy70 75% Compact Gaming Keyboard, showcasing its design and compact form factor.

WHAT'S IN THE BOX

- EPOMAKER Galaxy70 Wireless Gaming Keyboard
- Keycap Puller
- USB Cable (Type-C)
- User Manual

PACKING LIST



Image: Contents of the EPOMAKER Galaxy70 package, including the keyboard, USB cable, keycap puller, and user manual.

SETUP

Initial Charging

Before first use, it is recommended to fully charge the keyboard. Connect the provided USB-C cable to the keyboard's Type-C port and the other end to a USB power source (e.g., computer USB port, wall adapter). The indicator light will show charging status.

Connectivity Modes

The Galaxy70 supports three connection modes: USB-C Wired, 2.4GHz Wireless, and Bluetooth 5.0.

TRI-MODE CONNECTIVITY

Support for a variety of devices and systems

4000
mAh




Bluetooth 5.0
(FN+Q/W/E)



2.4GHz Wireless
(FN +R)



 Type-C Wired



PC



LAPTOP



TABLET



PHONE

Image: Diagram illustrating the three connectivity modes: Bluetooth 5.0, 2.4GHz Wireless, and USB-C Wired, compatible with PC, laptop, tablet, and phone.



Image: Visual representation of the keyboard connecting to various devices (PC, laptop, phone, tablet) via USB-C Wired, 2.4GHz Wireless, and Bluetooth modes, also showing Windows (FN+A) and Mac (FN+S) modes.

USB-C Wired Connection

1. Ensure the power switch on the keyboard is in the "OFF" position.
2. Connect the USB-C cable to the keyboard's port and the other end to your computer.
3. The keyboard will automatically be recognized and ready for use.

2.4GHz Wireless Connection

1. Toggle the power switch on the keyboard to "ON".
2. Press and hold **FN + R** for 3-5 seconds. The lightbar will blink fast in yellow, indicating pairing mode.
3. Locate the 2.4G USB dongle hidden under the magnetic badge on the keyboard (near the arrow keys).
4. Insert the 2.4G dongle into an available USB port on your device.
5. The indicator light will stop flashing once connected.



Image: Step-by-step guide for 2.4GHz wireless connection, showing power switch, FN+R key combination, dongle insertion, and indicator light status.

Bluetooth Connection

The keyboard supports up to 3 Bluetooth devices.

- 1. Toggle the power switch on the keyboard to "ON".
- 2. Press and hold **FN + Q**, **FN + W**, or **FN + E** for 3-5 seconds. The lightbar will blink fast in blue, red, or green respectively, indicating pairing mode.
- 3. On your device, search for "Galaxy70-1", "Galaxy70-2", or "Galaxy70-3" in your Bluetooth settings and connect.
- 4. The indicator light will stop flashing once connected.



Image: Step-by-step guide for Bluetooth connection, showing power switch, FN+Q/W/E key combinations, device pairing, and indicator light status.

OPERATING INSTRUCTIONS

Function Key Combinations

Windows Mode (FN+A)

Key Combination	Function
FN + F1	Screen Brightness -
FN + F2	Screen Brightness +
FN + F3	Task View
FN + F4	Launchpad
FN + F5	Play/Pause
FN + F6	Previous Track
FN + F7	Next Track
FN + F8	Mute
FN + F9	Volume -
FN + F10	Volume +

Key Combination	Function
FN + F11	My Computer
FN + F12	Calculator
FN + Print	Power
FN + Spacebar	Battery Check
FN + A	Switch to Windows Mode
FN + S	Switch to Mac Mode

Mac OS Mode (FN+S)

Key Combination	Function
FN + F1	Screen Brightness -
FN + F2	Screen Brightness +
FN + F3	Task View
FN + F4	Launchpad
FN + F5	Play/Pause
FN + F6	Previous Track
FN + F7	Next Track
FN + F8	Mute
FN + F9	Volume -
FN + F10	Volume +
FN + F11	My Computer
FN + F12	Calculator
FN + Print	Power
FN + Spacebar	Battery Check
FN + A	Switch to Windows Mode
FN + S	Switch to Mac Mode

RGB Backlight Control

- **FN + Enter:** Toggle Backlight Effect
- **FN + \|:** Toggle Backlight Color
- **FN + T:** Turn On/Off Backlight
- **FN + Up Arrow:** Increase Backlight Brightness
- **FN + Down Arrow:** Decrease Backlight Brightness
- **FN + Right Arrow:** Increase Backlight Speed

- **FN + Left Arrow:** Decrease Backlight Speed

16 MILLION **RGB** BACKLIGHT



TOGGLE BACKLIGHT EFFECT



TOGGLE BACKLIGHT COLOR



TURN ON/OFF BACKLIGHT

Image: Keyboard showing various RGB backlight effects and key combinations for control (FN+Enter for effects, FN+\ for colors, FN+T for on/off).

Your browser does not support the video tag.

Video: Demonstration of how to adjust the RGB backlight effects and colors on the EPOMAKER Galaxy70 keyboard using FN key combinations.

Your browser does not support the video tag.

Video: A sound test of the EPOMAKER Galaxy70 keyboard, highlighting the typing acoustics.

Volume Knob

The metal knob located on the top right corner of the keyboard allows for easy volume control. Rotate it clockwise to increase volume, counter-clockwise to decrease volume. Press the knob to mute/unmute audio.



Image: Close-up of the metal volume knob on the top right of the keyboard.

Battery Check

To check the battery level, press **FN + Spacebar**. The indicator light will show the remaining battery percentage.



Image: Diagram showing how to check the keyboard's battery level using the FN + Spacebar combination.

MAINTENANCE

Cleaning

To maintain the keyboard's appearance and functionality, regularly clean it using a soft, dry cloth. For deeper cleaning, you may remove keycaps using the provided keycap puller and use compressed air to clear debris from between switches.


Hot-Swappable Switches

The Galaxy70 features a hot-swappable PCB, allowing you to change mechanical switches without soldering. This is ideal for customizing your typing feel or replacing faulty switches.

1. Use the included switch puller to carefully remove the desired switch. Grip the switch firmly and pull straight up.
2. Align the pins of the new 3-pin or 5-pin mechanical switch with the sockets on the PCB.
3. Gently press the new switch into place until it clicks. Ensure it is seated properly and functions correctly.

HOT SWAPPABLE PCB


Compatible with 3/5 pins mechanical switches

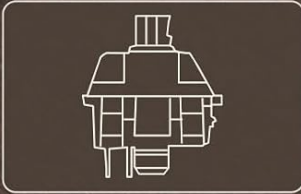

Pre-lubed
Linear Switch



Hot-swap Socket

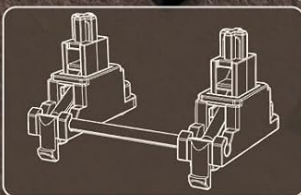

Pre-lubed Plate
Mounted Stabilizer



South-facing LEDs



Image: Diagram illustrating the hot-swappable PCB feature, showing how to remove and insert switches and keycaps.



Image: A hand demonstrating the hot-swappable feature by removing a keycap and switch from the keyboard.

TROUBLESHOOTING

• Keyboard not responding:

- Ensure the keyboard is charged.
- Check the power switch is "ON" for wireless modes.
- Verify the correct connection mode (wired, 2.4GHz, Bluetooth) is selected and properly paired.
- Try connecting via USB-C cable to rule out wireless issues.

• Keys not registering or double-typing:

- This might indicate a faulty switch. Use the hot-swappable feature to replace the affected switch.
- Ensure the switch is fully seated in its socket.

• Bluetooth connection issues:

- Ensure the keyboard is in Bluetooth pairing mode (FN + Q/W/E, blinking light).
- Forget the device on your computer/device and re-pair.
- Ensure your device's Bluetooth is enabled and discoverable.
- Move the keyboard closer to your device to reduce interference.

• RGB backlight not working/customizing:

- Ensure the backlight is turned on (FN + T).

- Check brightness levels (FN + Up/Down Arrow).
- Cycle through effects and colors using FN + Enter and FN + \.

SPECIFICATIONS

Feature	Detail
Model	Galaxy70
Layout	75% Compact (82 Keys + 1 Knob)
Case Material	CNC Aluminum Alloy
Connectivity	Bluetooth 5.0, 2.4GHz Wireless, USB-C Wired
Battery Capacity	4000mAh
Switches	Hot-swappable (compatible with 3/5-pin mechanical switches)
Backlight	South-facing RGB
Anti-Ghosting	N-key Rollover
Dimensions	13.8 x 5.55 x 1.28 inches
Item Weight	4.66 pounds
Compatible OS	Windows, macOS, Android, iOS

WARRANTY AND SUPPORT

EPOMAKER products are covered by a limited warranty. For detailed warranty information, technical support, or service inquiries, please refer to the official EPOMAKER website or contact their customer support directly. Keep your purchase receipt for warranty claims.

You can also refer to the official PDF user manual for more detailed information [EPOMAKER Galaxy70 User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question