

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER Purifry 2QT Air Fryer Instruction Manual](#)

BLACK+DECKER AFBD22

BLACK+DECKER Purifry 2QT Air Fryer Instruction Manual

Model: AFBD22

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER Purifry 2QT Air Fryer. This appliance is designed to provide a versatile cooking experience, allowing you to air fry, roast, bake, dehydrate, and keep food warm with less oil. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The BLACK+DECKER Purifry 2QT Air Fryer, a compact countertop appliance.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

The BLACK+DECKER Purifry 2QT Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element and control panel.
- **Digital Touchscreen:** LED display for temperature, time, and preset selection.
- **Air Fry Basket:** Removable, non-stick basket for holding food.
- **Crisping Tray/Rack:** Sits inside the basket to allow air circulation around food.
- **Handle:** For safely pulling out and inserting the air fry basket.

Hot Crispy Results With Little Or No Oil



Image: The removable non-stick air fry basket and crisping tray.

4. SETUP

Before first use, follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wash the air fry basket and crisping tray in warm, soapy water. Rinse and dry thoroughly.
3. Wipe the exterior of the appliance with a damp cloth.
4. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
5. Insert the crisping tray into the air fry basket, then slide the basket into the main unit until it clicks securely into place.
6. Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The air fryer features a digital touchscreen for easy control.

Power On/Off

- Press the power button () to turn the appliance on or off.

Adjusting Temperature and Time

- Once powered on, the default temperature and time will display.
- Use the temperature buttons (+/- with thermometer icon) to adjust the cooking temperature (100°F to 400°F).
- Use the time buttons (+/- with clock icon) to adjust the cooking time.

Using One-Touch Presets

The air fryer includes 9 one-touch presets for common foods:

- French Fries
- Steak
- Fish
- Vegetables
- Snacks
- Chicken
- Bake
- Dehydrate
- Reheat

To use a preset, simply press the corresponding icon on the digital touchscreen. The appliance will automatically set the optimal temperature and time for that food type.

Shake Reminder and Auto Shut-Off

- The **Shake Reminder** feature will alert you halfway through certain cooking cycles to shake the basket for even cooking.
- The **Automatic Shut-Off** feature turns off the air fryer once the timer is complete, preventing overcooking and ensuring safety.



Image: Close-up of the easy-to-use digital controls on the air fryer.



Image: The display indicating automatic shut-off and shake reminder features.

6. COOKING GUIDE

The BLACK+DECKER Purifry 2QT Air Fryer utilizes Air Crisp Technology, circulating superheated air up to 400°F with two powerful convection fans for crispy results using little to no oil. This can reduce fat by up to 80% compared to traditional deep frying.

Capacity

The 2-quart capacity is suitable for cooking up to 2 servings of French fries or other small meals.



**Automatically Shuts Off
When The Timer Is Done**

+ Shake Reminder

Image: The 2-quart capacity of the air fryer, ideal for small portions.

Versatile Cooking Functions

Beyond air frying, this appliance can:

- **Roast:** Ideal for vegetables and small cuts of meat.
- **Bake:** Suitable for small baked goods or casseroles.
- **Dehydrate:** For making dried fruits or jerky.
- **Keep Food Warm:** Maintain food temperature after cooking.

9 ONE-TOUCH PRESETS:

French Fries, Steak, Fish, Vegetables,
Snacks, Chicken, Bake, Dehydrate, Reheat



Image: Visual representation of the Air Fry, Bake, Reheat, and Dehydrate functions.

7. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your air fryer.

Cleaning the Air Fry Basket and Crisping Tray

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The non-stick air fry basket and crisping tray are dishwasher safe for convenient cleaning.
- For hand washing, use warm, soapy water and a non-abrasive sponge. Avoid metal scouring pads or harsh detergents that can damage the non-stick coating.

Cleaning the Exterior

- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.

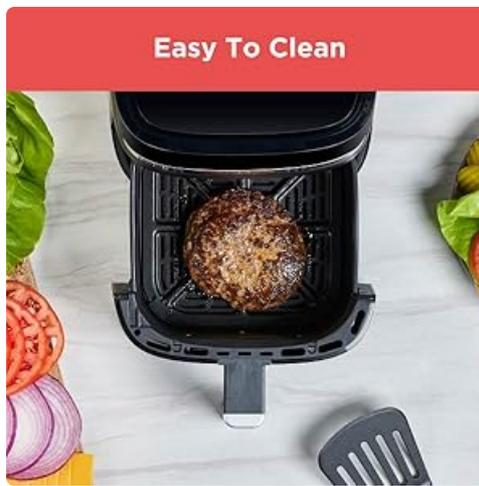


Image: The non-stick basket is designed for easy cleaning.

8. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; basket not fully inserted.	Ensure power cord is securely plugged into an outlet. Push the air fry basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overcrowded; food not shaken.	Cook food in smaller batches. Utilize the shake reminder or manually shake the basket halfway through cooking.
White smoke coming from appliance.	Grease residue from previous use; fatty foods.	Clean the basket and crisping tray thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the basket to prevent smoke.

9. SPECIFICATIONS

- **Model Name:** AFBD22
- **Capacity:** 2 Quarts
- **Output Wattage:** 1000 Watts
- **Product Dimensions:** 13.39"D x 13.07"W x 11.93"H
- **Color:** Black
- **Material:** Plastic, Stainless Steel
- **Control Method:** Touch
- **Min Temperature Setting:** 100°F
- **Max Temperature Setting:** 400°F
- **Special Features:** Automatic Shut-Off, Programmable, Temperature Control, Timer, Shake Reminder
- **Nonstick Coating:** Yes
- **Dishwasher Safe Parts:** Yes (Basket and Crisping Tray)

10. PRODUCT OVERVIEW VIDEO

For a visual guide on the BLACK+DECKER Purifry 2QT Air Fryer, please watch the official product overview video below.

Your browser does not support the video tag.

Video: Official product overview demonstrating the features and use of the BLACK+DECKER Purifry 2QT Air Fryer.

11. WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your proof of purchase for any warranty claims.