

manuals.plus /

> [Movado](#) /

> [Movado 1881 Men's Automatic Swiss Watch Model 0607622 Instruction Manual](#)

Movado 0607622

Movado 1881 Men's Automatic Swiss Watch

Model: 0607622

1. INTRODUCTION AND OVERVIEW

This manual provides essential instructions for the proper use, care, and maintenance of your Movado 1881 Men's Automatic Swiss Watch, Model 0607622. This timepiece features a self-winding mechanical movement, reflecting Movado's commitment to Swiss craftsmanship and design.



Image 1.1: Front view of the Movado 1881 Automatic Watch, showcasing the blue textured dial and stainless steel bracelet.



Image 1.2: Side view of the Movado 1881 Automatic Watch, highlighting the crown and stainless steel bracelet clasp.



Image 1.3: Rear view of the Movado 1881 Automatic Watch, featuring the transparent caseback that reveals the intricate

2. SETUP AND INITIAL WINDING

Your Movado automatic watch is powered by the natural motion of your wrist. If the watch has stopped due to lack of wear, follow these steps to restart and set it:

1. **Locate the Crown:** The crown is the small knob positioned on the right side of the watch case.
2. **Initial Winding:** Gently turn the crown clockwise 20-30 times. This provides the initial power reserve to start the movement. The second hand should begin to sweep.
3. **Set the Time:**
 - Pull the crown out to position 2 (the outermost position).
 - Turn the crown to adjust the hour and minute hands to the correct time.
 - Push the crown back into position 1 (the normal operating position) to engage the movement.
4. **Set the Date:**
 - Pull the crown out to position 1 (the first click).
 - Turn the crown counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
 - Push the crown back into the fully closed position.

MOVADO

Automatic

Automatic watches, also known as mechanical or self-winding, were first developed in Switzerland more than two centuries ago. Today, they remain a time-honored masterwork of watchmaking: intricate, enduring, and always in motion.

All Movado automatics are built with Swiss movements, assembled and encased in Switzerland, and held to the highest standards of Swiss precision and design. A modern expression of craftsmanship—engineered to move with you.

Care and Winding

Automatic watches don't use batteries. They are powered by the natural movement of your wrist. Regular, consistent wear should be enough to keep your Movado sweeping smoothly. However, if you haven't worn your watch for 38 hours or more and it has stopped, don't worry—that's completely normal and expected. It just needs a quick winding to restart the movement.

To restart your watch:

1. Locate the crown (the small knob on the right side of the case).
2. Gently turn the crown clockwise 20–30 times, until the second hand begins to sweep.
3. Set the time:
 - Pull the crown out to position 2
 - Turn to set the correct time
 - Push the crown back in to position 1



Image 2.1: Illustration demonstrating crown positions for winding and setting the watch. Position 1 is for date adjustment, Position 2 is for time adjustment.

3. OPERATING YOUR AUTOMATIC WATCH

Automatic watches do not require batteries. They are powered by the kinetic energy generated by the wearer's wrist movements. Consistent wear ensures the watch remains wound and accurate.

Power Reserve

When fully wound, your Movado automatic watch has a power reserve of approximately 38 hours. If the watch is not worn for an extended period (e.g., more than 38 hours), it will stop. To restart, follow the initial winding steps described in Section 2.

4. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Movado timepiece, regular care and periodic maintenance are essential.

General Care

- Avoid exposing your watch to extreme temperatures, sudden temperature changes, or strong magnetic fields.
- Do not expose the watch to harsh chemicals, solvents, or detergents, as these can damage the case, crystal, or strap.
- Clean the watch regularly with a soft, dry cloth. For the stainless steel bracelet, a slightly damp cloth can be used, followed by drying.
- Ensure the crown is always pushed in completely to maintain water resistance.

Service Intervals

Like any precision mechanical instrument, your Movado watch requires professional servicing. A maintenance interval of 3 to 5 years is recommended to ensure optimal performance and accuracy. This service should only be performed by authorized Movado service centers. **Never attempt to open the watch yourself.**

5. WATER RESISTANCE GUIDELINES

Your Movado 1881 Automatic Watch is water resistant up to 3 ATM (30 meters / 100 feet). This rating indicates that the watch is suitable for everyday use and can withstand splashes or brief immersion in water.

Important Considerations:

- **Not suitable for:** Swimming, showering, diving, or any water sports. Prolonged exposure to water or high-pressure water jets can compromise the watch's water resistance.
- Always ensure the crown is fully pushed in before any contact with water.
- Water resistance is not a permanent condition and may decrease over time due to wear and tear, aging gaskets, or accidental impacts. Regular checks by an authorized service center are recommended.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	0607622
Movement	Swiss Automatic (Self-Winding)
Case Material	Stainless Steel
Case Diameter	39mm
Dial Color	Blue Textured
Bracelet Material	Stainless Steel
Water Resistance	3 ATM (30 meters / 100 feet)
Crystal	Sapphire Crystal

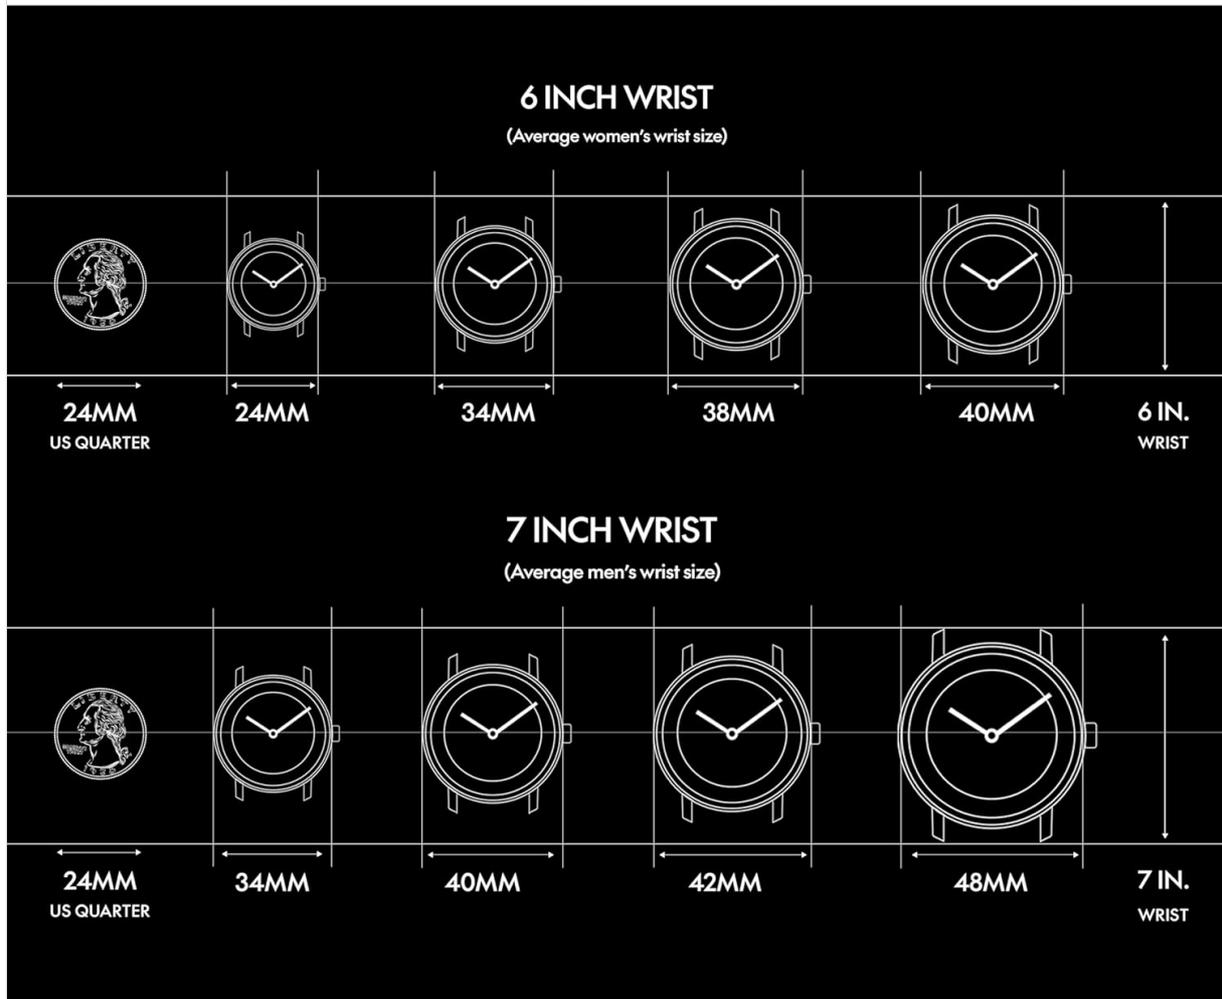


Image 6.1: Movado Watch Sizing Guide, illustrating various watch sizes on 6-inch and 7-inch wrists for reference.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your automatic watch.

Watch Has Stopped Running

- **Cause:** Insufficient power reserve due to lack of movement.
- **Solution:** Manually wind the watch by turning the crown clockwise 20-30 times (with the crown in the fully pushed-in position). Wear the watch regularly to maintain its power reserve.

Time or Date is Incorrect

- **Cause:** Watch stopped, or time/date was not set correctly.
- **Solution:** Refer to Section 2, 'Setup and Initial Winding,' for detailed instructions on setting the time and date.

If you experience persistent issues not covered here, please contact an authorized Movado service center.

8. WARRANTY AND SUPPORT

Your Movado watch is covered by a manufacturer's warranty against defects in materials and workmanship.

Specific warranty terms and conditions are provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

Customer Support

For warranty service, repairs, or any technical inquiries, please contact an authorized Movado service center or visit the official Movado website for support information.