

Samsung WA22A3350GW

Samsung WA22A3350GW 22 kg Top Load Washing Machine User Manual

Model: WA22A3350GW

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Samsung WA22A3350GW 22 kg Top Load Washing Machine. Please read these instructions thoroughly before using the appliance and retain them for future reference.



Figure 1: Front view of the Samsung WA22A3350GW 22 kg Top Load Washing Machine. This image displays the appliance's overall design, including the top-loading lid and control panel.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before attempting any service.

3. PRODUCT FEATURES

The Samsung WA22A3350GW washing machine is designed for efficient and convenient laundry care. Key features include:

- **22 kg Capacity:** Large capacity allows for washing more items in a single load, including bulky items like king-size comforters.
- **Aqua Saving:** This feature helps conserve water, potentially saving up to 25% of water per wash cycle.
- **Self Clean:** An automatic cycle designed to clean the washing machine tub, preventing mold and mildew buildup.
- **Diamond Drum:** The unique "soft curl" design of the diamond drum provides effective washing while being gentle on clothes, preventing fabric damage.
- **Top Load Access:** Convenient top-loading design for easy loading and unloading of laundry.



Figure 2: Top view of the washing machine with the lid open, revealing the Diamond Drum. This image highlights the large capacity and the drum's design.

4. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. It is recommended to have this appliance installed by a qualified technician.

4.1 Unpacking

1. Remove all packaging materials, including the shipping bolts or straps that secure the drum during transit. Failure to remove these can cause severe vibration and damage.
2. Inspect the appliance for any shipping damage. Contact your retailer immediately if any damage is found.

4.2 Location Requirements

1. Place the washing machine on a solid, level floor.
2. Ensure there is adequate space around the appliance for ventilation and maintenance. Refer to the specifications for dimensions.
3. Avoid direct sunlight or areas where temperatures can drop below freezing.

4.3 Leveling the Appliance

1. Use a level to check if the appliance is perfectly balanced.
2. Adjust the leveling feet at the bottom of the washing machine until it is stable and level.

4.4 Water Supply Connection

1. Connect the hot and cold water inlet hoses to the corresponding valves on the back of the washing machine and to your household water supply.
2. Ensure all connections are tight to prevent leaks.
3. Turn on the water supply and check for leaks.

4.5 Drain Hose Installation

1. Securely attach the drain hose to the drain outlet on the back of the washing machine.
2. Route the drain hose into a standpipe or laundry tub, ensuring it is properly secured to prevent dislodging during operation. The end of the drain hose should be positioned between 60 cm and 90 cm (24 to 36 inches) from the floor.

4.6 Power Connection

1. Plug the power cord into a grounded electrical outlet. Do not use extension cords.
2. Ensure the electrical supply meets the requirements specified on the appliance's rating label.



Figure 3: Side view of the washing machine, illustrating the rear panel where water inlet and drain hoses connect.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your washing machine.

5.1 Control Panel Overview



Figure 4: Angled view of the washing machine, showing the control panel with its rotary dial and buttons for cycle selection and settings.

The control panel features a central rotary dial for selecting wash cycles and various buttons for adjusting

settings such as water temperature, spin speed, and special functions.

5.2 Loading Laundry

1. Sort laundry by fabric type, color, and soil level.
2. Open the top lid and load items loosely into the drum. Do not overload the machine; ensure there is enough space for clothes to move freely.
3. Close the lid securely.

5.3 Adding Detergent and Additives

1. Add the recommended amount of detergent to the detergent dispenser.
2. If using fabric softener or bleach, add them to their respective compartments in the dispenser. Do not overfill.

5.4 Selecting a Wash Cycle

1. Turn the rotary dial to select the desired wash cycle (e.g., Normal, Heavy Duty, Delicates, Aqua Saving, Self Clean).
2. Adjust additional settings such as water temperature, rinse cycles, and spin speed using the corresponding buttons.

5.5 Starting the Wash

1. Press the **Start/Pause** button to begin the wash cycle.
2. The machine will automatically fill with water and proceed through the selected cycle.
3. To pause a cycle, press the **Start/Pause** button again. Press it once more to resume.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Exterior

1. Wipe the exterior surfaces with a soft, damp cloth.
2. Do not use abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.

6.2 Cleaning the Drum (Self Clean Cycle)

1. Regularly use the **Self Clean** cycle to remove detergent residue and prevent mold and mildew buildup in the drum.
2. Run the **Self Clean** cycle without any laundry or detergent in the machine.

6.3 Cleaning the Detergent Dispenser

1. Remove the detergent dispenser drawer and rinse it under running water to clear any residue.
2. Clean the dispenser housing with a small brush if necessary.
3. Reinsert the dispenser drawer.

6.4 Water Inlet Filters

1. Periodically check the mesh filters inside the water inlet hoses for blockages.

- 2. Turn off the water supply and disconnect the hoses.
- 3. Remove the filters and clean them under running water with a brush.
- 4. Reinstall the filters and reconnect the hoses, ensuring no leaks.

7. TROUBLESHOOTING

Before contacting service, review this section for common issues and their solutions.

Problem	Possible Cause	Solution
Washing machine does not start.	Power cord unplugged; lid not closed; circuit breaker tripped.	Ensure power cord is securely plugged in; close the lid completely; check and reset circuit breaker.
No water filling or slow filling.	Water supply turned off; inlet hoses kinked; inlet filters clogged.	Turn on water supply; straighten hoses; clean inlet filters (refer to Section 6.4).
Excessive vibration during spin cycle.	Appliance not level; load unbalanced; shipping bolts not removed.	Level the appliance (refer to Section 4.3); redistribute laundry evenly; ensure shipping bolts are removed.
Water leaks.	Hose connections loose; drain hose improperly installed.	Tighten all hose connections; ensure drain hose is securely placed and not kinked.

8. SPECIFICATIONS


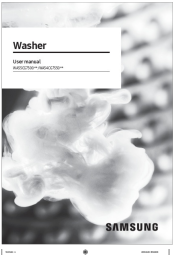



Detailed technical specifications for the Samsung WA22A3350GW washing machine.

Feature	Detail
Brand	Samsung
Model Number	WA22A3350GW
Capacity	22 Kilograms
Dimensions (D x W x H)	76 cm x 79 cm x 116 cm (approximately 29.9 x 31.1 x 45.7 inches)
Product Weight	57 Kilograms (approximately 125.7 lbs)
Access Location	Top Load
Special Features	Aqua Saving, Self Clean, High Efficiency
Controls Type	Perilla (Knob)
Color	White

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Samsung website. For technical support or service requests, please contact Samsung customer service. You can find more information and support resources on the [Samsung Brand Store](#).

Related Documents - WA22A3350GW

	<p>Installing and Maintaining Your Samsung Washing Machine</p> <p>A comprehensive guide to installing, operating, and maintaining your Samsung washing machine, covering packing material removal, water and drain hose connections, leveling, filter cleaning, and special cycles like Eco Tub Clean.</p>
	<p>Samsung WA55CG7500**/WA54CG7550** Washer User Manual</p> <p>User manual for Samsung WA55CG7500** and WA54CG7550** top-loading washing machines. This guide provides essential information on installation, safe operation, maintenance, troubleshooting, and features for your Samsung washer.</p>
	<p>Samsung 3400 Series Laundry Washer and Dryer Product Guide</p> <p>Comprehensive product guide for Samsung 3400 Series WA45T3400AW washer and DVE45T3400W/DVG45T3400W dryers, detailing features, specifications, and benefits.</p>
	<p>Samsung WA45T3400AW 4.5 cu. ft. Top Load Washer with Active WaterJet Product Specifications</p> <p>Explore the features, specifications, dimensions, and warranty information for the Samsung WA45T3400AW, a 4.5 cu. ft. capacity top-load washing machine. This document details its Active WaterJet, Vibration Reduction Technology+, installation requirements, and more.</p>
	<p>Samsung WA55CG7500AE Top Load Washer Limited Warranty</p> <p>This document outlines the limited warranty provided by Samsung Electronics America, Inc. for the WA55CG7500AE top load washer, covering manufacturing defects in materials and workmanship for specified periods.</p>

