

[Manuals.plus](#) /

› [uehba](#) /

› Instruction Manual for Replacement Remote Control

uehba RG10B(B)/BGEF

Instruction Manual for Replacement Remote Control

Brand: uehba | **Model:** RG10B(B)/BGEF

INTRODUCTION

This manual provides detailed instructions for the use and maintenance of your new uehba Replacement Remote Control, model RG10B(B)/BGEF. This remote is designed to be compatible with various Midea Air Conditioner models, ensuring seamless operation of your unit.

The remote control is pre-programmed and requires no additional setup or programming. Simply insert the batteries, and it is ready for immediate use.

PRODUCT OVERVIEW



Figure 1: Front view of the uehba Replacement Remote Control. It features a rectangular LCD screen at the top, followed by various control buttons arranged logically below it.

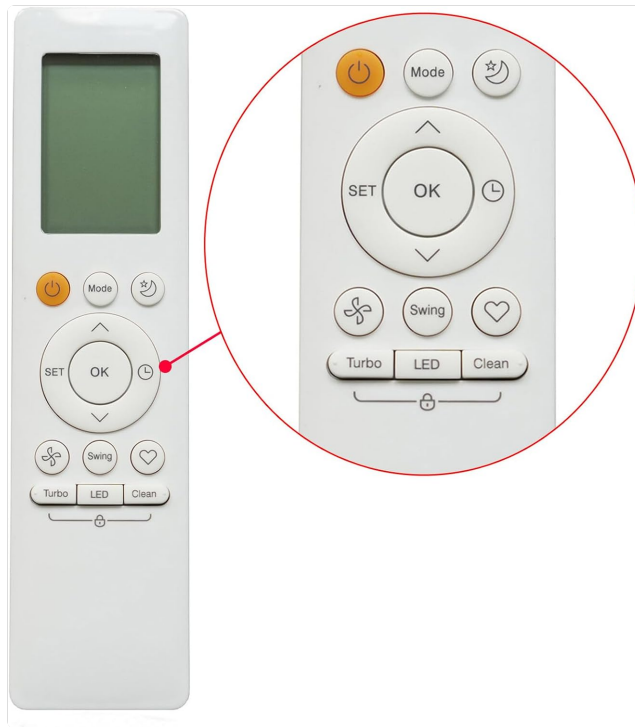


Figure 2: Detailed view of the remote control's buttons. Key buttons include Power, Mode, Sleep, SET, OK, directional arrows, Fan, Swing, Heart (Favorite), Turbo, LED, and Clean. A child lock symbol is also visible at the bottom.



Figure 3: Rear view of the remote control, displaying the product label with model type RG10B(B)/BGEF, rated voltage 3VDC, and a note to remove batteries when not in use for a long time.

SETUP AND BATTERY INSTALLATION

1. **Prepare Batteries:** This remote control requires two (2) AAA batteries. Ensure you have fresh batteries available.
2. **Open Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide the cover downwards to open it.



Figure 4: The remote control with its battery compartment open, showing the slots for two AAA batteries.

3. **Insert Batteries:** Insert the two AAA batteries into the compartment, ensuring the positive (+) and negative (-) ends align correctly with the markings inside the compartment.
4. **Close Battery Compartment:** Slide the battery compartment cover back into place until it clicks securely.
5. **Initial Use:** The remote control is pre-programmed and ready to use immediately after battery installation. No additional programming is required.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your remote control.

Button	Function
Power (Orange Button)	Turns the air conditioner ON or OFF.

Button	Function
Mode	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
Sleep (Moon icon)	Activates or deactivates the Sleep mode for comfortable night operation.
SET	Used for entering settings menus or confirming selections.
OK	Confirms selections within menus.
Up/Down Arrows	Adjusts temperature settings, fan speed, or navigates menu options.
Left/Right Arrows (Clock icon)	Likely used for timer settings or other time-related functions.
Fan (Fan icon)	Adjusts the fan speed.
Swing	Controls the vertical or horizontal swing of the air conditioner's louvers.
Heart (Favorite)	May activate a pre-set favorite mode or setting.
Turbo	Activates rapid cooling or heating for quick temperature changes.
LED	Controls the display light on the air conditioner unit.
Clean	Initiates a self-cleaning function on compatible air conditioner models.
Child Lock (Padlock icon)	Locks the remote control buttons to prevent accidental changes. Typically activated by pressing and holding.

Note: The temperature display on this remote control is in Celsius ONLY.

MAINTENANCE

- **Battery Replacement:** When the remote control's display dims or its response becomes sluggish, replace the batteries with two new AAA batteries. Follow the "Setup and Battery Installation" steps.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device. Store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control not responding.	- Batteries are dead or inserted incorrectly. Replace batteries, ensuring correct polarity. - Obstruction between remote and air conditioner. Ensure a clear line of sight to the air conditioner's receiver. - Remote control is too far from the air conditioner. Move closer to the unit.
Air conditioner not responding to specific commands.	- The air conditioner model may not support that specific function (e.g., Clean, Favorite). Refer to your air conditioner's manual. - Ensure the remote is pointed directly at the air conditioner.
Remote control display is dim or blank.	Batteries are low. Replace with new AAA batteries.
Remote control requires programming.	This remote control is pre-programmed and does not require any additional setup. If it's not working, refer to other troubleshooting steps.

SPECIFICATIONS

Feature	Detail
Model Number	RG10B(B)/BGEF
Compatible Models	RG10B(D)/BGEF, RG10B(D1)/BGEFU1, RG10B1(D)/BGEF, RG10B2(D)/BGCEF, RG10B10(D)/BGEF, RG10A4(D)/BGEF, RG10A4(D1)/BGEFU1, RG10A5(D)/BGEF, RG10A5(D1)/BGEFU1, RG10A5(D1)/BGCEFU1, RG10A5(D)/BGCEF, RG10A11(D)/BGEF, RG10B(B1)/BGEFU1, RG10A(B2S)/BGEFU1, RG10A5(B1)/BGCEFU1, RG10A4(B1)/BGEFU1, RG10L(2HS)/BGEFU1
Brand	uehba
Power Source	2 x AAA Batteries (Not included)
Display Unit	Celsius Only
Color	White
Item Weight	3.35 ounces
Package Dimensions	7.87 x 4.72 x 0.79 inches
Manufacturer	uehba
Country of Origin	China

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your uehba Replacement Remote Control, please refer to the documentation provided with your purchase or contact the seller directly. Specific warranty terms and support channels may vary.