

uehba R51M/E

User Manual for Replacement Remote Control

Model: R51M/E

Brand: uehba

1. PRODUCT OVERVIEW

This manual provides instructions for the uehba Replacement Remote Control, designed to be compatible with Midea RG51M5/(C) EU and Milexus RG51M5/EU AC Air Conditioner units. This remote is pre-programmed and ready to use right out of the box, requiring no complex setup.



Image: The replacement remote control held in a hand, showcasing its design and digital display.

2. SETUP AND BATTERY INSTALLATION

The remote control operates on two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two 1.5V AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Important: Batteries and a separate manual are not included with the remote control.



Image: Rear view of the remote control with the battery cover removed, illustrating battery insertion.

3. OPERATING INSTRUCTIONS

3.1 Basic Operation

This replacement remote control is pre-programmed and does not require any setup or pairing. Simply insert the batteries, and it will function immediately with compatible Midea and Milexus AC units.




**No programming needed,
work right out of the package**

Image: The remote control being used with an air conditioner, demonstrating its immediate functionality.

3.2 Temperature Display

The remote control's display shows temperature readings exclusively in Fahrenheit (°F). The digital display features a green backlight for improved visibility.

Display in Fahrenheit only !

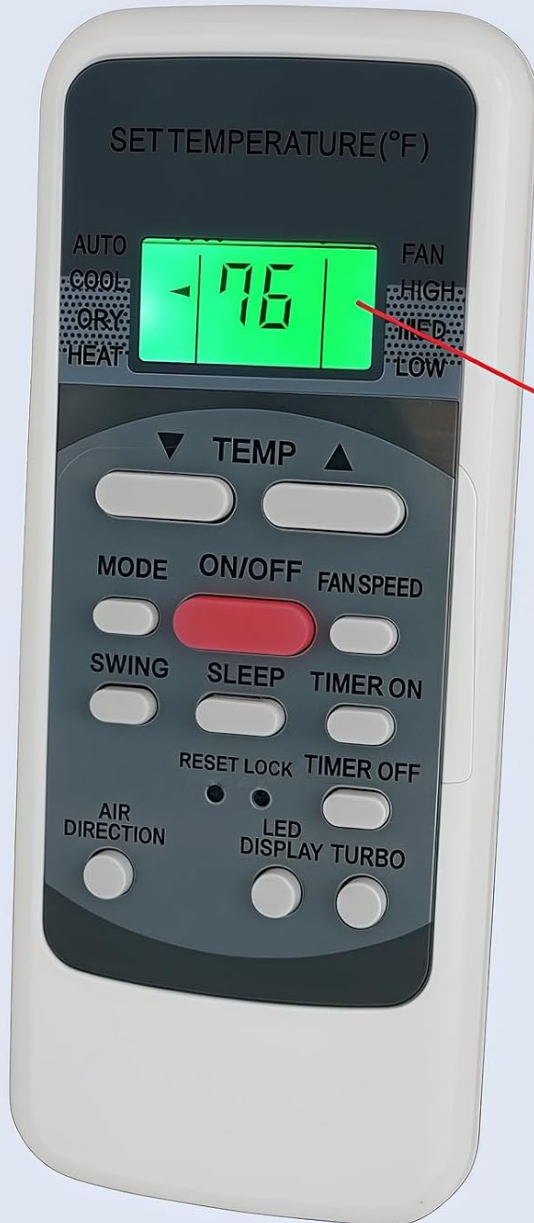

Green Backlight

Image: Detailed view of the remote's screen, highlighting the Fahrenheit temperature display and green backlight.

3.3 Key Functions

Familiarize yourself with the buttons and their corresponding functions:





Image: Front view of the remote control, displaying all buttons and the screen.

Button	Function
--------	----------

Button	Function
ON/OFF	Powers the air conditioner on or off.
MODE	Cycles through operating modes (Auto, Cool, Dry, Heat, Fan).
TEMP ▲ / ▼	Adjusts the set temperature up or down.
FAN SPEED	Adjusts fan speed (High, Med, Low, Auto).
SWING	Activates or deactivates the air swing function.
SLEEP	Activates or deactivates sleep mode for quiet operation and energy saving.
TIMER ON	Sets a timer for the unit to turn on.
TIMER OFF	Sets a timer for the unit to turn off.
RESET LOCK	Resets settings or locks the remote to prevent accidental changes.
AIR DIRECTION	Adjusts the direction of the airflow.
LED DISPLAY	Toggles the LED display on the air conditioner unit.
TURBO	Activates a rapid cooling/heating function.

4. CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the display dims. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.



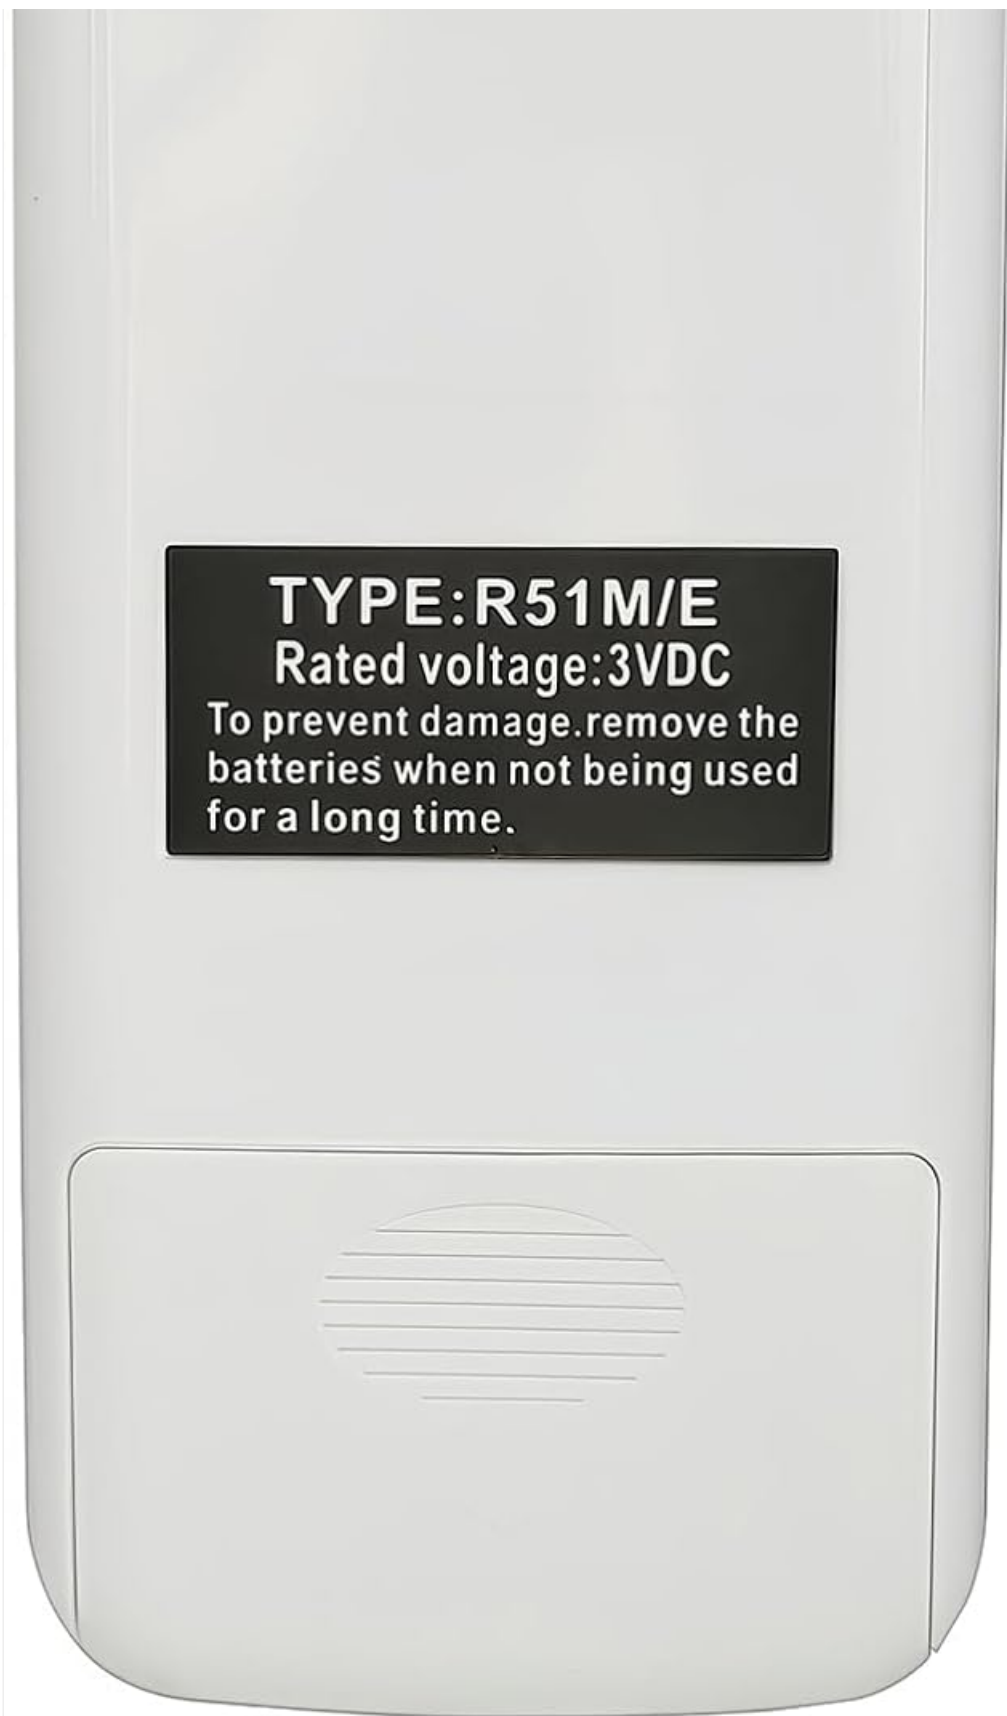


Image: Detailed view of the remote's rear label, indicating model type and battery care instructions.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Check for any obstructions between the remote and the air conditioner's receiver.
 - Ensure you are within the effective operating range of the air conditioner.
- **Display is dim or blank:**
 - This usually indicates low battery power. Replace the batteries.
 - **Air conditioner not responding to commands:**
 - Verify that the remote control model (R51M/E) is compatible with your specific Midea or Milexus air conditioner model.
 - Ensure the air conditioner unit is powered on and not in standby mode.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	R51M/E
Compatible Brands	Midea, Milexus (specific models: RG51M5/(C) EU, RG51M5/EU)
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)
Display Type	Digital with Green Backlight
Temperature Unit	Fahrenheit (°F) only
Color	White / Grey
Item Weight	1.59 ounces
Package Dimensions	7.8 x 4.09 x 1.3 inches
Special Feature	Pre-setting, no programming required; works right out of the box.

7. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not included in this manual. Please refer to the product packaging or the original point of purchase for details on warranty coverage and how to obtain support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question