

[Manuals.plus](#) /

› [Salutrobusto](#) /

› Salutrobusto W-009 Ergonomic Mesh Office Chair Instruction Manual

Salutrobusto W-009

Salutrobusto W-009 Ergonomic Mesh Office Chair Instruction Manual

Model: W-009 | Brand: Salutrobusto

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Salutrobusto W-009 Ergonomic Mesh Office Chair. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image 1.1: Salutrobusto W-009 Ergonomic Mesh Office Chair highlighting 500lbs weight capacity.

2. SAFETY INFORMATION

- **Maximum Weight Capacity:** This chair is designed to support a maximum weight of 500 pounds (227 kg). Do not exceed this limit to prevent damage or injury.
- **Assembly:** Ensure all parts are securely fastened before use. Periodically check all screws and bolts for tightness.
- **Usage:** Use the chair on a flat, stable surface. Avoid standing on the chair or using it as a step stool.
- **Children:** Keep children away from the chair during assembly. Do not allow children to play on or with the chair.
- **Moving Parts:** Be cautious of moving parts during adjustment to avoid pinching.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- A. Backrest (1)
- B. Seat Cushion (1)
- C. Headrest (1)
- D. Armrests (2)
- E. Gas Lift Cylinder (1)
- F. Star Base (1)
- G. Casters (5)
- H. Seat Mechanism (1)
- I. Hardware Pack (Screws, Allen Wrench)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your office chair. It is recommended to assemble the chair on a soft, clean surface to prevent scratches.

Step 1: Attach Casters to the Base

1. Insert each of the five casters (G) into the holes at the end of the star base (F) until they click securely into place.

High Density Moulded Foam **5.5in**



OUR

Size | 19.7"W*20.5"D*5.5"H

Material | Moulded Foam

Resiliency | 100%

OTHERS

Size | 19.6"W*16.4"D*3"H

Material | Synthetic sponge

Resiliency | 70%

Image 4.1: Attaching casters to the chair base.

Step 2: Install Gas Lift Cylinder

1. Place the gas lift cylinder (E) into the center hole of the assembled star base (F).

Step 3: Attach Seat Mechanism to Seat Cushion

1. Align the seat mechanism (H) with the pre-drilled holes on the underside of the seat cushion (B). Ensure the front of the mechanism faces the front of the seat.
2. Secure the seat mechanism using the appropriate screws from the hardware pack (I) and tighten with the Allen wrench.

3D Plated Steel Armrest



Image 4.2: Securing the seat mechanism to the seat cushion.

Step 4: Attach Armrests to Seat Cushion

1. Attach the armrests (D) to the sides of the seat cushion (B) using the designated screws from the hardware pack (I). Ensure they are oriented correctly (left and right).
2. Tighten all screws firmly.

Step 5: Connect Seat Assembly to Gas Lift

1. Carefully place the assembled seat cushion (B) with the attached mechanism and armrests onto the gas lift cylinder (E) in the star base (F). Press down firmly to secure.

Step 6: Attach Backrest to Seat Assembly

1. Align the backrest (A) with the mounting plates on the seat mechanism.
2. Secure the backrest using the remaining screws from the hardware pack (I) and tighten with the Allen wrench.

Adjustable Lumbar Support

Prevents lower back pain over long periods of sitting with up down, back and forward adjustment



Image 4.3: Attaching the backrest to the chair.

Step 7: Install Headrest

1. Insert the headrest (C) into the designated slots at the top of the backrest (A).
2. Adjust to your desired height and angle.

3D Adjustable Headrest



Image 4.4: Installing the adjustable headrest.

5. OPERATING INSTRUCTIONS (ADJUSTMENTS)

Your Salutrobusto W-009 chair offers multiple adjustment options for personalized comfort and ergonomic support.

5.1 Seat Height Adjustment

- To raise the seat: While seated, pull the lever located on the right side of the seat mechanism upwards. Lift your weight slightly off the seat. The seat will rise. Release the lever at the desired height.
- To lower the seat: While seated, pull the lever located on the right side of the seat mechanism upwards. Apply your weight to the seat. The seat will lower. Release the lever at the desired height.

5.2 Tilt and Tilt Lock Function

- To recline: Pull the lever on the left side of the seat mechanism outwards to unlock the tilt function. Lean back to recline.
- To lock the tilt: Push the lever on the left side of the seat mechanism inwards at your desired recline angle (90-135°). The chair offers three lockable angles.
- To return to upright position: Unlock the tilt, lean forward, and push the lever inwards.

5.3 Lumbar Support Adjustment

- The lumbar support can be adjusted both vertically (up and down) and horizontally (forward and backward).
- Locate the knob on the back of the chair, behind the lumbar area.
- Rotate the knob to adjust the depth of the lumbar support.
- Slide the lumbar support mechanism up or down to find the optimal position for your lower back.



Image 5.1: Adjusting the lumbar support for personalized comfort.

5.4 3D Armrest Adjustment

- **Height Adjustment:** Press the button on the side of the armrest and slide the armrest up or down to your desired height. Release the button to lock.
- **Forward/Backward Adjustment:** Slide the armrest pad forward or backward.
- **Rotary Adjustment:** Pivot the armrest pad left or right to adjust its angle.



Image 5.2: Demonstrating the 3D adjustable armrests.

5.5 Adjustable Headrest

- The headrest can be adjusted for height, depth (forward/backward), and tilt angle (60°).
- To adjust height: Gently pull the headrest up or push down to the desired vertical position.
- To adjust depth and tilt: Grasp the headrest and move it forward or backward, and tilt it to find the most comfortable angle for your neck and head.

Material Defines Quality



Class4 Durable Gas Lift & Heavy Duty Metal Base

Class 4 certificated gas cylinder will last longer and keep the chair much safer, Sturdy heavy duty metal base can hold up to 500lbs, All makes it a big and tall office chair

Rubber Blade Wheels

The silent and smooth blade wheel will ergonomically enhance your seating experience.



Image 5.3: Adjusting the 3D headrest for optimal neck support.

6. MAINTENANCE AND CARE

- **Cleaning:** For the mesh backrest and fabric seat, use a soft cloth with mild soap and water. Avoid harsh chemicals or abrasive cleaners.
- **Frame:** Wipe metal and plastic parts with a damp cloth.
- **Casters:** Periodically clean hair and debris from the casters to ensure smooth movement.
- **Fasteners:** Regularly check all screws and bolts to ensure they remain tight. Retighten as necessary.
- **Storage:** Store the chair in a dry environment, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chair does not adjust height	Gas lift cylinder malfunction or lever not engaged.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift may need replacement. Contact support.
Chair wobbles	Loose screws or uneven floor.	Check and tighten all assembly screws. Ensure the chair is on a flat surface.
Casters do not roll smoothly	Debris caught in casters or damaged casters.	Remove any hair or debris from the caster wheels. If damaged, casters may need replacement.
Backrest reclines too easily/stiffly	Tilt tension not adjusted correctly.	Locate the tension knob under the seat (usually at the front of the mechanism). Turn clockwise to increase tension (stiffer recline) or counter-clockwise to decrease tension (easier recline).

8. SPECIFICATIONS

Feature	Detail
Model	W-009
Brand	Salutrobusto
Color	Black
Product Dimensions (D x W x H)	26"D x 26"W x 42"H (Minimum Height)
Maximum Weight Recommendation	500 Pounds (227 kg)
Seat Height	19.7 Inches (Adjustable)
Seat Depth	20.5 Inches
Seat Material	High-Density Moulded Foam
Back Style	Mesh Back
Arm Style	3D Adjustable Armrests
Special Features	Adjustable Backrest (90-135°), Adjustable Headrest, Adjustable Height, Adjustable Lumbar Support, Silent Rubber Wheels
Gas Lift	SGS-certified Class 4
Base Material	Aluminum Alloy
Item Weight	40 pounds



Image 8.1: Detailed dimensions of the Salutrobusto W-009 chair.

9. WARRANTY AND SUPPORT

The Salutrobusto W-009 Ergonomic Mesh Office Chair is backed by a **1-year warranty** from the date of purchase, covering manufacturing defects and material flaws.

For warranty claims, missing parts, or technical assistance, please contact Salutrobusto customer support through the retailer where the product was purchased or visit the official Salutrobusto website for contact information.

Please retain your proof of purchase for warranty validation.