

[Manuals.plus](#) /

› [Hongsheng](#) /

› Hongsheng MX-6600 Dual Line Price Labeller Gun User Manual

Hongsheng MX-6600

Hongsheng MX-6600 Dual Line Price Labeller Gun User Manual

Model: MX-6600

1. INTRODUCTION

The Hongsheng MX-6600 is a handheld dual-line price labeller gun designed for efficient and accurate pricing in retail environments. It is capable of printing two lines of information, with up to 10 digits per line, on 23x16mm price labels. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.

2. PRODUCT OVERVIEW

The MX-6600 features a robust, eco-friendly ABS material construction, designed for comfortable and continuous use. It utilizes an 18mm refillable ink roller and a spring-loaded mechanism for smooth label output.



Figure 1: Packaging for the Hongsheng MX-6600 Price Labeller Gun. The box displays the brand, model, and key features like 'One Touch Open System' and 'Smooth & Accurate Operation'.



Figure 2: Examples of labels printed by the MX-6600, showing dual pricing (Cash and Card) on items such as bread,

oranges, and cookies.



Figure 3: Additional examples of labels printed by the MX-6600, demonstrating dual pricing on cosmetic bottles and a hair dryer box.

3. SETUP

3.1 Loading Labels

1. Open the label compartment by pressing the release latch, typically located on the side or bottom of the gun.
2. Insert a roll of 23x16mm labels, ensuring the labels feed from the bottom and the adhesive side faces away from the gun's mechanism.
3. Thread the first few labels through the feed mechanism until they emerge from the front slot.
4. Close the label compartment securely.

3.2 Installing/Replacing Ink Roller

1. Locate the ink roller compartment, usually near the top or front of the device.
2. If replacing, carefully remove the old 18mm ink roller.

3. Insert the new ink roller, ensuring it is seated correctly in its designated slot.
4. Close the ink roller compartment.



Figure 4: The MX-6600 features a scroll wheel design for smooth paper output, ensuring labels feed consistently.

4. OPERATION

4.1 Adjusting Characters

1. Locate the rotary adjustment knobs on the top of the labeller gun.
2. Rotate the knobs to select the desired characters, numbers, or symbols for each line. The MX-6600 supports 10 digits per line.
3. Ensure all characters are aligned correctly before printing.

4.2 Printing Labels

1. Position the labeller gun over the item where the label is to be applied.
2. Squeeze the trigger handle firmly and completely. This action prints the characters onto the label and dispenses it.
3. Release the trigger to prepare for the next label.



Figure 5: The rotary adjustment mechanism allows users to easily select and set characters for printing.

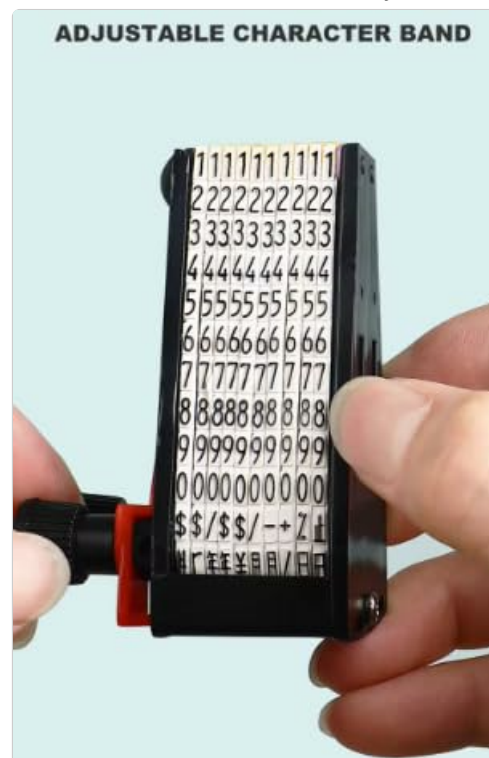


Figure 6: Close-up of the adjustable character band, showing the range of numbers and symbols available for selection.



Figure 7: The MX-6600 is designed for continuous printing, featuring a spring-loaded handle for efficient repetitive use.

5. MAINTENANCE

5.1 Ink Roller Replacement

Replace the ink roller when print quality deteriorates or the ink runs out. Refer to Section 3.2 for detailed instructions on ink roller replacement.

5.2 Cleaning

Periodically clean the exterior of the labeller gun with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners. Ensure no dust or debris accumulates in the label feed mechanism to prevent jamming.

5.3 Label Roll Replacement

When the label roll is depleted, replace it with a new roll of 23x16mm labels. Refer to Section 3.1 for detailed instructions on loading labels.

6. TROUBLESHOOTING

- **Labels not feeding:** Check if the label roll is installed correctly and not jammed. Ensure the first label is properly threaded through the mechanism.
- **Unclear or faded print:** The ink roller may be dry or incorrectly installed. Replace the ink roller if necessary. Ensure characters are fully selected and aligned.
- **Labels jamming:** Inspect the label path for any obstructions or misaligned labels. Ensure the label roll is not too tight or loose.
- **Characters not changing:** Verify that the rotary adjustment knobs are fully engaged and turning the

character bands.

7. SPECIFICATIONS

Model	MX-6600
Brand	Hongsheng
Print Lines	2 Lines
Digits Per Line	Up to 10
Compatible Label Size	23mm x 16mm
Ink Roller Size	18mm
Ink Colour	Blue
Material	Eco-friendly ABS
Item Weight	445 g (0.45 kg)
Special Feature	Portable

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.