

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JOYIN](#) /

> [JOYIN 47-inch Light-Up Hanging Ghost Instruction Manual](#)

JOYIN 16470

JOYIN 47-inch Light-Up Hanging Ghost Instruction Manual

Brand: JOYIN | Model: 16470

INTRODUCTION

This manual provides instructions for the proper setup, operation, and care of your JOYIN 47-inch Light-Up Hanging Ghost. This decoration is designed to enhance your outdoor Halloween display with its realistic appearance and integrated LED lighting.

SAFETY INFORMATION

- For outdoor use only.
- Keep away from water.
- Do not allow children to play on or near the display.
- Keep batteries out of reach of children.
- Do not swallow small parts.
- Unplug and remove batteries when not in use.
- Keep away from flammable materials.

PACKAGE CONTENTS

- 1 x 47-inch Light-Up Hanging Ghost
- Integrated LED light string and battery compartment

Note: 3 AA batteries are required and not included.

SETUP INSTRUCTIONS

1. **Unpack the Ghost:** Carefully remove the hanging ghost from its packaging. The fabric may be folded; gently unfold it to allow the material to drape naturally.

2. **Install Batteries:** Locate the battery compartment on the back of the ghost. Open the compartment (a small screwdriver may be required) and insert 3 AA batteries, ensuring correct polarity. Close the compartment securely.
3. **Position the Arms:** The ghost features bendable arms. Adjust them to your desired pose to create a flying or floating effect.
4. **Hang the Decoration:** Use the integrated hanging loop at the top of the ghost to suspend it from a tree, window, ceiling, porch, or doorway. Ensure the hanging point is secure and can support the decoration.



Figure 1: Easy setup showing battery compartment access.



Figure 2: The 47-inch hanging ghost with its arms adjusted.

OPERATING INSTRUCTIONS

The JOYIN Light-Up Hanging Ghost features a multi-function switch for its LED lights:

- **Press Once:** Activates the timer function. The lights will turn on for 6 hours, then automatically turn off for 18 hours, and repeat the cycle.
- **Press Twice:** Activates constant light mode. The lights will remain on continuously until manually turned off or batteries deplete.
- **Press Thrice:** Turns off the lights.



Figure 3: The hanging ghost illuminated at night.

MAINTENANCE

- **Cleaning:** Gently wipe the ghost with a soft, dry cloth if it becomes dusty. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, remove the batteries to prevent corrosion. Fold the ghost carefully and store it in a dry, cool place away from direct sunlight to preserve its material and lights.
- **Battery Replacement:** Replace all 3 AA batteries simultaneously with new ones when the lights dim or stop working.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity. Check that the battery compartment is securely closed.

Problem	Possible Cause	Solution
Lights are dim or flicker.	Low battery power.	Replace all 3 AA batteries with new ones.
Timer function not working as expected.	Incorrect activation or misunderstanding of cycle.	Ensure the switch is pressed once for timer mode. The timer activates for 6 hours ON, then 18 hours OFF, repeating daily from the time of activation.
Only part of the lights illuminate.	Loose or damaged wiring within the light string.	Inspect visible wiring for damage. If the issue persists, contact customer support.

SPECIFICATIONS

- **Product Height:** Approximately 47 inches
- **Light Color:** White LED
- **Power Source:** 3 x AA Batteries (not included)
- **Voltage:** 4.5 Volts
- **Recommended Use:** Outdoor
- **Material:** Plastic and Fabric
- **Item Weight:** 9.9 ounces
- **Model Number:** 16470
- **UPC:** 840332641614



Figure 4: Product size illustration.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official JOYIN website. Keep your purchase receipt for warranty claims.