

Manuals.plus /
› JOYIN /
› JOYIN 47-inch Light-Up Hanging Ghost Instruction Manual

JOYIN 16471

JOYIN 47-inch Light-Up Hanging Ghost Instruction Manual

Model: 16471 | Brand: JOYIN

			Introduction	Safety Information	Package		
Contents	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and care of your JOYIN 47-inch Light-Up Hanging Ghost decoration. This product is designed for seasonal decorative use, featuring a white ghost figure with integrated green LED lights and bendable arms for customizable posing. Please read this manual thoroughly before use to ensure proper setup and safe operation.



Image 1.1: The JOYIN 47-inch Light-Up Hanging Ghost illuminated with green LED lights, suspended in an outdoor setting.

2. SAFETY INFORMATION

- This product is intended for decorative purposes only. It is not a toy and should be kept out of reach of children and pets.
- Do not expose the battery compartment or electrical components to water or excessive moisture. This product is designed for outdoor use but the battery compartment should be protected from direct rain.
- Use only the specified battery type (3 AA batteries). Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not going to be used for an extended period to prevent leakage.
- Do not attempt to modify or repair the product. Contact customer support for assistance.
- Ensure the hanging location is secure and can support the weight of the decoration, especially in windy conditions.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x JOYIN 47-inch Light-Up Hanging Ghost
- (3 AA batteries are required but not included)

4. SETUP INSTRUCTIONS

4.1. Battery Installation

1. Locate the battery compartment on the back of the ghost decoration.
2. Carefully open the battery compartment cover. A small screwdriver may be required (not included).
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image 4.1: Visual guide for opening the battery compartment and inserting 3 AA batteries.

4.2. Hanging the Decoration

1. Identify a suitable location for hanging the ghost, such as a tree branch, porch ceiling, or doorway. Ensure the location is stable and protected from extreme weather conditions.
2. Use the integrated hanging loop at the top of the ghost to secure it.
3. Adjust the bendable arms to achieve your desired pose.



Image 4.2: The ghost decoration hanging on a porch, demonstrating a typical installation.

5. OPERATING INSTRUCTIONS

Once batteries are installed, locate the ON/OFF switch on the battery compartment. Slide the switch to the "ON" position to activate the green LED lights. Slide it to "OFF" to turn the lights off.



Image 5.1: The ghost decoration illuminated at night, showcasing its green light-up function.

6. MAINTENANCE

6.1. Cleaning

To clean the ghost decoration, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the product in water.

6.2. Storage

When not in use, store the ghost in a cool, dry place, away from direct sunlight. Remove batteries before storing for extended periods to prevent corrosion.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed. ON/OFF switch is in the "OFF" position.	Replace with new AA batteries, ensuring correct polarity. Slide the ON/OFF switch to the "ON" position.
Lights are dim.	Batteries are low.	Replace with new AA batteries.
Ghost does not hang securely.	Improper hanging method or unstable support.	Ensure the hanging loop is properly secured to a stable fixture. Re-evaluate the hanging location.

8. SPECIFICATIONS

Feature	Detail
Product Name	Light-Up Hanging Ghost
Brand	JOYIN
Model Number	16471
ASIN	B0D3D8JL7V
UPC	840332641621
Dimensions (Approx.)	47 inches (120 cm) in height
Weight (Approx.)	9.9 ounces
Light Color	Green LED
Power Source	3 x AA Batteries (not included)
Material	Plastic, Resin
Recommended Use	Indoor/Outdoor Halloween Decoration

PRODUCT DIMENSIONS



47 INCH
120 CM

Image 8.1: Product dimensions indicating the 47-inch (120 cm) height of the ghost.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer's return policy or contact JOYIN customer service directly. Keep your purchase receipt for any warranty claims.

The product is typically covered by a 30-day return/replacement policy from the date of purchase. For specific details, please consult the seller's terms and conditions.

© 2024 JOYIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3D8JL7V>

More documents and user manuals: <https://manuals.plus/>