

[Manuals.plus](#) /

> [WORKESS](#) /

> WORKESS WB065 Metal Welding Table Instruction Manual

WORKESS WB065

WORKESS WB065 Metal Welding Table Instruction Manual

Model: WB065

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your WORKESS WB065 Metal Welding Table. Please read this manual thoroughly before assembly and operation to ensure proper functionality and to prevent injury or damage. Keep this manual for future reference.

SAFETY INFORMATION

Always prioritize safety when working with tools and equipment. Failure to follow safety guidelines can result in serious injury.

- Ensure the welding table is placed on a stable, level surface before use.
- Do not exceed the maximum load capacity of 1000 lbs (453 kg).
- Wear appropriate personal protective equipment (PPE) such as welding helmets, gloves, and protective clothing.
- Keep the work area clean and free of flammable materials.
- Ensure all locking mechanisms are engaged before applying weight or beginning work.
- Keep children and unauthorized persons away from the work area.
- Inspect the table for damage before each use. Do not use if damaged.

PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- WORKESS WB065 Welding Table (pre-assembled main unit)
- Locking Hooks (4 units)
- Instruction Manual (this document)

SETUP AND ASSEMBLY

The WORKESS WB065 welding table is designed for quick and easy setup. No complex assembly is required.

Unfolding the Table

1. Place the folded table on a flat, stable surface with the handles facing upwards.
2. Grasp the handles and carefully unfold the legs outwards until they are fully extended.
3. Ensure the leg hooks engage securely into their respective slots on the tabletop frame. These hooks provide additional stability.
4. Verify that all four legs are fully extended and locked into position before placing any weight on the table.



Figure 1: The leg hook mechanism ensures the legs are securely in place when unfolded.



Figure 2: Unfolding the table legs and engaging the locking hooks for stability.

OPERATING INSTRUCTIONS

Adjusting Table Height

The WB065 offers 7 levels of height adjustment to suit various tasks and user preferences, ranging from 27.7 inches to 36.6 inches.

1. Ensure the table is empty and stable.
2. Locate the height adjustment pins on each leg.
3. Press the pin and slide the inner leg section up or down to the desired height.
4. Ensure the pin fully re-engages into a height adjustment hole on all four legs before use. Uneven height can compromise stability.



7-LEVEL HEIGHT SETTINGS

Adapt To Your Needs

Figure 3: The table offers 7 height settings, from 27.7 inches to 36.6 inches.

Utilizing the Work Surface

The 42" x 21" galvanized metal tabletop features strategically placed 0.8-inch holes and 1.2" x 10.2" tooling slots for versatile clamping and fixture options.

- Use appropriate clamps and fixtures with the holes and slots to secure your workpiece.
- Distribute weight evenly across the tabletop to maintain stability and prevent tipping.
- The table is designed to support a maximum load of 1000 lbs (453 kg).

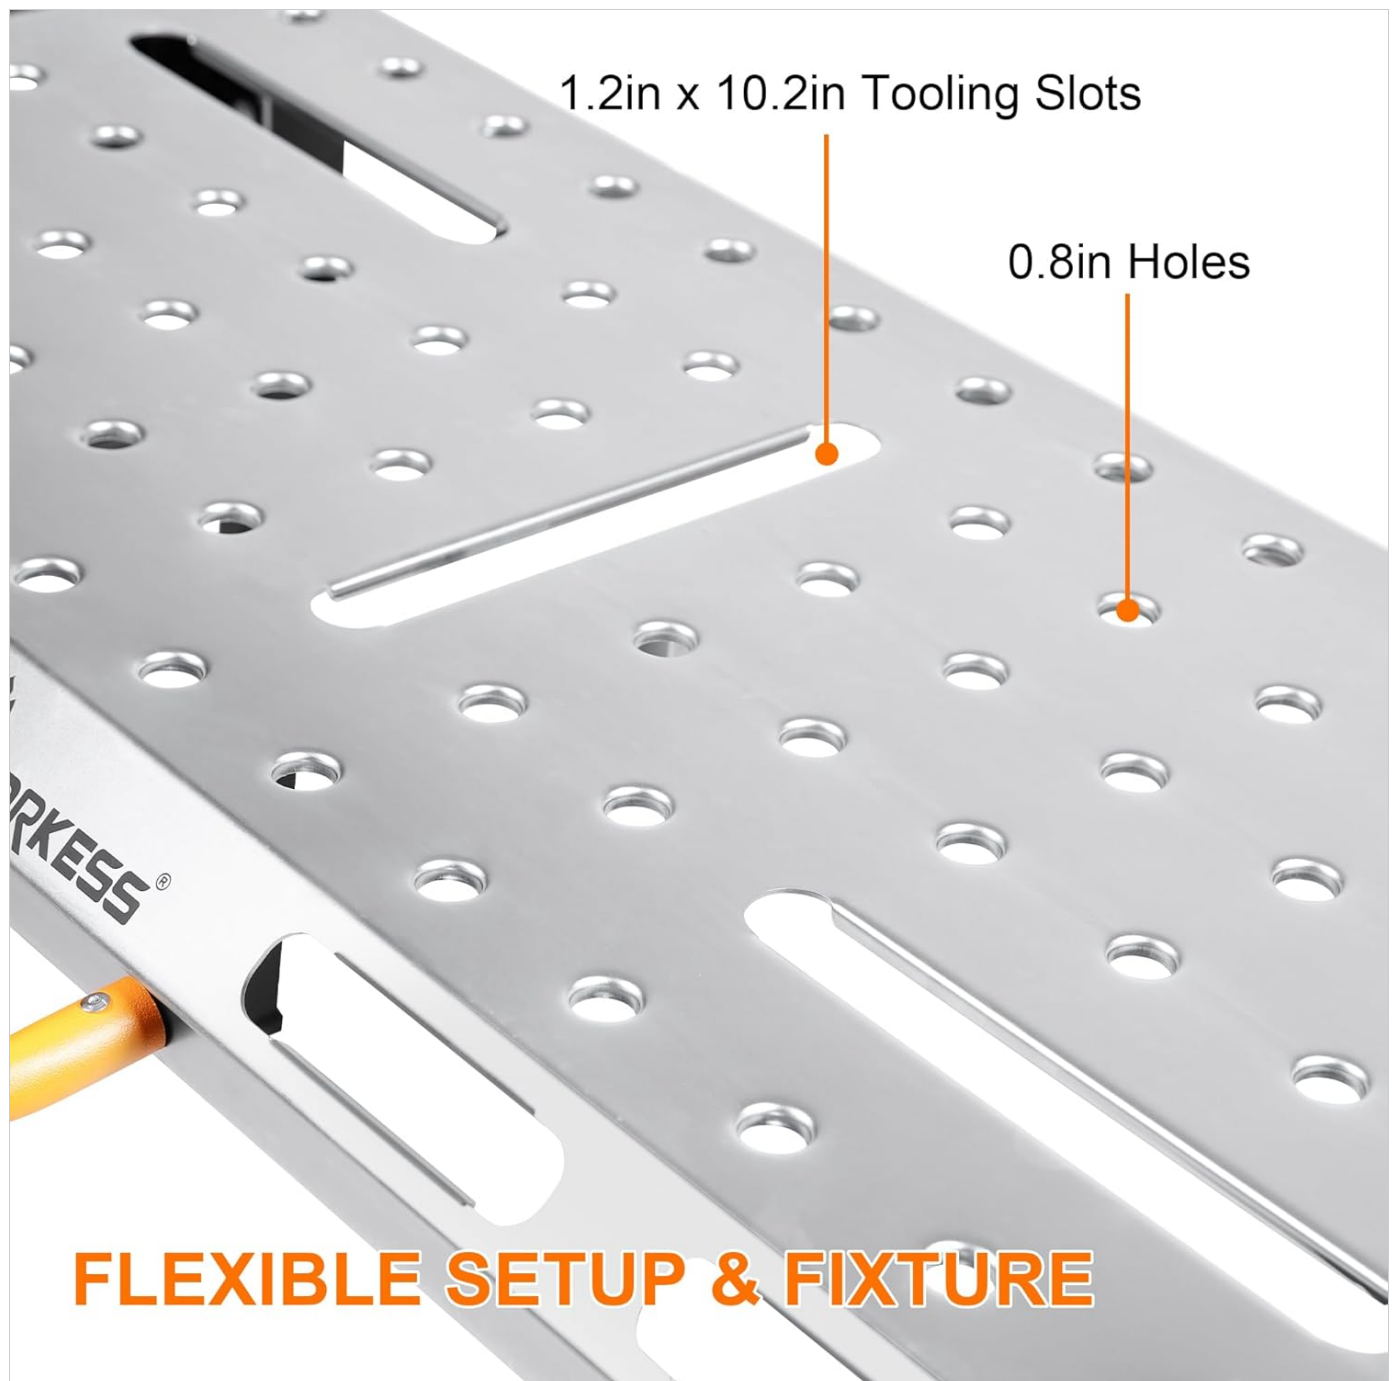


Figure 4: Detail of the work surface with holes and slots for clamping and fixturing.

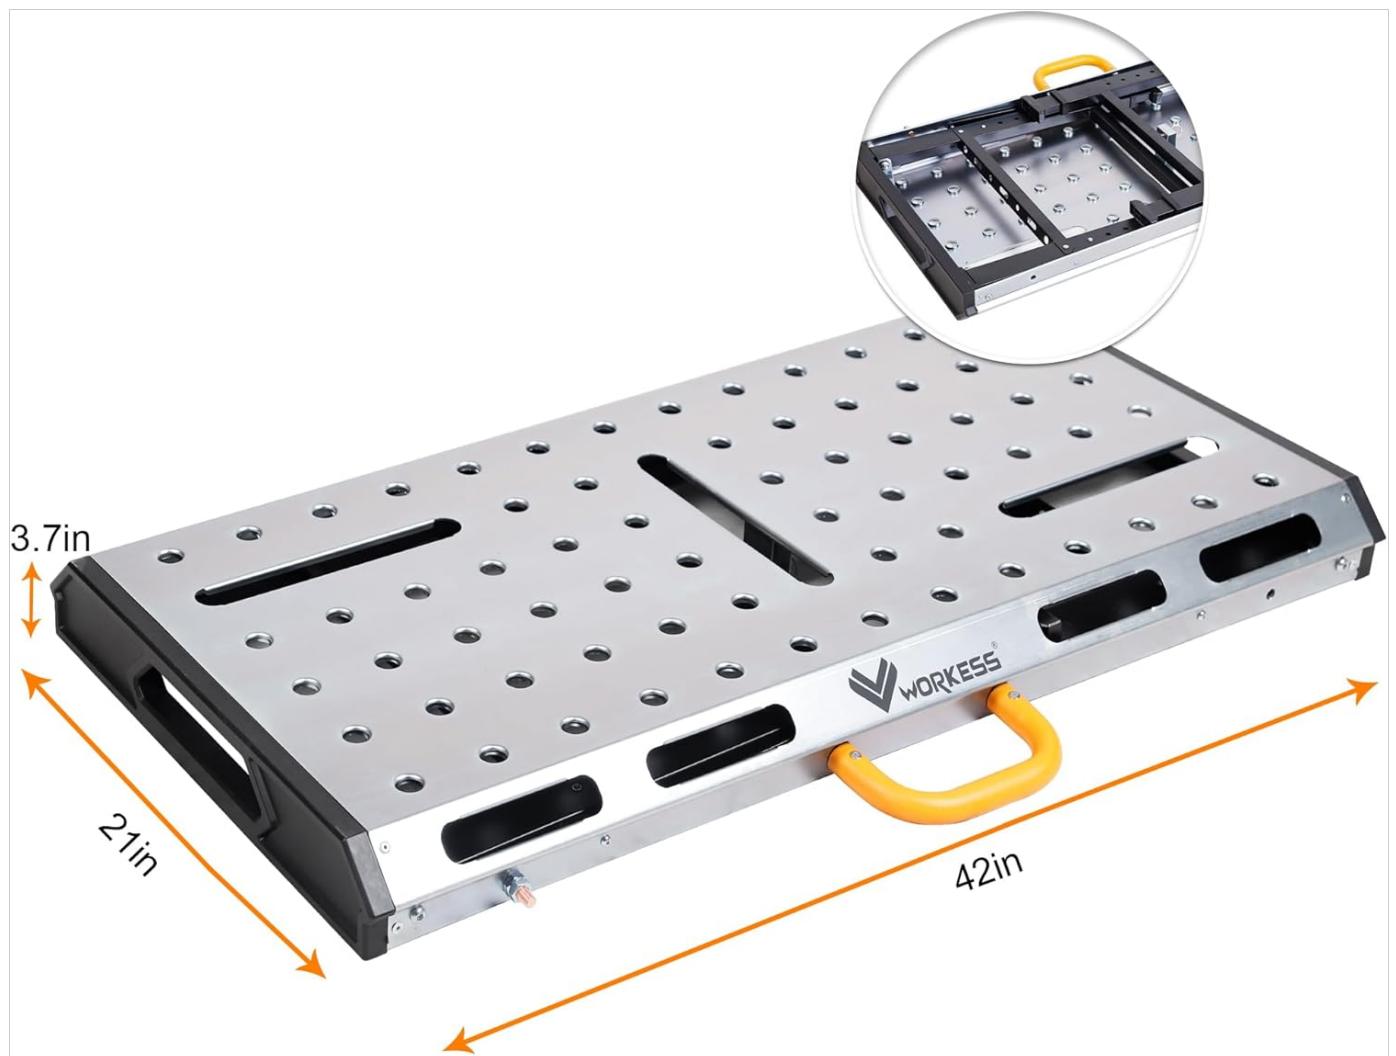


Figure 5: The table's robust construction supports up to 1000 lbs.

Folding for Storage and Transport

The table folds into a compact unit for easy storage and portability.

1. Remove all items from the tabletop.
2. Disengage the leg hooks and carefully fold the legs inwards, tucking them under the tabletop.
3. Ensure the legs are fully collapsed and secured. The table will stand on its own in the folded position.
4. Use the integrated handles for convenient carrying.



PORTABLE, STURDY, VERSATILE

Galvanized Top To Resist Wear & Corrosion

Figure 6: The table folds to a compact 3.7-inch height for storage.



Figure 7: The integrated handle allows for easy one-handed transport.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your welding table.

- **Cleaning:** After each use, clean the tabletop to remove welding spatter, dust, and debris. A wire brush or scraper can be used for stubborn spatter.
- **Inspection:** Periodically inspect all welds, bolts, and moving parts for signs of wear, damage, or loosening. Tighten any loose fasteners.
- **Corrosion Protection:** The powder-coated frame and galvanized metal top are designed to resist corrosion. However, avoid prolonged exposure to moisture and harsh chemicals. If the galvanized coating is compromised, consider applying a suitable rust-inhibiting primer and paint.
- **Lubrication:** Lightly lubricate moving parts, such as the leg hinges and height adjustment pins, with a general-purpose lubricant to ensure smooth operation.
- **Storage:** Store the table in a dry environment when not in use, preferably in its folded configuration to save space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly or unstable.	- Legs not fully extended or locked. - Leg height unevenly adjusted. - Table on an uneven surface. - Leg hooks not engaged.	- Ensure all legs are fully extended and adjustment pins are engaged. - Verify all legs are set to the same height. - Move table to a level surface or use shims under legs. - Ensure all four leg hooks are securely engaged.
Difficulty folding/unfolding legs.	- Hinges are stiff or dirty. - Obstruction preventing movement.	- Clean hinges and apply a light lubricant. - Check for any debris or foreign objects obstructing the mechanism.
Height adjustment pins not engaging.	- Pin mechanism is dirty or obstructed. - Inner leg section misaligned.	- Clean the pin and adjustment holes. - Ensure the inner leg is aligned correctly with the outer leg.

SPECIFICATIONS

Feature	Detail
Model Number	WK-WB065
Brand	WORKESS
Material	Alloy Steel (Frame), Galvanized Metal (Top)
Finish Type	Powder Coated (Frame)
Load Capacity	1000 lbs (453 kg)
Work Surface Dimensions	Approximately 42 inches (L) x 21 inches (W)
Height Adjustment Levels	7 levels
Adjustable Height Range	27.7 inches to 36.6 inches
Folded Dimensions	Approximately 42 inches (L) x 21 inches (W) x 3.7 inches (H)
Item Weight	41.8 lbs (18.96 kg)
Tooling Holes	0.8-inch diameter
Tooling Slots	1.2 inches x 10.2 inches

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official WORKESS website or contact their customer service directly. Details are typically provided with your purchase documentation or on the product packaging.

Manufacturer: WORKESS
UPC: 763214780990

© 2025 WORKESS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question