

AEG LTR6G37A

AEG 6000 Series LTR6G37A Top-Load Washing Machine User Manual

Model: LTR6G37A

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AEG 6000 Series LTR6G37A top-load washing machine. Please read these instructions carefully before installation and first use, and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Do not operate the washing machine if it is damaged or malfunctioning. Contact service personnel.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been previously cleaned in, washed with, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Keep the area around the washing machine clear of flammable materials.

PRODUCT OVERVIEW


Key Features

- **ProSense Technology for Optimized Consumption:** Each load is weighed to customize the cycle and calculate the minimum time required for a complete wash. This reduces wear and protects garment colors.
- **Protect Delicate Garments with SoftPlus:** The SoftPlus option ensures that fabric softener reaches every corner of the drum and distributes evenly over every fabric, helping clothes feel softer and more velvety while protecting fibers and extending garment life.
- **Easy Loading and Unloading with Soft Opening:** The top-load washing machine door features a special one-hand

operable Soft-Opening mechanism, allowing maximum safety when accessing the drum.

- **Reliable and Efficient Motor:** The ÖKOInverter permanent magnet motor offers maximum efficiency and reliability, ensuring superior performance regardless of the selected program.
- **Save Time and Energy:** Many washing machines with Eco programs save energy. Our Eco TimeSave also saves time. The AEG 6000 washing machine allows you to select ECO and TimeSave options together, providing an efficient wash as quickly as possible.

Components

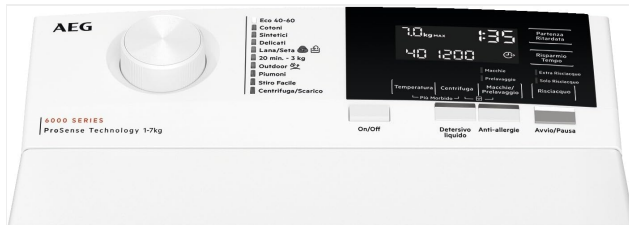

Control Panel: Features a rotary knob for program selection and an LCD touch display for settings and cycle information.



Washing Drum: Stainless steel drum designed for gentle yet effective washing.



Detergent Dispenser: Removable compartment for liquid or powder detergent and fabric softener.



Soft Opening Lid: Provides easy and safe access to the drum with a gentle opening mechanism.



Rear Connections: Inlet and outlet hoses for water supply and drainage, and power cable connection.



Overall Design: Compact and modern top-load washing machine.

SETUP

Unpacking and Positioning

- Remove all packaging materials and transport bolts from the rear of the machine. Keep these for future transport.
- Place the washing machine on a firm, level floor. Adjust the feet to ensure stability and prevent vibrations during operation.
- Ensure there is adequate space around the appliance for ventilation and maintenance.

Water and Electrical Connections

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.
- Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230 Volts).

First Use

- Before washing clothes, run an empty cycle at 60°C with a small amount of detergent to clean the drum and remove any manufacturing residues.

OPERATING INSTRUCTIONS

Loading Laundry

- Open the Soft Opening lid.

- Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 7 kg.
- Close the lid securely.

Adding Detergent and Softener

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage.
- Push the dispenser drawer back in completely.

Program Selection and Start

- Turn the program selector knob to choose the desired wash program (e.g., Cotton, Synthetics, Delicates, Wool/Silk, 20 min. - 3 kg, Outdoor, Duvets, Easy Iron, Spin/Drain).
- Use the touch display to adjust settings such as temperature, spin speed, and additional options (e.g., Prewash, Extra Rinse, Eco TimeSave).
- Press the 'Start/Pause' button to begin the wash cycle.

MAINTENANCE

Cleaning the Detergent Dispenser

- Regularly remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot cycle with no laundry and a descaling agent) periodically to clean the drum and internal components.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING


Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Washing machine does not start	Power cord not plugged in; door not closed properly; 'Start/Pause' not pressed.	Check power connection; ensure door is fully closed; press 'Start/Pause'.
No water filling	Water tap closed; inlet hose kinked; water pressure too low.	Open water tap; straighten hose; check water supply.
Water not draining	Drain hose kinked or blocked; pump filter clogged.	Straighten/clear drain hose; clean pump filter.
Excessive vibration/noise	Appliance not level; transport bolts not removed; uneven load.	Adjust feet to level; remove transport bolts; redistribute laundry.

SPECIFICATIONS

Specification	Value
---------------	-------

Specification	Value
Brand	AEG
Model Name	LTR6G37A
Product Type	Washing Machine
Installation Type	Free-standing
Loading Position	Top-Load
Capacity	7 Kilograms
Product Dimensions (D x W x H)	66P x 40I x 87H cm (660 x 400 x 870 mm)
Item Weight	58 Kilograms
Color	White
Finish	Painted White
Control Type	Touch
Operating Mode	Automatic
Number of Programs	11
Maximum Spin Speed	1300 Revolutions per minute
Voltage	230 Volts
Noise Level	77 Decibels
Drum Material	Plastic or enamelled steel
Special Features	Soft Opening, Fabric Softener Dispenser, Large LCD Display, Inverter Motor, ProSense Technology
Included Components	Machine body
Manufacturer	Electrolux
Country of Origin	Italy

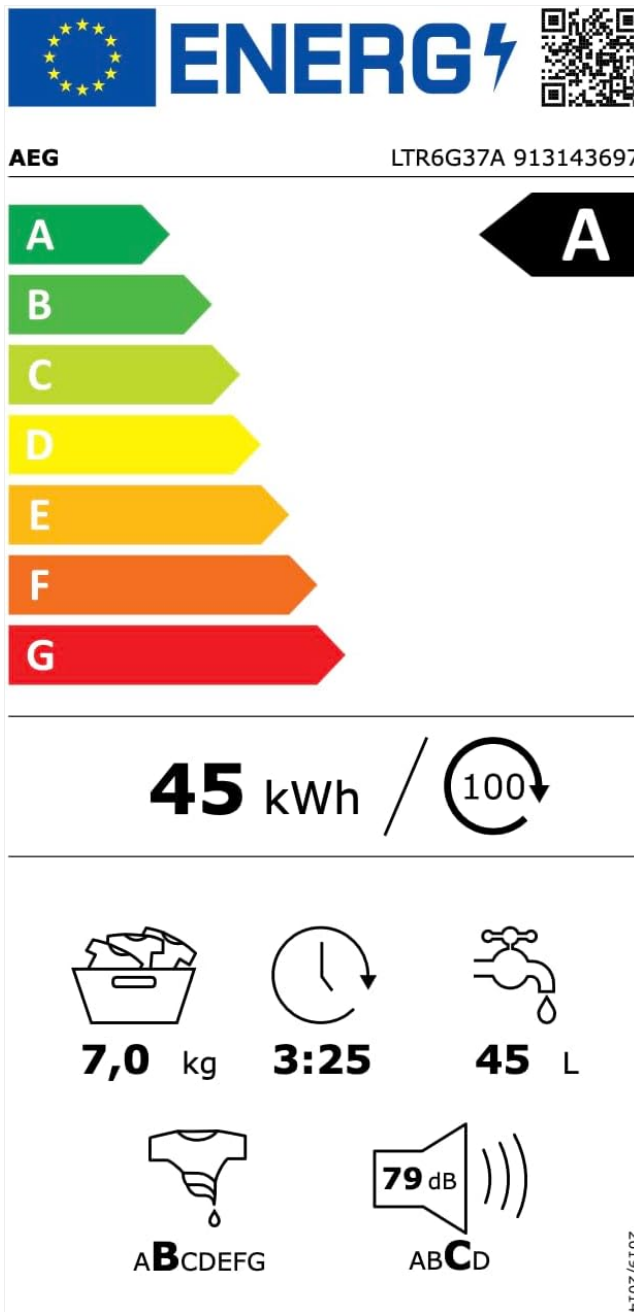

Energy Label: Details energy efficiency, capacity, water consumption, and noise level. For more information, visit eprel.ec.europa.eu/qr/1862011.

WARRANTY AND SUPPORT

Product Warranty

This AEG washing machine comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, spare parts, or warranty service, please contact AEG customer support. You can find contact information on the official AEG website or through your retailer.