

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NOHON](#) /

› [NOHON Power Bank 10000 mAh: 22.5W PD Fast Charging User Manual](#)

NOHON NX-P26

NOHON Power Bank 10000 mAh: 22.5W PD Fast Charging User Manual

Model: NX-P26

INTRODUCTION

Thank you for choosing the NOHON 10000 mAh Power Bank. This device is designed to provide portable and efficient charging for your electronic devices. Please read this manual carefully to ensure proper use and to maximize the lifespan of your power bank.

PRODUCT OVERVIEW

The NOHON Power Bank features a 10000 mAh capacity and supports 22.5W PD (Power Delivery) fast charging. It is equipped with multiple ports for versatile charging options.

Key Features:

- 10000 mAh Capacity:** Provides reliable power for multiple charges.
- 22.5W PD Fast Charging:** Delivers rapid charging speeds for compatible devices.
- LED Display:** Shows real-time battery percentage.
- Multiple Ports:** Includes 2 inputs (USB-C, Micro USB) and 3 outputs (2 USB-A, 1 USB-C).
- Universal Compatibility:** Compatible with a wide range of smartphones, tablets, and other USB-powered devices.
- Multi-Protection System:** Built-in safeguards against overcurrent, overvoltage, short-circuit, and high temperature.

10000mAh Schnell Aufladende Powerbank

10000mAh
KapazitätPD
QC 3.0LED
Anzeige2 Eingänge und
3 AusgängeBreite
KompatibilitätMehrere
Schutzfunktionen

NOHON 10000mAh Power Bank highlighting its key features: 10000mAh capacity, PD QC 3.0, LED display, 2 inputs, 3 outputs, wide compatibility, and multiple protection functions.

SETUP: CHARGING THE POWER BANK

Before initial use, fully charge your NOHON Power Bank. The LED display will show the charging progress.

- 1. Connect a Charging Cable:** Use a USB-C cable or a Micro USB cable (not included, except for a 30cm USB-C cable) to connect the power bank's input port to a compatible USB wall charger (5V/2A or higher recommended for faster charging).
- 2. Monitor LED Display:** The LED display will show the battery percentage increasing as it charges.
- 3. Full Charge Indication:** The display will show "100%" when the power bank is fully charged.

Mehrfacher Schutz



Kurzschlusschutz




Schutz gegen
hohe Temperaturen



Überspannungsschutz



Überstrom-Schutz

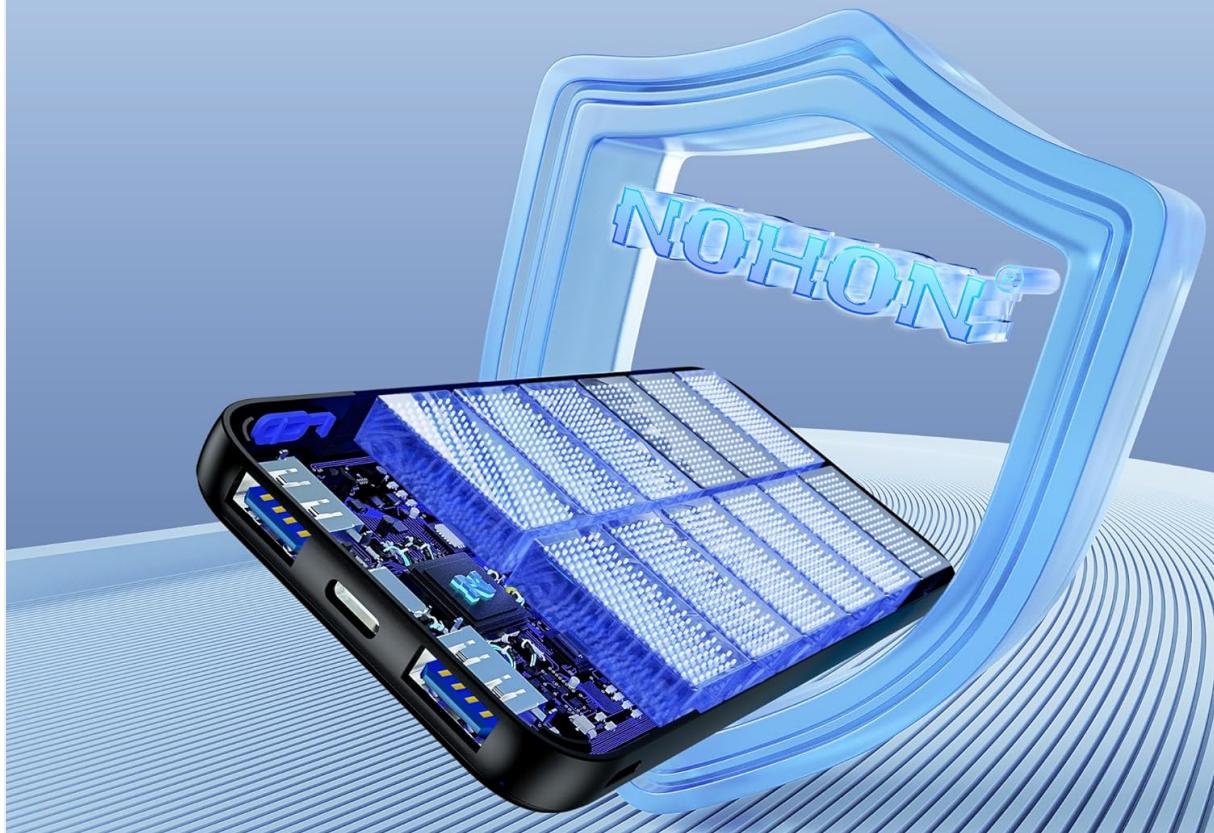

The NOHON Power Bank features both USB-C and Micro USB input ports for charging the power bank itself.

OPERATING: CHARGING YOUR DEVICES

The NOHON Power Bank can charge up to three devices simultaneously.

- Connect Your Device:** Use a compatible charging cable to connect your device to one of the power bank's output ports (USB-A1, USB-A2, or USB-C).
- Automatic Charging:** The power bank will automatically begin charging your device. If not, press the power button once to activate charging.
- Monitor Device Charge:** Your device's screen will indicate that it is charging. The power bank's LED display will show its remaining battery percentage.
- Disconnect:** Once your device is charged, disconnect it from the power bank. The power bank will automatically power off after a period of inactivity.



The NOHON Power Bank provides 22.5W fast charging for compatible smartphones and other devices.

Gleichzeitiges Aufladen von 3 Geräten



This power bank can charge multiple devices, such as a tablet, smartphone, and earbuds, at the same time.

LED DISPLAY

The integrated LED display provides clear, real-time information about the power bank's battery status. When charging the power bank or charging a device, the display will show the current battery percentage from 0% to 100%.

SAFETY INFORMATION

The NOHON Power Bank is equipped with advanced safety features to protect both the device and your connected electronics.

- **Overcurrent Protection:** Prevents damage from excessive current flow.
- **Overvoltage Protection:** Safeguards against voltage spikes.
- **Short-Circuit Protection:** Automatically shuts down in case of a short circuit.
- **Over-Temperature Protection:** Monitors and regulates internal temperature to prevent overheating.

Always use the power bank in a well-ventilated area and avoid exposing it to extreme temperatures, direct sunlight, or moisture. Do not disassemble or attempt to repair the device.

Kompakt und Bequem zum Mitnehmen



The NOHON Power Bank incorporates multiple protection mechanisms for safe operation.

SPECIFICATIONS

Feature	Specification
Model Number	NX-P26
Battery Capacity	10000 mAh
Product Dimensions (L x W x H)	14.7 x 6.5 x 1.3 cm
Weight	300 g
USB-C Input/Output	18W MAX / 20W MAX
Micro USB Input	18W MAX
USB-A Output (x2)	22.5W MAX
Special Features	LED Indicator

Feature	Specification
Battery Composition	Lithium-polymer
Color	Black

TROUBLESHOOTING

- **Power Bank Not Charging:**

- Ensure the charging cable is securely connected to both the power bank's input port and the wall charger.
- Try a different charging cable or wall adapter.
- Verify the wall charger is functioning correctly.

- **Device Not Charging from Power Bank:**

- Ensure the power bank has sufficient charge (check LED display).
- Press the power button on the power bank to activate charging.
- Try a different output port on the power bank.
- Use a different charging cable for your device.
- Ensure your device is compatible with the power bank's output specifications.

- **Slow Charging:**

- Ensure both the power bank and your device support fast charging protocols (PD/QC 3.0).
- Use a high-quality, fast-charging compatible cable.
- Avoid charging multiple devices simultaneously if you require maximum speed for one device.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use liquid cleaners or aerosols.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to keep the power bank charged to about 50-75%.
- **Handling:** Avoid dropping or subjecting the power bank to strong impacts.

WARRANTY AND SUPPORT

The NOHON Power Bank comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact NOHON customer service through the retailer where you purchased the product or visit the official NOHON website for contact information.

