

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JOYIN](#) /

› [JOYIN 34-inch Animatronic Raincoat Boy Halloween Prop Instruction Manual](#)

JOYIN 16541

JOYIN 34-inch Animatronic Raincoat Boy Halloween Prop Instruction Manual

Model: 16541

1. INTRODUCTION

This manual provides essential instructions for the safe and proper setup, operation, and maintenance of your JOYIN 34-inch Animatronic Raincoat Boy Halloween Prop. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The JOYIN Animatronic Raincoat Boy Prop.

2. PRODUCT FEATURES

- **Life-Size Design:** Standing approximately 34 inches (86 cm) tall, this prop is designed to resemble a child in a yellow raincoat.
- **Interactive Activation:** Features sound-activated functionality, triggering movements, glowing eyes, and eerie sounds when a sound is detected within approximately 50 cm (20 inches).
- **Visual Effects:** Equipped with glowing red eyes for an enhanced spooky effect.
- **Durable Construction:** Crafted from plastic and resin materials for extended use.
- **Easy Assembly:** Designed for straightforward setup.

3. PACKAGE CONTENTS

Upon opening the package, please ensure all components are present and undamaged.

- 1 x JOYIN 34-inch Animatronic Raincoat Boy Prop
- Instruction Manual (this document)

Note: 3 AA batteries are required for operation and are not included in the package.

4. SETUP INSTRUCTIONS

- 1. Unpack the Prop:** Carefully remove the animatronic prop from its packaging.
- 2. Locate Battery Compartment:** The battery compartment is located on the back of the prop. You may need a small Phillips head screwdriver to open the cover.
- 3. Install Batteries:** Insert 3 new AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
- 4. Secure Battery Cover:** Replace the battery compartment cover and secure it with the screw.
- 5. Position the Prop:** Place the prop on a flat, stable surface. For outdoor use, ensure it is in a sheltered area to protect it from direct heavy rain or extreme weather conditions.
- 6. Activate:** Locate the ON/OFF switch, typically near the battery compartment, and switch it to the "ON" position.



Image 4.1: Battery installation for the prop.

5. OPERATING INSTRUCTIONS

The JOYIN Animatronic Raincoat Boy is designed for interactive operation:

- Once the prop is switched "ON" and batteries are installed, it enters a standby mode.
- The prop will activate when a sound is detected within approximately 50 cm (20 inches) of its sensor.
- Upon activation, the prop will exhibit eerie movements, its eyes will glow red, and it will emit creepy sounds.
- After a short sequence, the prop will return to standby mode, awaiting the next sound activation.



Image 5.1: Prop in activated state with glowing eyes.

6. MAINTENANCE

- **Cleaning:** Wipe the prop with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, store the prop in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries before extended storage to prevent leakage.
- **Battery Replacement:** Replace batteries when the prop's movements, lights, or sounds become weak or inconsistent. Always use new batteries of the same type.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Prop does not activate.	<ul style="list-style-type: none"> Batteries are dead or incorrectly installed. ON/OFF switch is in the "OFF" position. Sound sensor is obstructed or not detecting sound. 	<ul style="list-style-type: none"> Replace batteries with new ones, ensuring correct polarity. Switch the prop to the "ON" position. Ensure the area around the sensor is clear and test with a louder sound.
Lights or sounds are weak.	Low battery power.	Replace all batteries with new ones.
Prop activates unexpectedly.	High ambient noise or vibrations.	Relocate the prop to a quieter area or adjust its position.

8. SPECIFICATIONS

- Brand:** JOYIN
- Model Number:** 16541
- UPC:** 840332642192
- Height:** Approximately 34 inches (86 cm)
- Power Source:** 3 x AA Batteries (not included)
- Voltage:** 4.5 Volts (DC)
- Materials:** Plastic, Resin
- Color:** Yellow (Raincoat)
- Light Color:** Multicolor (for eyes)
- Item Weight:** 2.27 pounds (1.03 kg)
- Approximate Package Dimensions:** 2 x 2 x 1 inches (5.08 x 5.08 x 2.54 cm) *Note: These dimensions refer to packaging, not the prop's assembled size.*

9. SAFETY INFORMATION

- This product is intended for decorative purposes only. It is not a toy.
- Keep out of reach of small children and pets.
- Do not expose the prop to open flames, excessive heat, or prolonged direct sunlight.
- Avoid placing the prop in areas where it could be easily knocked over or damaged.
- For outdoor use, place in a covered or sheltered area to protect from heavy rain and strong winds.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information or product support, please contact JOYIN customer service through the retailer where the product was purchased or visit the official JOYIN website. Please have your model number

(16541) and proof of purchase available.

Manufacturer: Joyin US Corp

© 2025 JOYIN. All rights reserved.

Related Documents - 16541



[Trampoline Sprinkler Installation and Usage Guide](#)

Instructions for installing and using a trampoline sprinkler for outdoor summer fun. Learn how to connect the sprinkler to your water source and attach it to your trampoline.