

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VGR](#) /

› [VGR V-001 Professional Hair Clipper User Manual](#)

VGR V-001

VGR V-001 Professional Hair Clipper User Manual

Model: V-001 | Brand: VGR

1. INTRODUCTION

Thank you for choosing the VGR V-001 Professional Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper. Please read it thoroughly before first use and keep it for future reference.



Figure 1: VGR V-001 Professional Hair Clipper with Charging Stand

2. SAFETY INFORMATION

- Keep the appliance away from water and heat sources.
- Unplug the clipper before cleaning or performing any maintenance.
- This product is not a toy. Keep out of reach of children.
- Use only as instructed in this manual and with original VGR parts and accessories.
- Do not operate the clipper if it is damaged or malfunctioning.
- Ensure hands are dry before handling the power adapter or clipper.

3. WHAT'S IN THE BOX

Your VGR V-001 Professional Hair Clipper package includes the following items:

- 1x Professional Hair Clipper (V-001)
- 10x Guide Combs (ranging from 0.8mm to 24mm)
- 1x Charging Stand
- 1x Type-C USB Charging Cable
- 1x Charging Adapter
- 1x Blade Protection Cap
- 1x Cleaning Brush
- 1x Lubricating Oil Bottle
- 1x User Manual

4. SETUP AND CHARGING

4.1 Initial Charge

Before using your VGR V-001 hair clipper for the first time, ensure it is fully charged. Connect the Type-C USB charging cable to the clipper or the charging stand, and then connect the adapter to a power outlet. The LED display will indicate the charging status and battery percentage. A full charge typically takes about 3 hours for fast charging or 6 hours for slow charging.



Figure 2: Charging the VGR V-001 Hair Clipper

4.2 Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure the comb is securely attached before operation.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button to turn the clipper on or off. The LED display will illuminate, showing the current RPM speed and battery percentage.

5.2 Speed Adjustment

The VGR V-001 features a 21-level speed rotary knob, allowing you to adjust the motor speed from 7000 RPM to 9000 RPM. Rotate the knob clockwise to increase speed and counter-clockwise to decrease it. This allows for precise control for different hair types and styles.



Figure 3: Speed Adjustment Rotary Knob

5.3 Taper Lever Adjustment

The precision taper lever allows for fine-tuning of cutting lengths between 1.0mm and 3.0mm without changing guide combs. This is ideal for blending and fading. Push the lever up for shorter cuts and pull it down for longer cuts.



Figure 4: Taper Lever for Fine Adjustment

5.4 LED Light Operation

The built-in LED light provides enhanced visibility, especially in hard-to-reach areas. Press the dedicated LED light button to turn it on or off.



Figure 5: Built-in LED Light for Visibility

5.5 Corded or Cordless Use

The VGR V-001 can be used corded for continuous power or cordless for maximum flexibility and portability. A full charge provides up to 300 minutes of cordless operation.

6. MAINTENANCE

6.1 Cleaning the Blades

After each use, turn off the clipper and remove any attached guide comb. Use the provided cleaning brush to remove loose hairs from the blades. For a more thorough cleaning, the blade head can be detached. To detach, push the blade head forward with your thumb while holding the clipper body firmly. Reattach by aligning the blade head with the clipper body and pushing until it clicks.



Figure 6: DLC Diamond-Coated Ceramic Blades

6.2 Oiling the Blades

Regular oiling of the blades is crucial for maintaining optimal cutting performance and extending the life of your clipper. Apply a few drops of the provided lubricating oil to the blades after every few uses, or if the clipper starts to pull hair. Turn the clipper on for a few seconds to distribute the oil evenly, then wipe off any excess.

6.3 Storage

Store the clipper in a dry place, away from direct sunlight and extreme temperatures. Ensure the blade protection cap is in place to prevent damage to the blades.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on	Low battery or power issue	Charge the clipper fully. Ensure the power adapter and cable are correctly connected.
Clipper pulling hair	Blades are dull, dirty, or not oiled	Clean and oil the blades. If the problem persists, consider blade replacement.
Reduced cutting performance	Hair buildup in blades or low battery	Clean the blades thoroughly. Ensure the clipper is fully charged.
Unusual noise during operation	Blades not properly aligned or foreign object	Check blade alignment. Clean blades to remove any foreign objects.

If you encounter issues not listed here or if the problem persists after attempting the solutions, please contact VGR customer support.

8. SPECIFICATIONS

Feature	Detail
Model	V-001
Battery	3.7V / 4600mAh Lithium Battery
Rated Input	5V - 2A
Power	10W
Charging Time	Fast charge about 3 hours; Slow charge about 6 hours
Working Time (on full charge)	Up to 300 minutes (7000-9000 RPM)
Motor Type	High-speed motor
Range of Speeds	7000-9000 RPM (21 levels)
Taper Lever	1.0 / 1.5 / 2.0 / 2.5 / 3.0 mm
Blade Material	Ceramic & DLC Diamond Coating Blade
Dimensions (LxWxH)	18 x 5 x 5 cm
Item Weight	350 g

9. WARRANTY AND SUPPORT

The VGR V-001 Professional Hair Clipper comes with a standard brand warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included in your package or contact VGR customer service directly.

Customer Support Contact:

Email: customercare@vgrofficial.in

Phone: 9667796740 (10:00 AM to 6:00 PM, Monday to Saturday)

Website: www.vgrofficial.in

© 2026 VGR. All rights reserved.