

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

- › [Vieta Pro](#) /
- › Vieta Pro Dance Portable Bluetooth Speaker User Manual

## Vieta Pro Dance (VM-BS46LB)

# Vieta Pro Dance Portable Bluetooth Speaker

Model: Dance (VM-BS46LB)

## INTRODUCTION

---

Thank you for choosing the Vieta Pro Dance Portable Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

## WHAT'S IN THE BOX

---

- Vieta Pro Dance Portable Bluetooth Speaker
- USB-C Charging Cable
- User Manual (this document)

## PRODUCT OVERVIEW

---



The Vieta Pro Dance speaker, shown in pink, is designed to be waterproof, as indicated by the water splashes around it.





Side view of the speaker, displaying the power, volume, mode, and Bluetooth control buttons.



Close-up of the speaker's top, featuring the illuminated Vieta Pro logo, indicating power or connection status.

### Key Features:

- **Powerful Audio:** 25W output with TWS (True Wireless Stereo) and Dual Pairing for an immersive sound experience.
- **Extended Battery Life:** Up to 12 hours of continuous playback.
- **Versatile Connectivity:** Bluetooth, Aux-In (3.5mm jack), USB input for pendrives, and integrated FM

radio antenna.

- **Durable Design:** IPX7 waterproof and dustproof rating, ideal for outdoor activities.
- **Hands-Free & Voice Assistant:** Built-in microphone for calls and dedicated button for Alexa, Google Assistant, and Siri compatibility.

## SETUP

---

1. **Charging the Speaker:** Before first use, fully charge the speaker using the provided USB-C cable. Connect the USB-C end to the speaker's charging port and the USB-A end to a compatible USB power adapter (not included). The charging indicator light will show charging status.
2. **Power On/Off:** Press and hold the power button ( ) for 2-3 seconds to turn the speaker on or off.
3. **Bluetooth Pairing:**
  - When powered on, the speaker will automatically enter Bluetooth pairing mode (indicated by a flashing LED).
  - On your device (smartphone, tablet, laptop), enable Bluetooth and search for "Vieta Pro Dance" in the list of available devices.
  - Select the speaker to pair. A confirmation sound will indicate successful pairing.
4. **TWS (True Wireless Stereo) Pairing:** To pair two Vieta Pro Dance speakers for stereo sound:
  - Ensure both speakers are powered on and not connected to any other Bluetooth device.
  - On one speaker (this will be the primary speaker), double-press the Bluetooth button. It will search for the second speaker.
  - Once connected, both speakers will play audio in stereo.

## OPERATING INSTRUCTIONS

---

### Controls:

- **Power Button ( ):** Press and hold to power on/off.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Play/Pause/Call Button (▶/■ ■):** Short press to play/pause music. Short press to answer/end calls. Long press to reject calls.
- **Mode Button (M):** Short press to switch between Bluetooth, Aux-In, USB, and FM Radio modes.
- **Voice Assistant Button:** Short press to activate your device's voice assistant (Alexa, Google Assistant, Siri).

### Modes:

- **Bluetooth Mode:** Connect wirelessly to your devices.
- **Aux-In Mode:** Connect external audio devices using a 3.5mm audio cable (not included).
- **USB Mode:** Insert a USB pendrive with audio files to play directly from the speaker.
- **FM Radio Mode:** The speaker has an integrated antenna. Press the Play/Pause button to auto-scan and save stations. Use volume buttons to navigate stations.

## MAINTENANCE

---

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** While IPX7 rated, avoid prolonged submersion or exposure to high-pressure water jets. Ensure the charging port cover is securely closed before exposure to water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device.	Ensure speaker is in pairing mode (flashing LED). Disconnect from other devices. Restart both speaker and device.
No sound.	Volume too low; incorrect mode; device not playing.	Increase volume on both speaker and device. Check speaker mode (Bluetooth, Aux, USB). Ensure audio is playing on the connected device.
Poor FM radio reception.	Weak signal.	Relocate the speaker to an area with better signal.

## SPECIFICATIONS

<b>Model Name:</b>	Dance
<b>Model Reference:</b>	VM-BS46LB
<b>Brand:</b>	Vieta Pro
<b>Max Output Power:</b>	25 Watt
<b>Connectivity Technology:</b>	Bluetooth
<b>Audio Output Mode:</b>	Stereo
<b>Battery Life:</b>	12 Hours
<b>Waterproof Rating:</b>	IPX7
<b>Dimensions (L x W x H):</b>	7.4 x 7.4 x 19.1 cm
<b>Weight:</b>	920 grams
<b>Compatible Devices:</b>	Laptop, Smartphone, Tablet
<b>Components Included:</b>	Charging cable

## WARRANTY AND SUPPORT

---

Vieta Pro products are designed for durability and performance. For specific warranty information and terms, please refer to the warranty card included with your product or visit the official Vieta Pro website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or service inquiries, please contact Vieta Pro customer support through their official channels. Contact information can typically be found on the product packaging or the brand's official website.

---

© 2024 Vieta Pro. All rights reserved.