

- Manuals.plus /
- › [ASHATA](#) /
- › ASHATA Belt Clips for TC-Series Radios - Instruction Manual

ASHATA ASHATAAtqw93xh5se

Instruction Manual: ASHATA Belt Clips for TC-Series Radios

Model: ASHATAAtqw93xh5se

PRODUCT OVERVIEW

The ASHATA Belt Clips are designed as replacement accessories for various portable dual-way radios, including the TC-610, TC-500S, TC-508, TC-700, and TC-780 models. These clips provide a secure and convenient method for carrying your radio on a belt or in a pocket, preventing accidental drops and ensuring easy access.

Constructed from durable ABS material, these clips offer strong toughness, high strength, and wear resistance while remaining lightweight. The compact design ensures they do not add significant bulk to your radio.

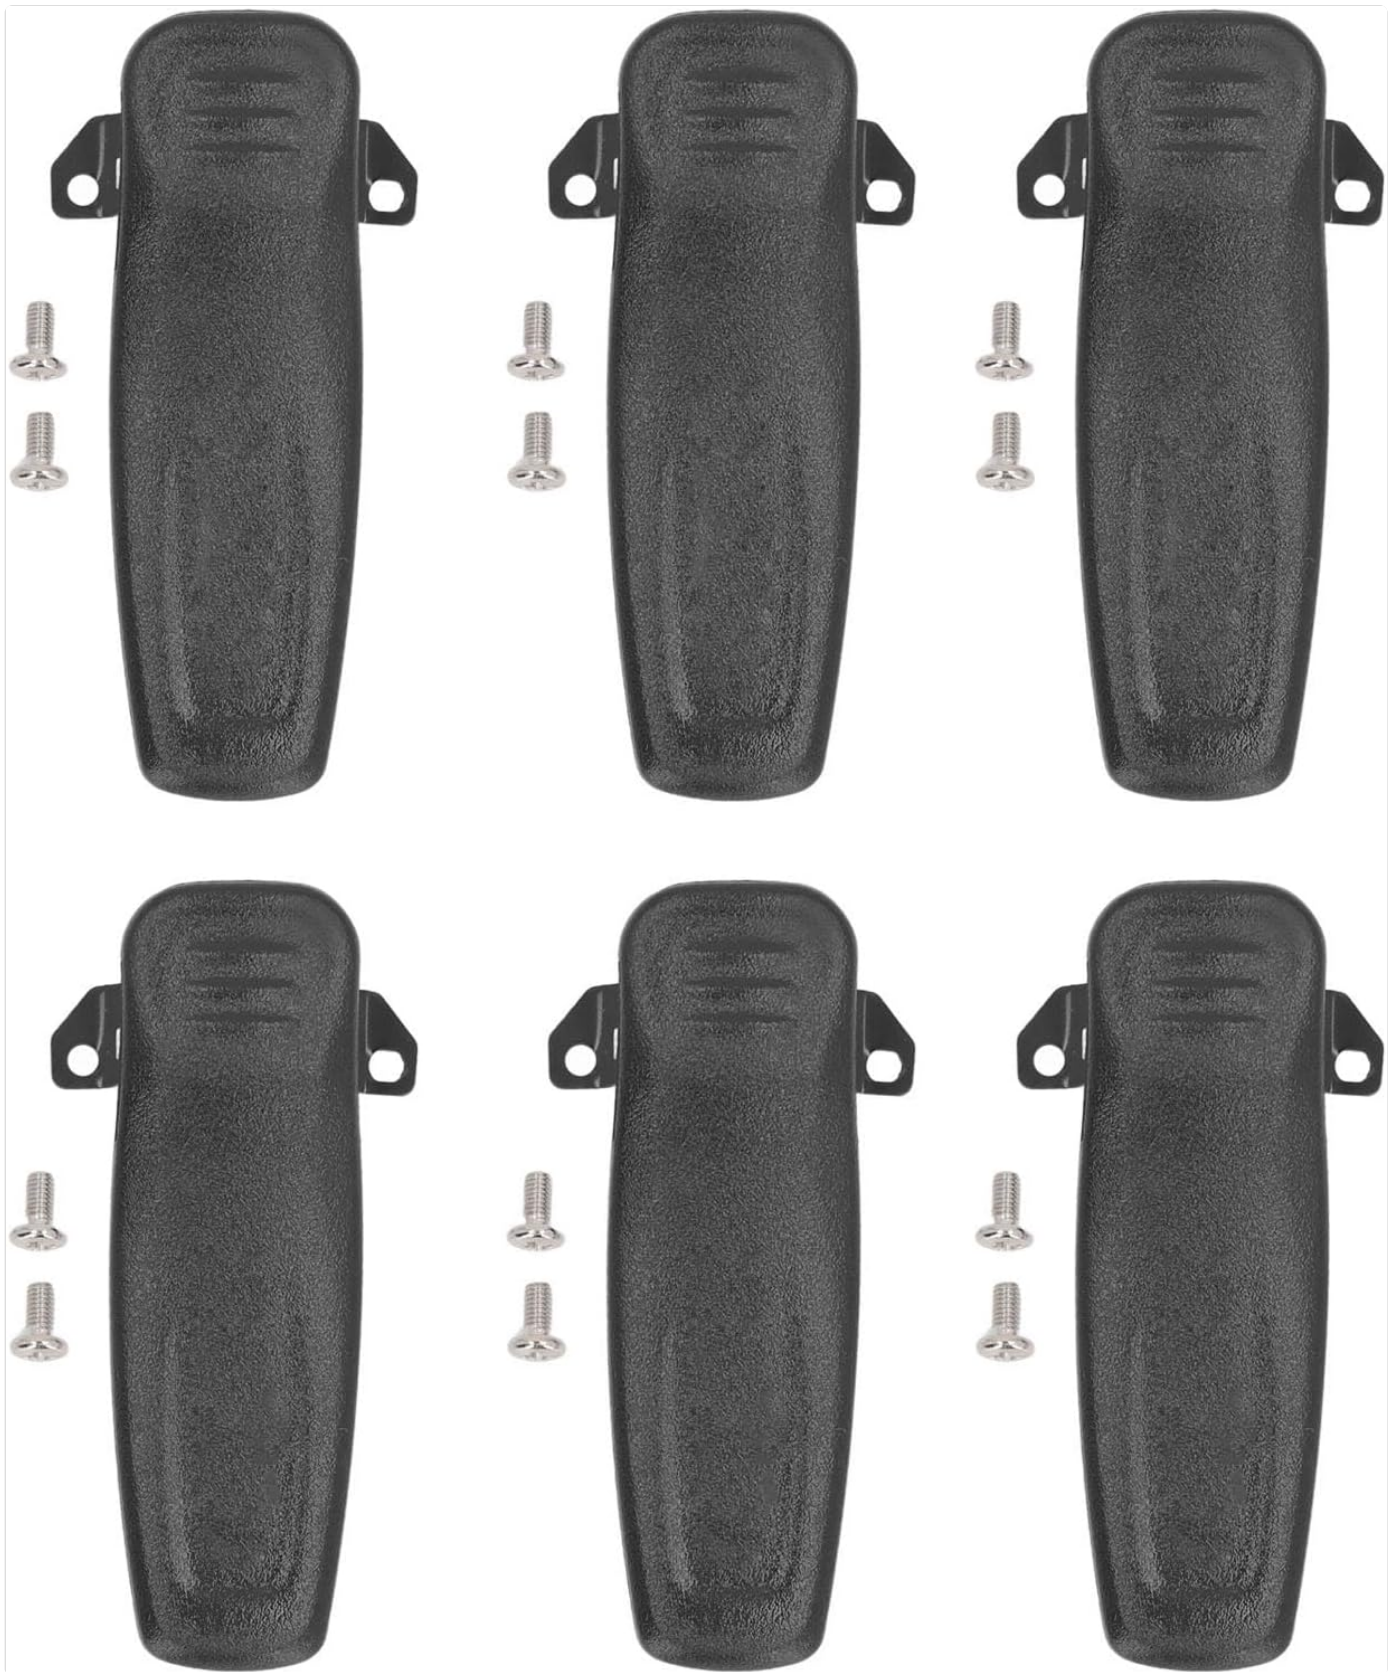 


Figure 1: Complete set of 6 ASHATA belt clips and 12 mounting screws.

COMPATIBILITY

These belt clips are specifically designed for compatibility with the following portable dual-way radio models:

- TC-610
- TC-500S
- TC-508

- TC-700
- TC-780

Ensure your radio model matches one of the listed compatible devices for proper fit and function.



INTERCOM RADIO BELT CLIP

Applicable Model:

For HYT TC-610, TC-500S, TC-508, TC-700,
TC-780

ABS material, secure and reliable

Compact design, easy to install and replace

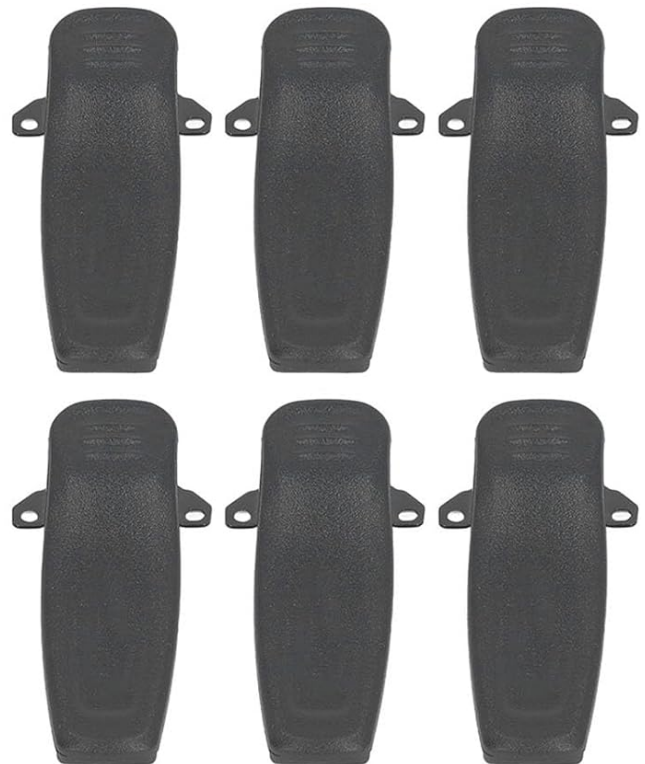 


Figure 2: Visual representation of the belt clips and their compatible radio models.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged. The standard package includes:

- **6 x** Intercom Belt Clips
- **12 x** Screws (2 screws per clip for secure attachment)

SETUP AND INSTALLATION

Installing the ASHATA belt clip onto your compatible two-way radio is a straightforward process. Follow these steps for secure attachment:

1. **Identify Mounting Points:** Locate the designated screw holes on the back of your two-way radio where the belt clip is intended to be attached. These are typically two small, threaded holes.

2. **Position the Clip:** Align the screw holes on the belt clip with the mounting points on your radio. Ensure the clip is oriented correctly, with the clip mechanism facing outwards.
3. **Insert Screws:** Take two of the provided screws. Carefully insert one screw into each of the aligned holes.
4. **Tighten Screws:** Using a suitable small screwdriver (not included), gently tighten the screws. Do not overtighten, as this could strip the threads or damage the radio casing. Tighten until the clip is firmly secured and does not wobble.
5. **Verify Security:** Once tightened, gently tug on the belt clip to ensure it is securely fastened to the radio. It should not move or feel loose.



Figure 3: Detailed view of the belt clip's attachment mechanism, highlighting the screw points.

OPERATING INSTRUCTIONS

Once the belt clip is securely attached to your radio, you can utilize it for convenient carrying:

- **Attaching to Belt/Pocket:** Slide the radio, with the attached belt clip, onto your belt, waistband, or the edge of a pocket. The clip's spring mechanism will hold it firmly in place.
- **Removing from Belt/Pocket:** To remove the radio, simply lift it upwards, disengaging the clip from your belt or pocket.
- **Secure Placement:** Always ensure the clip is fully engaged with your clothing or gear to prevent the radio from accidentally falling.

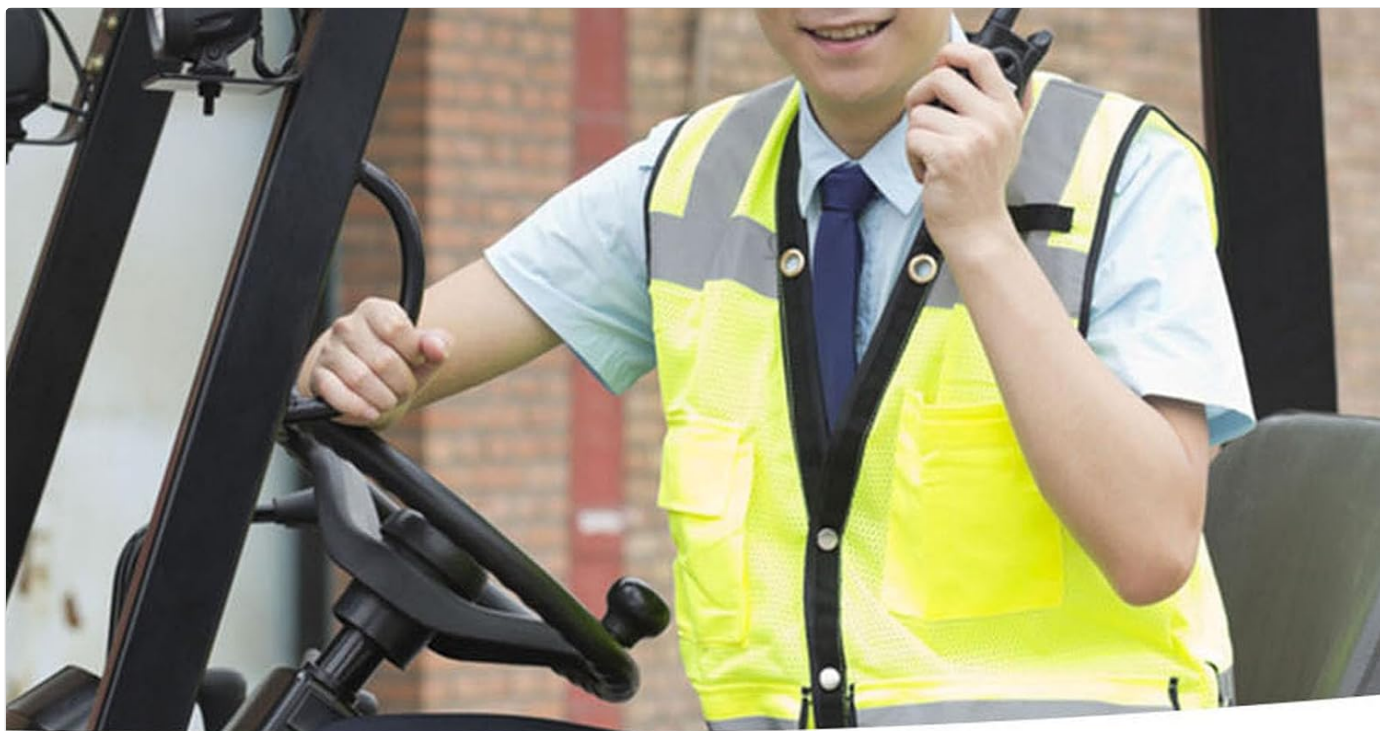


Figure 4: Example of a two-way radio being used while secured with a belt clip.

MAINTENANCE

To ensure the longevity and proper function of your ASHATA belt clips, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the clips periodically with a soft, damp cloth to remove dust and grime. Avoid using harsh chemicals or abrasive cleaners, as these can damage the ABS material.
- **Inspection:** Regularly inspect the clips for any signs of wear, cracks, or damage, especially around the screw holes and the spring mechanism.
- **Screw Tightness:** Periodically check the tightness of the mounting screws. If they feel loose, gently retighten them to prevent the clip from detaching.
- **Storage:** When not in use, store the clips in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your belt clips, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clip feels loose on the radio.	Mounting screws are loose.	Gently retighten the mounting screws. Do not overtighten.
Radio falls off belt/pocket easily.	Clip not fully engaged or worn spring mechanism.	Ensure the clip is fully engaged. If the spring is weak, the clip may need replacement.
Clip does not fit the radio.	Incompatible radio model.	Verify your radio model against the compatibility list in this manual.

SPECIFICATIONS

Feature	Detail
Item Type	Radio Belt Clip
Applicable Models	TC-610, TC-500S, TC-508, TC-700, TC-780 Portable Dual Way Radio
Material	ABS
Color	Black
Package Dimensions	4.72 x 3.94 x 0.79 inches
Item Weight	2.43 ounces (for the set)
Included Components	6 x Intercom Belt Clips, 12 x Screws

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the retailer's policy where the product was purchased or visit the official ASHATA brand store online. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact ASHATA customer service through their official channels, if available.

Note: Specific warranty terms may vary by region and retailer.

© 2024 ASHATA. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3FFX4T3>

More documents and user manuals: <https://manuals.plus/>