

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Kiddieland](#) /

› Kiddieland Disney Princess Animated Lights Activity Plane Ride On Instruction Manual

Kiddieland 064055

Kiddieland Disney Princess Animated Lights Activity Plane Ride On Instruction Manual

Model: 064055
Brand: Kiddieland

INTRODUCTION

This manual provides essential information for the safe and proper use of your Disney Princess Animated Lights Activity Plane Ride On. Designed for children aged 12 months to 3 years, this interactive ride-on toy offers engaging features including fun sounds, colorful lights, and rotating propellers. Please read all instructions carefully before assembly and use.

SAFETY INFORMATION

WARNING: To prevent serious injury:

- Product is designed for children from 12 to 36 months of age.
- Rider's weight must not exceed 25 kg (55 lbs) as there is insufficient strength to support overweight.
- Adult supervision is required at all times.
- Ensure all parts are securely assembled before use.
- Do not use near stairs, hills, roadways, or swimming pools.
- Always ensure the child is seated properly before moving the ride-on.

WHAT'S IN THE BOX

- Disney Princess Animated Lights Activity Plane Ride On (Main Unit)
- Push Handle
- 3 AA Batteries (included)

SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts listed in "What's in the Box" are present.
2. **Battery Installation:**

- Locate the battery compartment, usually on the underside or dashboard of the ride-on.
- Using a screwdriver, open the battery compartment cover.
- Insert 3 AA batteries, ensuring correct polarity (+/-). The batteries are included with the product.
- Replace the cover and secure it with the screw.

3. **Attach Push Handle:** Insert the push handle into the designated slot at the rear of the ride-on until it clicks securely into place. Ensure it is firmly attached before use.



Image: Rear view of the Disney Princess Activity Plane Ride On, highlighting the purple push handle for adult assistance.

4. **Initial Check:** Before allowing a child to use the toy, verify that all parts are correctly assembled and secure. Test all interactive features (lights, sounds) to ensure they are working properly.

OPERATING INSTRUCTIONS

The Disney Princess Activity Plane Ride On offers various interactive features for an engaging play experience:

- **Steering Wheel:** The steering wheel allows the child to control the direction of the ride-on. It also features electronic sounds.
- **Dashboard Activities:** The dashboard includes various buttons and switches that activate fun sounds and colorful lights. Explore each button to discover different interactive elements.



Image: Detailed view of the interactive dashboard with buttons and lights.

- **Animated Lights:** Observe the colorful lights that flash animated characters and patterns, enhancing the play experience.
- **Rotating Propellers:** The soft propellers can be rotated manually for additional interactive fun.
- **Push-Along Fun:** For younger children or when extra assistance is needed, an adult can use the rear push handle to guide the ride-on.



Image: A child enjoying the Disney Princess Activity Plane Ride On.

MAINTENANCE

- **Cleaning:** Wipe the ride-on surface with a damp cloth and mild soap. Do not immerse in water. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** If sounds or lights become faint or stop working, replace the 3 AA batteries. Always use new batteries of the same type. Do not mix old and new batteries.

- **Storage:** Store the ride-on in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Problem	Solution
No sounds or lights	Check battery installation. Replace with new AA batteries if necessary. Ensure the power switch (if present) is in the "ON" position.
Propellers not spinning freely	Check for any obstructions around the propellers. Ensure they are not damaged.
Ride-on does not move smoothly	Inspect wheels for debris or damage. Ensure the surface is flat and clear.

SPECIFICATIONS

- **Model Number:** 064055
- **Product Dimensions:** 10.8 x 17.52 x 14.96 inches
- **Item Weight:** 5.1 pounds
- **Recommended Age:** 12 months - 3 years
- **Maximum Weight Capacity:** 55 lbs (25 kg)
- **Batteries:** 3 AA batteries (included)
- **Manufacturer:** Kiddieland Toys Limited
- **Release Date:** July 1, 2024

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Kiddieland website. Keep your purchase receipt for proof of purchase.
