

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IMOULIVE](#) /

› [IMOULIVE 8-inch Mini Cordless Chainsaw User Manual](#)

IMOULIVE DLJ08

IMOULIVE 8-inch Mini Cordless Chainsaw User Manual

Model: DLJ08

1. INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your IMOULIVE 8-inch Mini Cordless Chainsaw. Please read this manual thoroughly before initial use to ensure proper handling and to prevent injury or damage. The IMOULIVE 8-inch Mini Cordless Chainsaw is designed for light to medium-duty cutting tasks such as trimming branches, pruning trees, and cutting small logs. It features a brushless motor, auto-oiling system, and comes with two 3.0Ah batteries for extended use.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury when operating power tools.

General Safety Rules:

- **Read the entire manual:** Understand all instructions and warnings before operating the chainsaw.
- **Wear appropriate personal protective equipment (PPE):** Always wear safety goggles, gloves, hearing protection, and sturdy footwear. A hard hat and face shield are also recommended.
- **Maintain a safe working area:** Keep the area clear of bystanders, children, and pets. Ensure good footing and balance.
- **Inspect the chainsaw before each use:** Check for loose parts, damage, or wear. Ensure the chain is properly tensioned and lubricated.
- **Avoid accidental starting:** Ensure the safety lock is engaged when not cutting and remove the battery during assembly, adjustment, or cleaning.
- **Do not overreach:** Maintain proper footing and balance at all times.
- **Be aware of kickback:** Kickback can occur when the moving chain contacts an object at the upper tip of the guide bar or when the wood closes in and pinches the saw chain in the cut. Avoid cutting with the tip of the guide bar.
- **Use both hands:** Always operate the chainsaw with both hands firmly gripping the handles.
- **Do not operate in wet conditions:** Avoid using the chainsaw in rain or damp environments.
- **Store safely:** When not in use, store the chainsaw in a dry, secure place out of reach of children.

PROTECT WITH FLAIR



Image: Safety features of the IMOULIVE mini chainsaw, highlighting the goggles, handguard, handles, and safety lock for user protection.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your IMOULIVE mini chainsaw.

Lunrication System



Image: Labeled diagram of the chainsaw components, including the lubrication system, safety switch, splash guards, brushless motor, and battery compartment.

- **Guide Bar:** The metal bar that supports and guides the saw chain.
- **Saw Chain:** The cutting chain that rotates around the guide bar.
- **Handguard/Splash Guards:** Protects the operator's hand from debris and the chain.
- **Front Handle:** For gripping the chainsaw with the non-dominant hand.
- **Rear Handle:** For gripping the chainsaw with the dominant hand, containing the trigger and safety lock.
- **Safety Lock Button:** Prevents accidental starting.
- **Trigger Switch:** Activates the motor when pressed.
- **Battery Compartment:** Houses the rechargeable battery.
- **Oil Reservoir/Lubrication System:** For automatic chain lubrication.
- **Chain Tensioner:** Mechanism for adjusting chain tension.
- **Brushless Motor:** Provides efficient and powerful cutting.

4. PACKAGE CONTENTS

Verify that all items are present in your package:



Image: The complete package contents, showing the chainsaw, two batteries, charger, case, goggles, and assembly tools.

- 1 x IMOULIVE 8-inch Mini Cordless Chainsaw
- 2 x 3.0Ah Lithium-ion Batteries
- 1 x Battery Charger
- 1 x Guide Bar
- 2 x Saw Chains (one pre-installed, one spare)
- 1 x Carrying Case
- 1 x Safety Goggles
- 1 x Screwdriver/Wrench Tool
- 1 x User Manual

5. SETUP AND ASSEMBLY

5.1. Battery Charging

1. Insert the battery into the charger.
2. Plug the charger into a standard electrical outlet.
3. The indicator light on the battery will show charging status. A full charge typically takes approximately 1 hour.
4. Remove the battery once fully charged.

**3.0 Ah ADVANCED BATTERIES
HOLDS POWER FOR UP TO
120 MIN IN WORK**



Image: The 3.0Ah batteries, indicating their capacity and charging time.

5.2. Guide Bar and Chain Installation

Warning: Ensure the battery is removed before performing any assembly or maintenance.

1. Loosen the chain tensioner knob and remove the side cover.
2. Place the saw chain around the sprocket and guide bar, ensuring the cutting edges face the correct direction (refer to chain direction indicator on the guide bar).
3. Fit the guide bar onto the mounting studs, ensuring the chain is seated correctly in the guide bar groove.
4. Replace the side cover and partially tighten the tensioner knob.
5. Adjust the chain tension (see Section 7.2).
6. Fully tighten the tensioner knob once tension is correct.

5.3. Adding Chain Oil (Auto-Oiler)

The chainsaw features an automatic oiling system. Use only high-quality bar and chain oil.

1. Locate the oil reservoir cap on the top of the chainsaw body.
2. Unscrew the cap and fill the reservoir with bar and chain oil. Do not overfill.

3. Securely replace the cap.
4. Periodically check the oil level during operation and refill as needed.



Image: Demonstrating the process of adding lubricating oil to the chainsaw's auto-oiling system.

6. OPERATING INSTRUCTIONS

6.1. Starting the Chainsaw

1. Ensure the battery is fully charged and securely inserted into the chainsaw.
2. Hold the chainsaw firmly with both hands.
3. Press and hold the safety lock button (usually located on the side of the handle).
4. While holding the safety lock, squeeze the trigger switch to start the motor.
5. Release the safety lock button once the motor starts, but continue to hold the trigger for operation.

Image: The safety lock and trigger mechanism, designed for secure operation.

6.2. Cutting Techniques

- **Always plan your cut:** Identify the direction of fall and clear the area.
- **Start with a stable stance:** Ensure firm footing and balance.
- **Engage the chain before contacting wood:** Allow the chain to reach full speed before beginning the cut.
- **Let the saw do the work:** Apply light pressure. Forcing the saw can lead to kickback or damage.
- **Avoid cutting with the tip:** This is the primary cause of kickback.
- **Be mindful of pinching:** When cutting branches under tension, make relief cuts to prevent the saw from getting pinched.



Image: The chainsaw in action, demonstrating its cutting capability on a log.

Image: Examples of the chainsaw's versatility in different cutting applications.

6.3. Stopping the Chainsaw

Release the trigger switch. The chain will stop rotating. Always engage the safety lock when not actively cutting.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your chainsaw. Always remove the battery before performing any maintenance.

7.1. Cleaning

- After each use, clean sawdust and debris from the guide bar, chain, and motor housing.
- Use a brush or compressed air. Do not use water or solvents.
- Ensure the oil reservoir and cap are clean.

7.2. Chain Tension Adjustment

Proper chain tension is crucial for safe and efficient operation. A chain that is too loose can derail, and a chain that is too tight can cause excessive wear and damage.

1. Loosen the side cover knob slightly.
2. Turn the chain tensioner screw (usually located near the guide bar) clockwise to tighten the chain or counter-clockwise to loosen it.
3. The chain is correctly tensioned when it can be pulled away from the guide bar by about 1/8 to 1/4 inch (3-6 mm) at the center, and still snaps back into place.
4. Once tension is correct, firmly tighten the side cover knob.

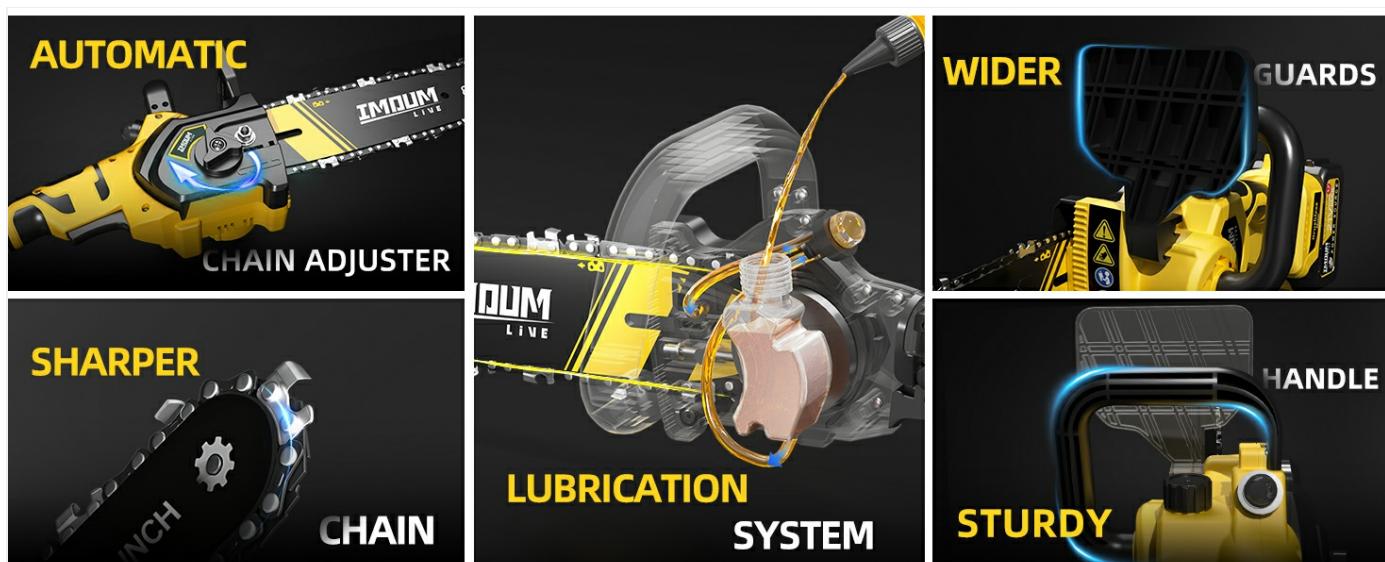


Image: Diagram illustrating the automatic chain adjuster and other key features.

7.3. Chain Sharpening/Replacement

- A dull chain will cut slowly and require more force. Sharpen the chain regularly using a suitable round file (refer to chain specifications for correct file size).
- If the chain is damaged or excessively worn, replace it with a new IMOULIVE 8-inch replacement chain.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or improperly inserted. Safety lock not engaged.	Ensure battery is fully charged and correctly inserted. Press safety lock button before squeezing trigger.
Chain does not move or moves slowly.	Chain tension too tight. Chain dull or damaged. Debris obstructing chain.	Adjust chain tension. Sharpen or replace chain. Clean guide bar groove and sprocket area.

Problem	Possible Cause	Solution
Chainsaw cuts poorly or unevenly.	Dull chain. Incorrect chain tension.	Sharpen or replace chain. Adjust chain tension.
Excessive vibration.	Loose components. Damaged chain or guide bar.	Check all fasteners. Inspect chain and guide bar for damage; replace if necessary.
Oil leakage.	Oil reservoir cap loose. Damaged oil seal.	Ensure oil cap is tightly secured. If leakage persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	IMOULIVE
Model Number	DLJ08
Power Source	Battery Powered
Motor Type	Brushless Motor
Horsepower	900 Watts
Item Weight	4 Pounds (approx. 1.8 kg)
Product Dimensions	9" L x 6" W x 19" H (approx. 22.86cm L x 15.24cm W x 48.26cm H)
Chain Length	8 Inches (approx. 20.32 cm)
Chain Speed	29 ft/s (approx. 8.8 m/s)
Battery Type	Lithium-ion (2 x 3.0Ah included)
Battery Voltage	21V MAX
Charging Time	Approx. 1 hour per battery
Run Time	Up to 120 minutes per charge (with dual batteries)
Oiling System	Automatic

10. WARRANTY AND SUPPORT

IMOULIVE offers a 365-day replacement policy and 24/7 customer service for this product.

For warranty claims, technical support, or any inquiries, please contact IMOULIVE customer service through the retailer where the product was purchased or visit the official IMOULIVE store online.

Note: The extension pole is sold separately and is not included with this chainsaw model.

Image: The chainsaw shown with an optional extension pole, which is sold separately.

Related Documents - DLJ08

	<p>IMOULIVE DLJ-6 6-Inch Mini Chainsaw User Manual</p> <p>Comprehensive user manual for the IMOULIVE DLJ-6 6-inch mini chainsaw, covering safety instructions, specifications, operation, maintenance, and troubleshooting for this cordless electric power tool.</p>
	<p>Mini Electric Chainsaw 6 Inch User Manual</p> <p>User manual for the IMOULIVE Mini Electric Chainsaw 6 Inch (DLJS6), covering product information, technical specifications, battery charging, usage, maintenance, and safety precautions.</p>
	<p>Electric Brushless Chainsaw 12 Inch User Manual (DLJ12) - IMOULIVE</p> <p>Comprehensive user manual for the IMOULIVE Electric Brushless Chainsaw 12 Inch (Model DLJ12), covering safety rules, assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>IMOULIVE 6-Inch Mini Chainsaw User Manual - Safety, Specifications, and Operation</p> <p>Comprehensive user manual for the IMOULIVE DLJ-6 6-Inch Mini Chainsaw. Includes safety warnings, specifications, operating instructions, maintenance, troubleshooting, and warranty information.</p>
	<p>IMOULIVE DCCYJ Leaf Blower Quick Start Guide</p> <p>Get started quickly with the IMOULIVE DCCYJ cordless leaf blower. This guide covers installation, operation modes (blowing and vacuum), specifications, and advantages for efficient yard work.</p>