

[Manuals.plus](#) /

> [BENFUCHEN](#) /

> BENFUCHEN Portable Electric Espresso Machine EM2218 User Manual

BENFUCHEN EM2218

BENFUCHEN Portable Electric Espresso Machine EM2218 User Manual

Model: EM2218

1. INTRODUCTION

Thank you for choosing the BENFUCHEN Portable Electric Espresso Machine. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before first use and keep it for future reference. This machine is designed for preparing espresso using either ground coffee or compatible capsules, offering convenience for travel, camping, office, or home use.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your espresso machine:

PORTABLE ESPRESSO MAKER



Figure 1: Exploded view of the BENFUCHEN Portable Electric Espresso Machine components.

1. **Upper Cover:** Protects the water tank opening.
2. **Water Tank:** Holds water for brewing.
3. **Body:** Main housing containing the battery and heating element.
4. **Switch:** Power and operation button.
5. **Indicator Light:** Displays battery status and operation mode.
6. **Coffee Powder Adapter:** Used for brewing with ground coffee.
7. **Coffee Capsule Adapter:** Used for brewing with compatible coffee capsules.
8. **Portafilter:** Holds the coffee adapter.
9. **Type-C Charging Port:** For charging the internal battery.
10. **Coffee Cup:** Detachable cup for collecting brewed espresso.

3. FEATURES

- **Fast Self-Heating:** Heats cold water in 3-4 minutes; instant brewing with hot water.
- **Powerful Battery:** 7800mAh battery, 2-hour full charge via USB-C. Brews 200+ cups with hot water, 3-5 cups with cold water heating.
- **2-in-1 Multi-Function:** Compatible with ground coffee and aluminum NS capsules (e.g., Nespresso, Starbucks).
- **Rich, Creamy Espresso:** Achieves 92°C/198°F and 19 bars pressure for optimal extraction.
- **Portable & Leakproof:** Insulated design prevents leakage and scalding. Lightweight and easy to transport.
- **One-Button Operation:** Simple control for heating and extraction.
- **3.2-inch Taller Cup:** Allows for hands-free brewing.

4. SETUP

Before first use, ensure the device is fully charged. Connect the included USB-C cable and fast charger to the charging port. The indicator lights will show charging progress.

Preparing Coffee:

19BAR STABLE PRESSURE EXTRACTION

Extracting rich crema and
Blooming with pure flavor



high-pressure
extraction



One button
operation



Figure 2: Step-by-step guide for preparing coffee.

1. Unscrew the coffee cup from the main body.
2. Unscrew the portafilter from the main body.
3. Remove the ground coffee adapter or capsule adapter from the portafilter.

For Ground Coffee:

- Fill 7-8g of fine ground coffee (dark or medium roasted recommended) into the coffee powder adapter.
- Press the coffee flat with the included tamper.
- Insert the filled coffee powder adapter into the portafilter.

For Coffee Capsules:

- Place one compatible aluminum NS capsule firmly into the coffee capsule adapter.
- Insert the capsule adapter into the portafilter.

After preparing your coffee, screw the portafilter back onto the machine tightly. Ensure it is secure to prevent leakage. Then, screw the coffee cup back onto the bottom of the machine.

5. OPERATING INSTRUCTIONS

Adding Water:

Professional Pressure of 19 Bars
BENFUCHEN Portable Espresso Machine Delivers Great Espresso with Smooth Flavor and Rich Crema

2-in-1 Extraction System

For Ground Coffee

For NS Aluminum Coffee Pods

Figure 3: Water heating and brewing modes.

- Remove the upper cover of the water tank.
- Add 50ml or 80ml of water into the water tank.
- **For Hot Water:** Use pre-heated water for instant brewing.
- **For Cold Water:** The machine will heat the water. This takes approximately 3-4 minutes for 50ml and 6-7 minutes for 80ml.
- Replace the upper cover securely.

Brewing Espresso:

Your browser does not support the video tag.

Video 1: On the Go with BENFUCHEN Portable Espresso Maker. This video demonstrates the BENFUCHEN Portable Electric Espresso Machine in various outdoor settings, showcasing its ease of use and portability for making espresso on the go.

- **To Brew with Pre-heated Water (Brewing Mode):** Double-click the power button to start extraction directly.
- **To Heat Cold Water and Brew (Heating Mode):** Press and hold the power button for 2 seconds. Release the button after a beep sound. The machine will begin heating the water, then automatically proceed to extraction once the optimal temperature is reached.

Your browser does not support the video tag.

Video 2: BENFUCHEN Portable Electric Espresso Machine for Travel. A detailed video guide on preparing and brewing espresso with the BENFUCHEN Portable Electric Espresso Machine, highlighting the steps for capsule insertion and water filling.

The machine will automatically stop once brewing is complete. Enjoy your fresh espresso!



Figure 4: Hands-free brewing into the detachable cup.

6. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your espresso machine.

- **After Each Use:** Disassemble the portafilter, coffee adapter, and cup. Rinse all removable parts with clean water.
- **Main Body:** Wipe the main body with a damp cloth. Do not immerse the main body in water.
- **Drying:** Ensure all parts are completely dry before reassembling or storing.
- **Dishwasher Safety:** The machine is NOT dishwasher safe.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No espresso or weak flow	Insufficient water, clogged adapter, loose portafilter, low battery.	Ensure water tank is filled. Clean coffee adapter. Tighten portafilter. Charge battery.
Water leakage	Portafilter not screwed on tightly, damaged seal.	Ensure portafilter is securely tightened. Check seals for damage and replace if necessary.
Machine not heating water	Low battery, incorrect operation mode.	Charge the battery fully. Ensure you press and hold the button for 2 seconds to activate heating mode.
Espresso is not hot enough	Insufficient heating time, cold water used.	Allow sufficient time for cold water to heat. For hotter espresso, use pre-heated water.
Indicator lights not working	Low battery, device malfunction.	Charge the device. If problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BENFUCHEN
Model Name	Portable Electric Espresso Machine (EM2218)
Color	WHITE
Product Dimensions	2.95"D x 2.95"W x 9.76"H
Item Weight	2.1 pounds
Coffee Maker Type	Espresso Machine
Special Feature	Portable, Self-Heating
Coffee Input Type	Ground Coffee, Capsules
Operation Mode	Fully Automatic
Capacity	80 Milliliters
Battery	1 x 12V (included)
Charging	USB-C (cable & fast charger included)

9. WARRANTY & SUPPORT

Your BENFUCHEN Portable Electric Espresso Machine is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the documentation included with your purchase or contact BENFUCHEN customer support.

If you have any questions, require assistance, or need to report an issue, please reach out to our customer support team. Contact information can typically be found on our official website or on the product packaging.

