

[Manuals.plus](#) /

› [Soundfreaq](#) /

› Soundfreaq Charge Rise II SFQ-20 Digital Alarm Clock User Manual

Soundfreaq SFQ-20

Soundfreaq Charge Rise II SFQ-20 Digital Alarm Clock User Manual

Model: SFQ-20

1. INTRODUCTION

Welcome to the Soundfreaq Charge Rise II SFQ-20 Digital Alarm Clock user manual. This device combines a digital alarm clock with convenient charging capabilities, including both wireless and USB charging. It features a large LED screen with adjustable brightness, dual alarms, and displays time, day, and temperature.

DIGITAL ALARM CLOCK WITH SNOOZE

Large LED screen with 4 dimming levels



Dual Alarms



Dimmer Control



Thermometer



Image 1: Front view of the Soundfreak Charge Rise II Digital Alarm Clock, showing the large LED display with time, temperature, and dual alarm indicators.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Soundfreak Charge Rise II Digital Alarm Clock (with built-in CR2032 battery for settings backup)
- 20W Power Adapter
- 6ft Charging Cable
- User Guide (this document)

IN THE BOX

1. Charge Rise II (CR2032 battery installed for Settings Backup)
2. 20W Power Adaptor
3. 6ft Charging Cable



Image 2: The Soundfreaq Charge Rise II alarm clock, 20W power adapter, and 6ft charging cable as packaged in the box.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Soundfreaq Charge Rise II.

3.1. Front Display

- **Large LED Screen:** Displays time, day, and temperature.
- **Wireless Charging Pad:** Located on the base for Qi-compatible devices.

3.2. Side Controls

- **'M' Button (Mode/Time Set):** Short press to cycle through time, date, and alarm settings. Long press to enter setting mode.
- **'+/-' Buttons:** Adjust values during setting mode (e.g., hour, minute, year).
- **Calendar Button:** Long press to set YEAR/MONTH/DAY.
- **Dimmer Control:** Adjusts the brightness of the LED display (Max >> Medium >> Minimum >> Off).
- **USB Charging Port:** For charging other devices via USB cable.



Image 3: Close-up of the side buttons on the Soundfreak Charge Rise II, including the 'M' (Mode), '+/-', and Calendar buttons.

4. SETUP

4.1. Initial Power-Up

1. Connect the provided 6ft charging cable to the alarm clock and the 20W power adapter.
2. Plug the power adapter into a wall outlet. The display will light up.
3. The built-in CR2032 battery ensures settings are retained during power outages.

4.2. Setting Time and Date

1. **Set Year/Month/Day:** Long press the **CALENDAR** button (left side) until the YEAR flashes. Use the **+** or **-** buttons to adjust. Short press **CALENDAR** to confirm and move to the next setting (MONTH, then DAY).
2. **Set Time:** Short press the **M** button (right side) to cycle to the time display. Long press the **M** button until the HOUR flashes. Use the **+** or **-** buttons to adjust the hour. Short press **M** to confirm and move to minutes. Repeat for minutes. Short press **M** again to exit time setting.

SETTING CALENDAR

Long press **CALENDAR** to start setting YEAR / MONTH / DAY

1. Press **+**/**-** to increase/decrease the settings
2. Press **CALENDAR** to confirm the settings



Image 4: The alarm clock display showing the calendar setting, with the 'CALENDAR' button indicated for adjustment.

5. OPERATING INSTRUCTIONS

5.1. Setting Dual Alarms

1. Long press the **M** button to enter alarm setting mode. The display will show 'Alarm 1'.

2. Use the **+** or **-** buttons to set the desired hour for Alarm 1. Short press **M** to confirm and move to minutes.
3. Repeat for minutes. Short press **M** to confirm Alarm 1.
4. The display will then show 'Alarm 2'. Repeat steps 2 and 3 to set Alarm 2.
5. After setting Alarm 2, short press **M** to exit alarm setting mode.

5.2. Adjusting Display Brightness

The LED screen has 4 levels of dimmer control: Max, Medium, Minimum, and Off.

- Press the **Dimmer Control** button (located on the side, usually combined with +/-) to cycle through the brightness levels.
- Select the preferred brightness for your environment.



Image 5: The alarm clock display illustrating various brightness settings, from bright to completely off.

6. CHARGING FEATURES

The Soundfreaq Charge Rise II offers versatile charging options for your devices.

6.1. Wireless Charging (Up to 15W)

1. Ensure your phone is Qi-compatible.
2. Place your phone on the wireless charging pad located on the base of the alarm clock.
3. The phone will automatically begin charging. A charging indicator may appear on your phone's screen.
4. The device supports charging through phone cases up to 3mm thick.

DROP AND CHARGE — WIRELESS CONVENIENCE

Wake up to the pleasant **100% Charged** icon every morning



Image 6: A smartphone placed on the wireless charging pad of the Soundfreak Charge Rise II, showing the charging icon.

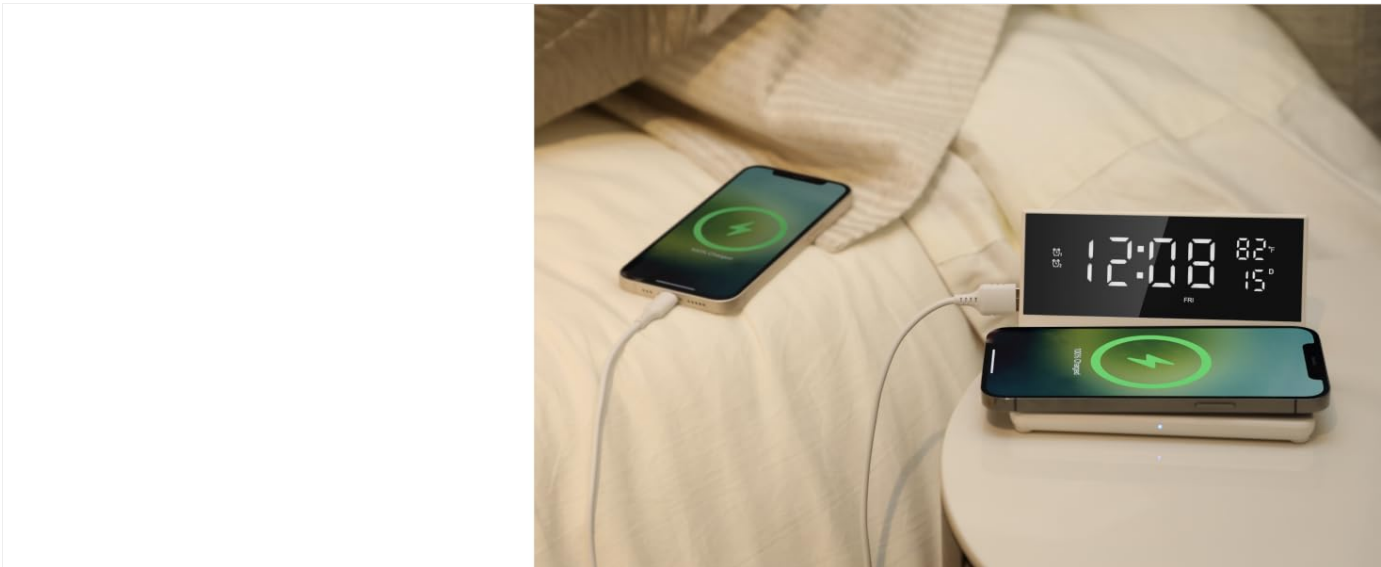


Image 7: Visual guide for 'Through Case Charging', indicating that magnets, metal cases, holders, and credit cards will interfere with wireless charging.

6.2. USB Charging (10W)

- Locate the USB port on the side of the alarm clock.
- Connect your device's USB charging cable to this port.
- The device will begin charging.



Image 8: The Soundfreak Charge Rise II demonstrating USB charging for an additional device.

7. SPECIFICATIONS

Brand	Soundfreak
Model Number	SFQ-20 (SY-W0219)
Color	White
Display Type	Digital LED
Special Features	Adjustable Brightness, Calendar Display, Charging Port, Snooze, Wireless Charging
Product Dimensions	2.76"W x 6.7"H
Power Source	Corded Electric

Wireless Charging Output	Up to 15W
USB Charging Output	10W
Battery Backup	1 x CR2032 (included)
Material Type	Plastic

8. TROUBLESHOOTING

If you encounter any issues with your Soundfreak Charge Rise II, please refer to the following common solutions:

- **Display is too bright/dim or off:** Use the Dimmer Control button on the side to adjust the brightness levels. Cycle through the 4 settings (Max, Medium, Minimum, Off) to find your preference.
- **Wireless charging not working:**
 - Ensure your device is Qi-compatible.
 - Check that the phone is centered on the wireless charging pad.
 - Remove any thick phone cases (over 3mm), metal objects, magnets, or credit cards from between the phone and the charging pad.
 - Verify the alarm clock is properly powered.
- **USB charging not working:**
 - Ensure the USB cable is securely connected to both the alarm clock's USB port and your device.
 - Try a different USB cable to rule out cable malfunction.
 - Verify the alarm clock is properly powered.
- **Time/Date/Alarm settings lost after power outage:** The built-in CR2032 battery should maintain settings. If settings are lost, ensure the battery is correctly installed and not depleted. Re-enter settings as per Section 4.2 and 5.1.

9. MAINTENANCE

To ensure the longevity and optimal performance of your Soundfreak Charge Rise II, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the device. Avoid abrasive cleaners, solvents, or harsh chemicals that may damage the surface.
- **Placement:** Place the alarm clock on a stable, flat surface. Avoid direct sunlight, excessive heat, or moisture.
- **Power:** Always use the provided power adapter and cable to prevent damage to the device.
- **Battery Replacement:** The CR2032 backup battery is pre-installed. If it needs replacement, consult the manufacturer's guidelines or a qualified technician.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or visit the official Soundfreak website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question