

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Drhomeam](#) /

› Drhomeam Digital Wall Clock Battery Operated Instruction Manual

Drhomeam 9M2HD1F5C04A6IFZ29OGYW27

Drhomeam Digital Wall Clock Instruction Manual

Model: 9M2HD1F5C04A6IFZ29OGYW27

INTRODUCTION

Thank you for purchasing the Drhomeam Digital Wall Clock. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use and retain it for future reference.

PRODUCT FEATURES

- Large LCD display showing time, date, day of week, temperature, and humidity.
- 12-hour or 24-hour time format selection.
- Battery-operated for portability and convenience.
- Versatile mounting options: wall mount, tabletop stand, or magnetic attachment.
- Integrated alarm clock function.

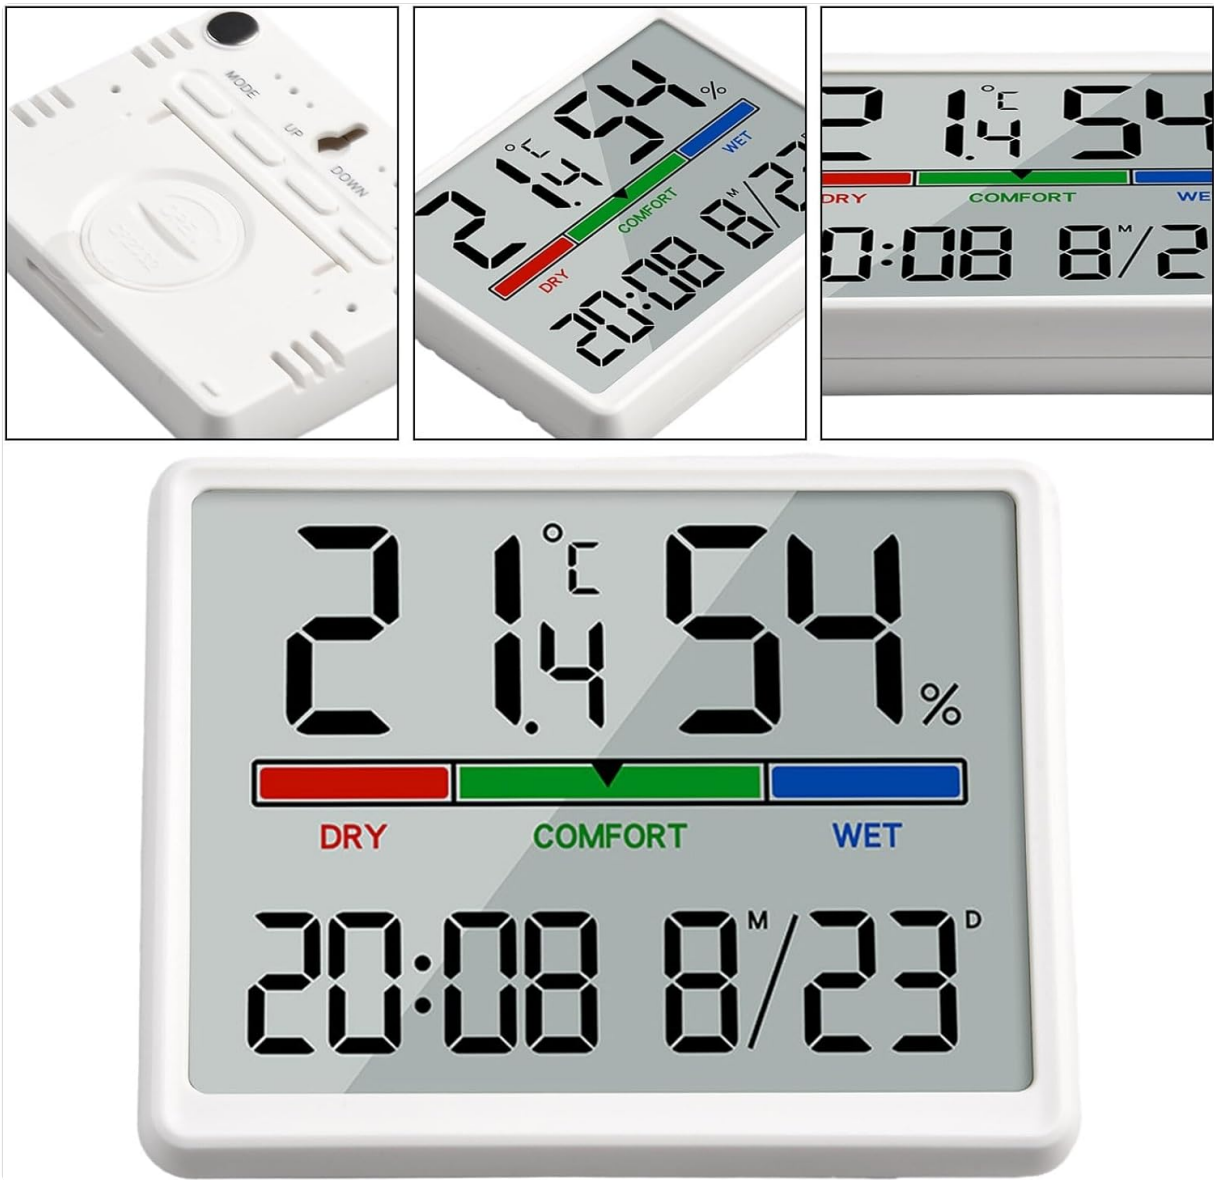


Figure 1: Front view of the Drhomeam Digital Wall Clock displaying time, date, temperature, and humidity.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Open the battery compartment cover by sliding or gently prying it open.
3. Insert one CR2032 button cell battery, ensuring the positive (+) side faces upwards. The clock comes with a CR2030 battery, which is interchangeable with CR2032.
4. Close the battery compartment cover securely.



Figure 2: Back view of the clock, highlighting the battery compartment and control buttons.

2. Mounting Options

The clock offers multiple placement options:

- **Tabletop:** Extend the integrated support stand on the back of the clock to place it on any flat surface.
- **Wall Mount:** Use the hanging hole on the back of the clock to mount it on a wall using a nail or screw (not included).
- **Magnetic Attachment:** The clock features magnets on the back, allowing it to be attached to metallic surfaces like a refrigerator.

OPERATING INSTRUCTIONS

Control Buttons

The clock features three control buttons on the back:

- **MODE:** Used to switch between display modes (Time, Date, Alarm) and enter setting mode.
- **UP:** Used to increase values during setting or toggle options.
- **DOWN:** Used to decrease values during setting or toggle options.

Setting Time and Date

1. Press and hold the **MODE** button for approximately 3 seconds to enter time setting mode. The hour digits will flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **MODE** again to move to minute setting. Use **UP** or **DOWN** to adjust minutes.
4. Continue pressing **MODE** to cycle through year, month, and day settings, adjusting each with the **UP** or **DOWN** buttons.
5. After setting the day, press **MODE** to exit setting mode.

12/24 Hour Format Selection

While in normal time display mode, press the **UP** button to toggle between 12-hour and 24-hour time formats.

Temperature Unit Selection

While in normal time display mode, press the **DOWN** button to toggle between Celsius (°C) and Fahrenheit (°F) temperature units.

Alarm Clock Function

1. From normal time display, press the **MODE** button once to view the alarm time.
2. Press and hold the **MODE** button for approximately 3 seconds while in alarm display mode to enter alarm setting mode. The alarm hour digits will flash.
3. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
4. Press **MODE** again to move to alarm minute setting. Use **UP** or **DOWN** to adjust alarm minutes.
5. Press **MODE** again to exit alarm setting mode.
6. To activate or deactivate the alarm, press the **UP** button while in alarm display mode. An alarm icon will appear or disappear on the display.

MAINTENANCE

Cleaning

Wipe the clock gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the display or casing.

Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the battery. Follow the "Battery Installation" steps in the Setup section to replace the CR2032 (or CR2030) button cell battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the CR2032 battery. Ensure correct polarity.
Incorrect time or date.	Time/date not set correctly after battery installation or reset.	Refer to the "Setting Time and Date" section to reset.
Temperature/humidity readings seem inaccurate.	Clock recently moved to a new environment; needs time to acclimate.	Allow 15-30 minutes for the sensors to stabilize in the new environment. Ensure clock is not near direct heat sources or vents.
Alarm does not sound.	Alarm is deactivated or set incorrectly.	Verify the alarm is activated (alarm icon visible) and the alarm time is set correctly.

SPECIFICATIONS

Feature	Detail
Model Number	9M2HD1F5C04A61FZ29OGYW27
Display Type	Digital LCD
Power Source	1 x CR2032 (or CR2030) Button Cell Battery
Dimensions (W x H x D)	Approximately 3.7 x 2.9 x 0.6 inches (9.3 x 7.3 x 1.5 cm)
Item Weight	Approximately 3.14 ounces (89 grams)
Mounting Options	Tabletop, Wall Mount, Magnetic
Indoor/Outdoor Usage	Indoor

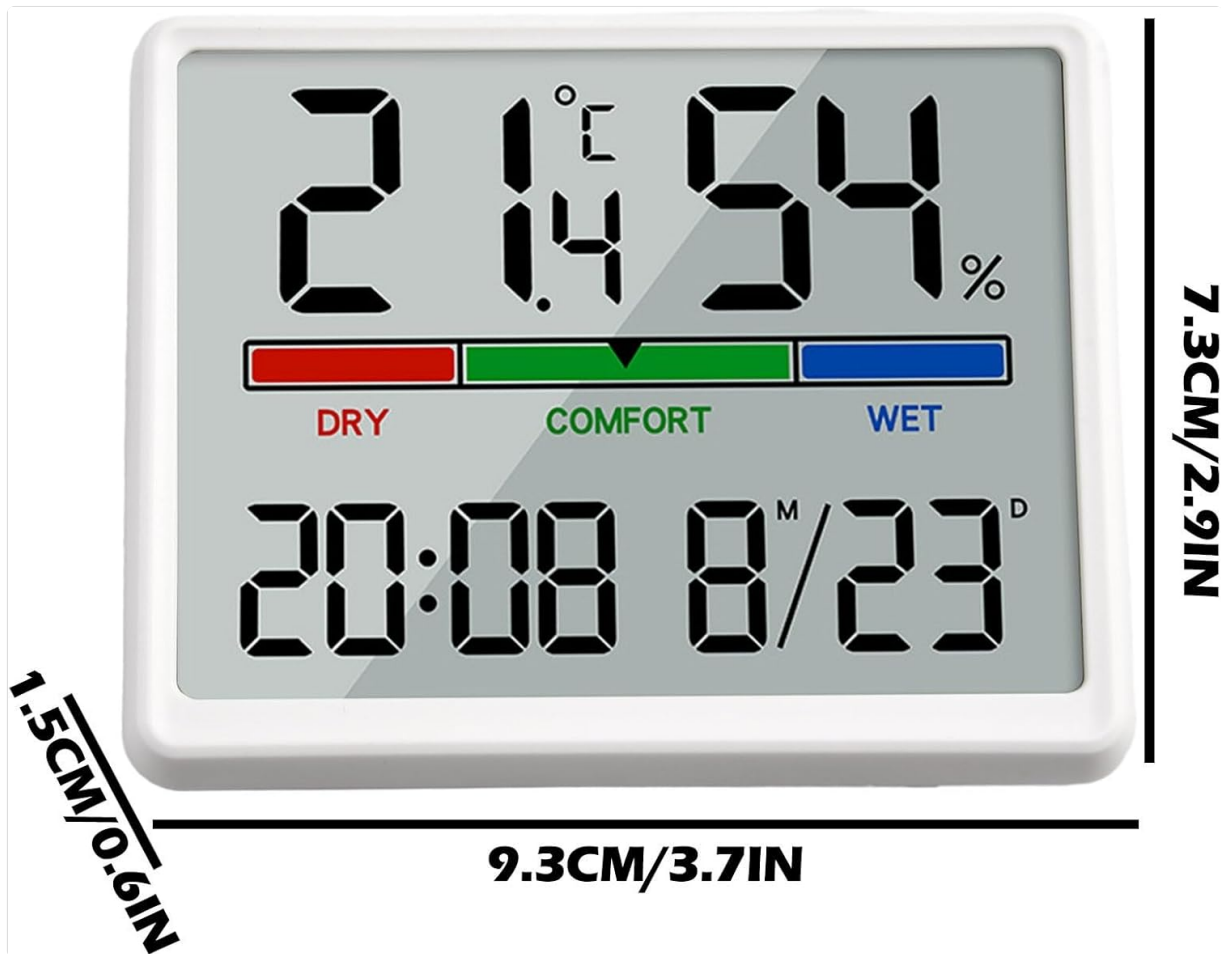


Figure 3: Dimensions of the Drhomeam Digital Wall Clock.

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer.

If you encounter any issues or have questions regarding your Drhomeam Digital Wall Clock, please contact customer support through your purchase platform or the official Drhomeam website for assistance.

