

[Manuals.plus](#) /

› [ForeverPRO](#) /

› ForeverPRO W10676061 Washer Cover Instruction Manual

ForeverPRO W10676061

ForeverPRO W10676061 Cover for Whirlpool Washer - Instruction Manual

Model: W10676061

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the ForeverPRO W10676061 Washer Cover. This part is designed as a replacement for Whirlpool Washer covers, specifically replacing part number W10215139. Please read this manual thoroughly before proceeding with any installation or maintenance to ensure proper function and safety.

Product Description: ForeverPRO Washer Cover Part Number W10676061 replaces W10215139. This cover is compatible with various Whirlpool Washer models. It is a PRO Grade Premium Cover designed to meet or exceed OEM specifications quality.



Figure 1: Front view of the ForeverPRO W10676061 Washer Cover. This image shows the metallic, curved cover with a mounting tab on the left side and two smaller tabs on the right side, designed for secure fitting within a washing machine.

2. SAFETY INFORMATION

- Always disconnect power to the washing machine before attempting any installation or maintenance.
- Wear appropriate personal protective equipment (PPE), such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified technician.
- Keep small parts away from children.

3. SETUP AND INSTALLATION

3.1 Tools Required

- Screwdriver (Phillips or Flathead, depending on washer model)
- Pliers (optional, for stubborn clips)
- Work gloves

3.2 Installation Steps

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet or turn off the circuit breaker

supplying power to the washer.

2. **Access the Cover Area:** Depending on your specific Whirlpool washer model, you may need to remove the top panel or access the area where the cover is located. Refer to your washer's specific service manual if unsure.
3. **Remove Old Cover:** Carefully identify and remove the existing washer cover. This may involve unscrewing fasteners, releasing clips, or gently prying it off. Note the orientation of the old cover for correct installation of the new one.
4. **Install New Cover:** Position the ForeverPRO W10676061 cover in the correct orientation. Align the mounting tabs and secure it in place. Ensure all clips snap securely and any screws are tightened appropriately.
5. **Reassemble Washer:** Reattach any panels or components that were removed to access the cover.
6. **Restore Power:** Plug the washing machine back into the electrical outlet or turn on the circuit breaker.

4. OPERATING INSTRUCTIONS

The ForeverPRO W10676061 cover is a static component and does not require operational instructions. Its function is to protect internal components of the washing machine. Once installed correctly, the washing machine can be operated as normal according to its original manufacturer's instructions.

5. MAINTENANCE

This washer cover requires minimal maintenance. Periodically inspect the cover for any signs of damage, corrosion, or loose fittings. If any issues are observed, consider replacing the cover to maintain the integrity of your washing machine's internal components.

- **Cleaning:** If necessary, wipe the cover with a damp cloth to remove dust or debris. Avoid abrasive cleaners.
- **Inspection:** Annually check the cover's securement and condition.

6. TROUBLESHOOTING

As a non-moving part, direct troubleshooting for the cover itself is limited. Most issues would relate to improper installation.

Problem	Possible Cause	Solution
Cover does not fit properly	Incorrect model compatibility; Improper alignment during installation	Verify your washer model against the compatible models listed in the product description. Re-align and re-install the cover carefully, ensuring all tabs and fasteners are correctly engaged.
Cover is loose after installation	Fasteners not tightened; Clips not fully engaged	Ensure all screws are tightened and all clips are fully snapped into place. If applicable, check for damaged mounting points on the washer.
Washer not functioning after cover replacement	Power not restored; Other components dislodged during installation	Ensure the washer is properly plugged in and the circuit breaker is on. Check for any disconnected wires or hoses that may have been disturbed during the installation process.

7. SPECIFICATIONS

Part Number: W10676061 (replaces W10215139)

Manufacturer: ForeverPRO

Item Weight: 8 ounces

Product Dimensions: 9 x 6 x 4 inches

Compatible Brands: Whirlpool, Maytag, KitchenAid, Jenn-Air, Amana, Magic Chef, Admiral, Norge, Roper, and others.

Included Components: Cover

8. WARRANTY AND SUPPORT

This ForeverPRO product comes with a **1 Year Manufacturer Warranty**. For warranty claims or technical support, please contact ForeverPRO customer service. Refer to the product packaging or the seller's information for contact details.

ForeverPRO is a USA Based Company and offers a No Questions Asked Money Back Guarantee.

© 2024 ForeverPRO. All rights reserved.

This manual is for informational purposes only. ForeverPRO is not affiliated with or endorsed by Whirlpool or other mentioned manufacturers.