

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Noma](#) /

› [Noma Quick Clip C9 LED Outdoor Christmas Lights Instruction Manual - Model CTI1513696](#)

Noma CTI1513696

Noma Quick Clip C9 LED Outdoor Christmas Lights Instruction Manual

Model: CTI1513696

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this product. Failure to follow these instructions may result in fire, electric shock, or serious injury.

- **Outdoor Use Only:** This product is designed for outdoor use. Ensure all connections are secure and protected from moisture.
- **Electrical Safety:** Always plug the lights into a Ground Fault Circuit Interrupter (GFCI) protected outlet. Do not overload circuits.
- **Inspect Before Use:** Before each use, inspect the light string for any damage to the insulation, bulbs, or clips. Do not use if damaged.
- **Bulb Replacement:** Do not attempt to replace individual LED bulbs. The bulbs are integrated and designed for long-term use.
- **Secure Installation:** Ensure lights are securely fastened to prevent them from falling or being dislodged by wind or snow.
- **Storage:** Store lights in a cool, dry place when not in use.
- **Children and Pets:** Keep lights out of reach of children and pets to prevent entanglement or accidental ingestion.

PRODUCT OVERVIEW

The Noma Quick Clip C9 LED Outdoor Christmas Lights are designed for efficient and durable holiday decoration. This 4-pack includes multiple strings of 100 multicolored LED bulbs each, featuring Quick Clip Technology for simplified installation. The C9 diamond-cut bulbs are energy-efficient and built to withstand various outdoor weather conditions.

- **Quick Clip Technology:** Integrated spring-loaded clips allow for fast and secure attachment to various surfaces.

- **180-Degree Rotation:** Each bulb can be rotated to direct light precisely where desired.
- **Durable C9 LED Bulbs:** Weather-sealed, diamond-cut bulbs provide long-lasting illumination.
- **Energy Efficient:** LED technology ensures lower power consumption and a lifespan of approximately 10,000 hours.
- **Outdoor Rated:** Suitable for use in various outdoor environments.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- 4 x Noma Quick Clip C9 LED Light Strings (each with 100 multicolored bulbs)
- Integrated Quick Clips on each bulb

SETUP AND INSTALLATION

Follow these steps for proper installation of your Noma Quick Clip C9 LED Lights.

Step 1: Planning Your Display

Before installation, plan the layout of your lights. Consider the length of each string (approximately 66.8 feet) and the desired coverage area. Ensure access to a GFCI-protected outdoor power outlet.

Step 2: Attaching the Lights

The integrated Quick Clips allow for versatile attachment. Simply open the spring-loaded clip and secure it to branches, rooflines, gutters, or railings. The clips are designed to hold firmly without causing damage.



Image: Noma Quick Clip C9 LED lights installed along a snowy roofline, demonstrating secure attachment.




Hang in Half the Time

Built-in spring loaded clips make installation quick & easy

Image: A hand demonstrating how to use the built-in spring-loaded Quick Clip to attach a light to a surface.

Step 3: Adjusting Light Position

Each C9 LED bulb can be rotated 180 degrees. After clipping the lights into place, gently twist each bulb to achieve the desired illumination angle and direction.

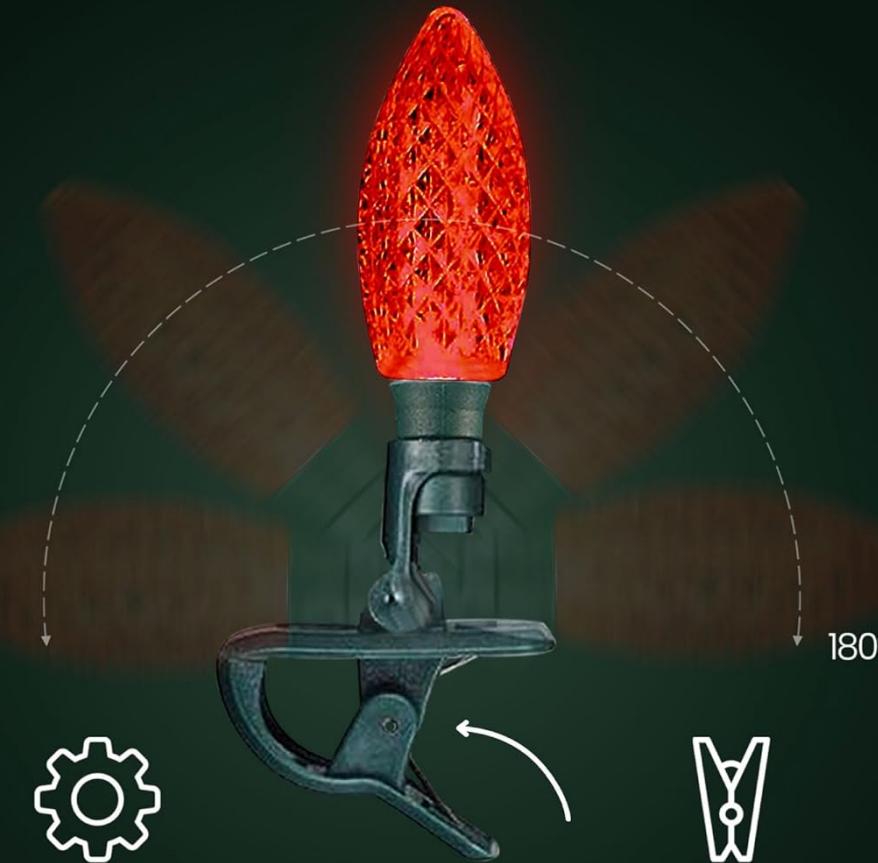

Adjustable Light Position

180 degree rotation allows you to easily adjust light position

Built-In Spring Loaded Clip

Hang in half the time with built-in removable clips

Image: Diagram illustrating the 180-degree rotation capability of the C9 LED bulbs for customizable light direction.

Step 4: Connecting to Power

Once all lights are securely installed and positioned, plug the light string into a suitable outdoor GFCI-protected electrical outlet. Ensure the connection is dry and protected from weather elements.

Installation Demonstration Video

Your browser does not support the video tag.

Video: This video demonstrates the installation process of Noma Quick Clip Christmas String Lights, showing how to attach them to various surfaces like rooflines and gutters.

OPERATING INSTRUCTIONS

Operating your Noma Quick Clip C9 LED Lights is straightforward.

- Power On:** Plug the light string into a live GFCI-protected outdoor outlet. The lights should illuminate immediately.
- Power Off:** Unplug the light string from the outlet when not in use or for extended periods.
- Remote Control:** If your specific model includes a remote control (check packaging), refer to its separate instructions for advanced operation modes.

These LED lights are designed for continuous operation during the holiday season, offering energy efficiency and a long lifespan.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your Noma Quick Clip C9 LED Lights.

- Cleaning:** Gently wipe bulbs and wires with a soft, damp cloth if they become dirty. Ensure the lights are unplugged before cleaning. Do not use harsh chemicals or abrasive cleaners.
- Inspection:** Periodically inspect the entire light string for any signs of wear, cuts, or damage to the wire insulation or bulb sockets.
- Storage:** When the holiday season concludes, carefully remove the lights. Coil each string neatly to prevent tangling and store them in a cool, dry place, away from direct sunlight and extreme temperatures. The original packaging or a dedicated storage container is recommended.
- Weather Resistance:** The C9 bulbs feature weather-sealed sockets, providing protection against typical winter weather conditions. However, avoid submerging the lights in water.

TROUBLESHOOTING

If you encounter issues with your Noma Quick Clip C9 LED Lights, refer to the following common solutions:

Problem	Possible Cause	Solution
Lights do not illuminate.	Not plugged in correctly. Power outlet is not active. GFCI tripped. Damaged wire or bulb.	Ensure the plug is fully inserted into a working outlet. Test the outlet with another device. Reset the GFCI outlet. Inspect the entire string for visible damage. If damaged, discontinue use.
Some bulbs are out.	Individual bulb failure (rare for LEDs). Loose connection within a bulb socket.	LED bulbs are generally not user-replaceable. If a significant section is out, check for wire damage. Ensure all bulbs are securely seated in their sockets.
Lights flicker.	Unstable power supply. Loose connection.	Ensure the power source is stable. Check all connections along the string.

If troubleshooting steps do not resolve the issue, contact Noma customer support or the retailer for assistance.

SPECIFICATIONS

Feature	Detail
Brand	Noma
Model Number	CTI1513696
Color	Multicolor
Indoor/Outdoor Usage	Outdoor
Special Feature	Corded, Quick Clip Technology, 180-Degree Rotation
Light Source Type	LED
Power Source	Corded Electric
Light Color	Multicolor
Theme	Holiday
Occasion	Holiday
Style	Modern
Number of Light Sources	100 per string (400 total for 4-pack)
Bulb Shape Size	C9
Wattage	2.4 watts per string
Included Components	LED Lights, Quick Clips
Number of Items	4 (packs)
Control Method	Remote (if included with specific model)
Seasons	Winter
UPC	193802367331
String Length	66.8 feet per string
Voltage	120V

1.25 Inches



2.5 Inches



LENGTH
66' 8"

VOLTAGE
120v

WATTAGE
2.4watt

Image: Visual representation of light bulb dimensions (1.25 inches wide, 2.5 inches tall) and electrical specifications (66.8 feet length, 120V, 2.4 watts).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or visit the official Noma website. Keep your purchase receipt for warranty claims.

Noma Official Website: [Visit the Noma Store on Amazon](#)