

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SoBuy](#) /

› [SoBuy BZR96-SN Laundry Unit with Folding Laundry Basket Instruction Manual](#)

SoBuy BZR96-SN

SoBuy BZR96-SN Laundry Unit with Folding Laundry Basket Instruction Manual

1. INTRODUCTION

Thank you for purchasing the SoBuy BZR96-SN Laundry Unit. This unit is designed to provide additional storage and a convenient solution for laundry organization in your bathroom or laundry room. It features a hinged door that conceals a folding laundry basket, helping to keep your space tidy. This manual provides essential information for safe assembly, proper operation, and effective maintenance of your new laundry unit.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children.
- Ensure all connections are secure before use. Periodically check and retighten screws as necessary.
- This product is equipped with an anti-tip device. It is crucial to firmly anchor the cabinet to the wall using the provided anti-tip device to prevent accidents and ensure stability.
- Do not overload the laundry basket or the cabinet. The unit is tested for a weight of 20 kg.
- Avoid exposing the unit to excessive moisture or direct water contact, despite its moisture-resistant features.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. The package should contain:

- Cabinet panels (wood fibres, wood chipboard)
- Folding laundry basket
- Assembly hardware (screws, dowels, hinges, handle)
- Anti-tip device
- Assembly instructions (separate document)

4. SETUP AND ASSEMBLY

Assembly of the SoBuy BZR96-SN Laundry Unit is required. Follow the detailed assembly instructions provided in the separate document included with your package. Ensure you have adequate space and the necessary tools (e.g., screwdriver) before starting.

4.1 Key Dimensions

Refer to the diagram below for the overall dimensions of the assembled unit to ensure it fits your intended space.



Figure 1: Product Dimensions (40 x 35 x 90 cm)

4.2 Anti-Tip Device Installation

For safety, it is mandatory to install the anti-tip device. Locate the designated attachment points on the

back of the cabinet and secure it to a solid wall using the provided hardware. This prevents the unit from tipping over, especially in households with children or pets.



Figure 2: Base and Foot Pads for Stability

4.3 Integrating the Laundry Basket

The folding laundry basket is designed to fit securely within the cabinet. Once the cabinet structure is assembled, insert the laundry basket according to the assembly instructions. The hinged door mechanism allows for easy access to the basket.



Figure 3: Internal Mechanism for Laundry Basket

5. OPERATING INSTRUCTIONS

The SoBuy BZR96-SN Laundry Unit is straightforward to operate.

5.1 Using the Folding Laundry Basket

To deposit laundry, gently pull the handle on the front door. The door will tilt forward, revealing the folding laundry basket inside. Place your dirty laundry into the basket. To close, push the door back until it is flush with the cabinet frame.



Figure 4: Laundry Unit with Basket Open

5.2 Removing the Laundry Basket

The folding laundry basket can be easily removed for transport to your washing machine. Open the front door completely, then lift the basket out by its handles. After emptying, place the basket back into the cabinet, ensuring it is properly seated.



Figure 5: Removable Folding Laundry Basket

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your laundry unit.

- **Cleaning the Cabinet:** Wipe the wooden surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish. Dry immediately with a clean cloth.
- **Cleaning the Laundry Basket:** The folding laundry basket can be wiped clean with a damp cloth. For deeper cleaning, it may be hand-washed with mild soap and air-dried. Ensure it is completely dry before placing it back into the cabinet.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary to maintain stability.

7. TROUBLESHOOTING

If you encounter any issues with your SoBuy BZR96-SN Laundry Unit, consider the following common solutions:

- **Cabinet feels wobbly:** Ensure all assembly screws are fully tightened. Verify that the anti-tip device

is securely anchored to the wall.

- **Door does not close properly:** Check that the hinges are correctly aligned and tightened. Ensure the laundry basket is not overfilled or obstructing the door's movement.
- **Laundry basket does not fit:** Confirm that the basket is oriented correctly and fully unfolded. Refer to the assembly instructions for proper placement.

If problems persist, please contact customer support.

8. SPECIFICATIONS

Brand	SoBuy
Model Number	BZR96-SN
Product Dimensions	40 x 35 x 90 cm (15.75"W x 13.78"D x 35.43"H)
Material	Wood fibres, Wood chipboard
Color	Natural Clear
Item Weight	14.7 kg (32.3 pounds)
Tested for Weight	20 kg
Special Feature	Moisture Resistant, Anti-tip device included
Mounting Type	Floor Mount (with wall anchor)
Assembly Required	Yes

9. WARRANTY INFORMATION

SoBuy products are manufactured to high-quality standards. This product comes with a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package or visit the official SoBuy website for specific warranty terms and conditions.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact SoBuy customer support. Have your model number (BZR96-SN) and purchase information ready when contacting support.

- **Online:** Visit the official SoBuy website for FAQs and contact forms.
- **Email:** Refer to your product packaging or the SoBuy website for the customer service email address.