

[Manuals.plus](#) /

› [JOVELL](#) /

› JOVELL DVD-170 DVD Player Instruction Manual

JOVELL DVD-170

JOVELL DVD-170 DVD Player Instruction Manual

Model: DVD-170

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your JOVELL DVD-170 DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

SETUP

1. Unpacking and Package Contents

Carefully remove all components from the packaging. Verify that all items listed below are present.

What's in The Box

The manual includes English, French, German. If you require Italian or Spanish, please email us



Image: Contents of the JOVELL DVD-170 DVD Player box. The image displays the DVD player, a remote control, an HDMI cable, an RCA cable, and the instruction manual. The player dimensions are indicated as 22.5cm width, 19.5cm depth, and 3.8cm height.

Package includes:

- JOVELL DVD-170 DVD Player
- Remote Control
- HDMI Cable
- RCA Cable
- Instruction Manual

2. Connecting to a Television

The DVD-170 offers multiple connectivity options for various television types.

Multiple Connectivity Options

Connect to a Smart HDTV with HDMI output, or to an older TV with Scart or RCA outputs.

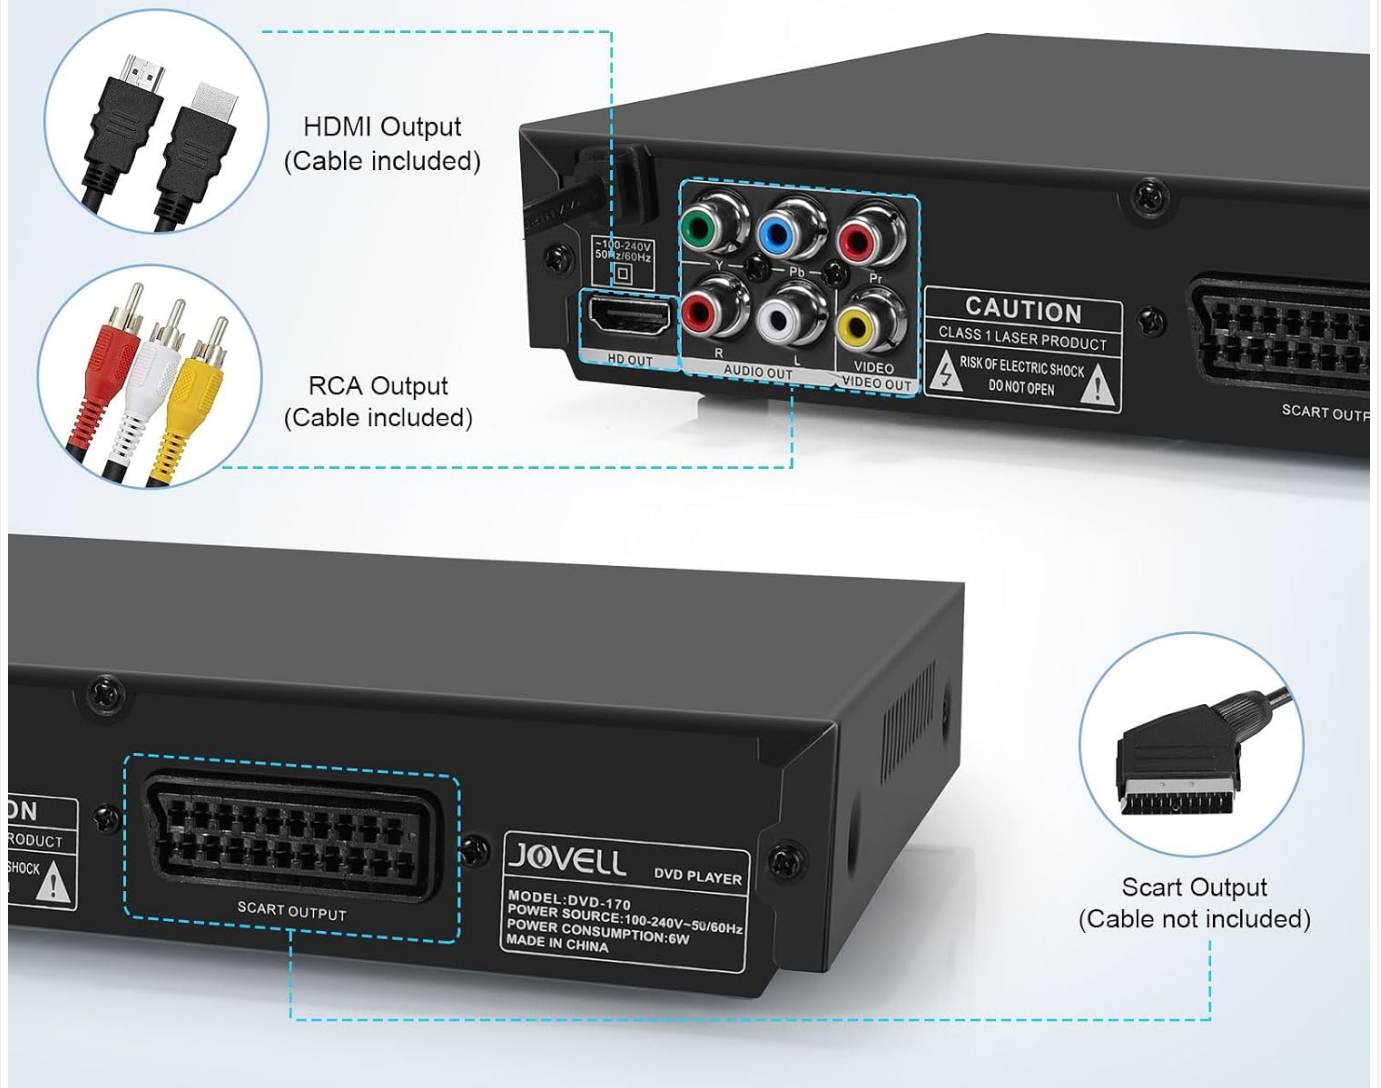


Image: Rear view of the JOVELL DVD-170 DVD Player, highlighting its connectivity options. The image shows an HDMI output port (cable included), RCA output ports (red, white, yellow, cable included), and a Scart output port (cable not included).

- **HDMI Connection (Recommended for HDTVs):** Connect one end of the provided HDMI cable to the HDMI OUT port on the DVD player and the other end to an HDMI IN port on your television. Select the corresponding HDMI input on your TV.
- **RCA Connection (for older TVs):** Connect the red, white, and yellow plugs of the provided RCA cable to the corresponding AUDIO OUT (red/white) and VIDEO OUT (yellow) ports on the DVD player. Connect the other end to the matching AUDIO IN and VIDEO IN ports on your television. Select the AV input on your TV.
- **SCART Connection (for older TVs, cable not included):** If your TV has a SCART input, connect a SCART cable (not included) from the SCART OUT port on the DVD player to the SCART IN port on your television. Select the SCART input on your TV.

3. Powering On

After connecting the player to your TV, plug the power cord into an electrical outlet. Press the POWER button on the front panel of the DVD player or on the remote control to turn on the device. The indicator light will illuminate.

1. Disc Playback

The DVD-170 supports multi-format playback and is region-free for DVDs.



Image: The JOVELL DVD-170 DVD Player positioned below a television screen, illustrating its multi-format playback capabilities. Icons indicate support for DVD Player, CD Player, U Disk Player (USB), and a MIC Jack.

Region Free DVD Player

Plays DVDs from Region 1 to 6 (except CPRM)



CD,DVD,DVD-R/+R,DVD-RW/+RW, CD-R/-RW, VCD,SVCD.

Note: Blu-ray discs are not supported!

Image: The JOVELL DVD-170 DVD Player with a graphic overlay of a world map, indicating its region-free capability. It plays DVDs from Region 1 to 6 (except CPRM). Supported disc formats include CD, DVD, DVD-R/+R, DVD-RW/+RW, CD-R/-RW, VCD, SVCD. Blu-ray discs are not supported.

1. Ensure the player is powered on and the correct input is selected on your TV.
2. Press the OPEN/CLOSE button on the front panel or remote control to open the disc tray.
3. Place a DVD or CD disc gently onto the disc tray with the label side facing up.
4. Press the OPEN/CLOSE button again to close the disc tray.
5. The player will automatically begin reading the disc. Playback should start shortly. If a menu appears, use the navigation buttons on the remote to select your desired option.

2. USB Playback

The DVD-170 supports playback of media files from a USB flash drive.

Support USB Input

Enjoy pictures videos of 720*480/576 video files (AVI/MPG/MPEG4/VOB) from USB stick



Image: A close-up view of the JOVELL DVD-170 DVD Player's front panel, illustrating a hand inserting a USB flash drive into the USB port. The text indicates support for USB flash drives up to 32GB (FAT format) and playback of 720*480/576 video files (AVI/MPG/MPEG4/VOB).

1. Insert a USB flash drive (up to 32GB, FAT format) into the USB port on the front of the DVD player.
2. The player should automatically detect the USB device and display a file browser. If not, press the USB button on the remote control or the SOURCE button on the player to switch to USB mode.
3. Navigate through your files using the remote control's arrow buttons and press ENTER to select and play a file.

3. Resume Playback Function

The player features a resume play function, allowing you to continue playback from where you left off after powering off the device.

Resume-Play Function



Image: An illustration demonstrating the Resume-Play Function. It shows a video playing, then the device being powered off, and upon powering back on, the video resumes from the exact point it was stopped.

To utilize this feature, simply power off the player during playback. When you power it back on, the player will prompt you to resume from the last played position.

4. High Definition Video Output

The DVD-170 provides 1080P upscaling for an enhanced viewing experience.

1080P High Definition Quality



Image: A family (two adults and a child) watching a vibrant, high-definition movie on a large television screen, with the JOVELL DVD-170 DVD Player visible below the TV. This illustrates the 1080P High Definition Quality output.

5. Remote Control Overview

The included remote control allows for convenient operation of all player functions. Familiarize yourself with the buttons for power, disc tray open/close, play, pause, stop, fast forward, rewind, skip tracks, volume control, menu navigation, and source selection (DVD/USB).

MAINTENANCE

1. Cleaning the Player

- Disconnect the power cord before cleaning.
- Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Ensure ventilation openings are free from dust and obstructions.

2. Disc Care

- Handle discs by their edges to avoid fingerprints.
- Store discs in their cases when not in use to prevent scratches.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

If you encounter issues with your DVD player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active	Ensure power cord is securely plugged in; Test outlet with another device
No picture/sound	Incorrect TV input selected; Cables not connected properly	Select correct HDMI/AV/SCART input on TV; Check all cable connections
Disc does not play	Disc is dirty or scratched; Incorrect disc format; Disc inserted incorrectly	Clean disc; Ensure disc is supported (not Blu-ray); Insert disc label-side up
USB device not recognized	USB format not supported; USB drive too large; Files not compatible	Ensure USB is FAT format, max 32GB; Check file types (AVI/MPG/MPEG4/VOB)
Remote control not working	Batteries depleted; Obstruction between remote and player	Replace batteries; Remove obstructions; Point remote directly at player

SPECIFICATIONS

Feature	Detail
Brand	JOVELL
Model Name	DVD-170
Scanner Resolution	720 x 480 pixels (Upscaling to 1080P)
Compatible Devices	Television, Projector
Special Features	Compact, Region Free, USB Input, Noise Reduction, Anti-Skip Anti-Shock, Resume Play
Audio Output Mode	Stereo, Dolby Digital 5.1
Supported Audio Formats	Dolby Digital
Speaker Surround Sound Channel Configuration	5.1
Batteries Required	No (for player), Yes (for remote control)
Connector Type	HDMI, RCA, SCART (output)
Media Type	DVD, CD, VCD, SVCD, USB (AVI/MPG/MPEG4/VOB)

Feature	Detail
Parcel Dimensions	26.9 x 25.6 x 8.2 cm
Item Weight	1 Kilogram
Color	Black

WARRANTY INFORMATION

Please refer to the warranty card included with your product for specific warranty terms and conditions. Typically, JOVELL products come with a limited manufacturer's warranty covering defects in materials and workmanship for a specified period from the date of purchase. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact JOVELL customer support. Contact information can typically be found on the product packaging, the official JOVELL website, or your purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3L87V5K>

More documents and user manuals: <https://manuals.plus/>