

Donner DEP-1S

Donner DEP-1S Digital Piano User Manual

Model: DEP-1S

1. INTRODUCTION

1.1 Product Overview

The Donner DEP-1S Digital Piano is an 88-key velocity-sensitive keyboard designed for beginners and experienced players alike. It offers a realistic piano sound experience with various functions to enhance learning and creativity.



Figure 1.1: Donner DEP-1S Digital Piano with included stand, sustain pedal, power adapter, and piano stickers.

This digital piano features 128 tones, 100 rhythms, and 88 demo songs. It includes built-in recording functionality, Bluetooth audio and MIDI connectivity, and various modes like split mode for versatile playing and learning.

1.2 What's in the Box

- Donner DEP-1S Digital Piano (88-key)
- Adjustable X-style Stand
- Sustain Pedal
- Power Adapter (DC 9V-12V 3A)
- Piano Stickers for learning



Figure 1.2: The complete beginner's piano kit, including the piano, X-style stand, sustain pedal, and piano stickers.

1.3 Product Overview Video

Video 1.1: An overview of the Donner DEP-1S Portable 88 Key Digital Piano Kit, showcasing its features and portability.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the Donner DEP-1S Digital Piano. Retain this manual for future reference.

2.1 General Safety

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Use only attachments/accessories specified by the manufacturer.
- Keep out of reach of small children to prevent accidental ingestion of small parts or injury.

2.2 Electrical Safety

- Only use the provided power adapter. Using an incorrect adapter may cause damage or fire.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. SETUP

3.1 Assembling the X-Style Stand

The DEP-1S comes with an adjustable X-style stand. Follow these steps for assembly:

1. Unpack all stand components: two main X-frames, four leg extensions, and connecting hardware.
2. Attach the leg extensions to the main X-frames using the provided screws and tools. Ensure they are securely fastened.
3. Expand the X-frames to your desired height. Secure the height adjustment mechanism.
4. Place the digital piano securely on top of the assembled stand. Ensure the piano is stable and centered.

Video 3.1: A detailed tutorial on how to assemble the X-style stand for the DEP-1S Digital Piano.

3.2 Connecting Components

- **Power Adapter:** Connect the power adapter to the DC IN port on the piano and then to a power outlet.
- **Sustain Pedal:** Plug the sustain pedal into the dedicated pedal port.
- **Headphones:** For silent practice, connect headphones to the 3.5mm headphone jack.
- **USB:** Use the USB port to connect to a computer or other devices for MIDI functionality or data transfer.

Connectivity



Figure 3.1: Overview of the connectivity options including pedal, audio in/out, USB MIDI, headphone, and power socket.

4. OPERATING INSTRUCTIONS

This section details the primary functions and how to operate your Donner DEP-1S Digital Piano.

4.1 Power On/Off and Volume

- **Power:** Press the POWER button to turn the piano on or off.
- **Volume:** Use the VOLUME knob or buttons to adjust the overall sound output.

4.2 Tones, Rhythms, and Demos

The DEP-1S offers a wide range of sounds and accompaniments:

- **Tones:** Select from 128 different instrument tones using the SELECT buttons and the digital display.
- **Rhythms:** Choose from 100 built-in rhythms to play along with.
- **Demo Songs:** Explore 88 pre-loaded demo songs for listening or learning.

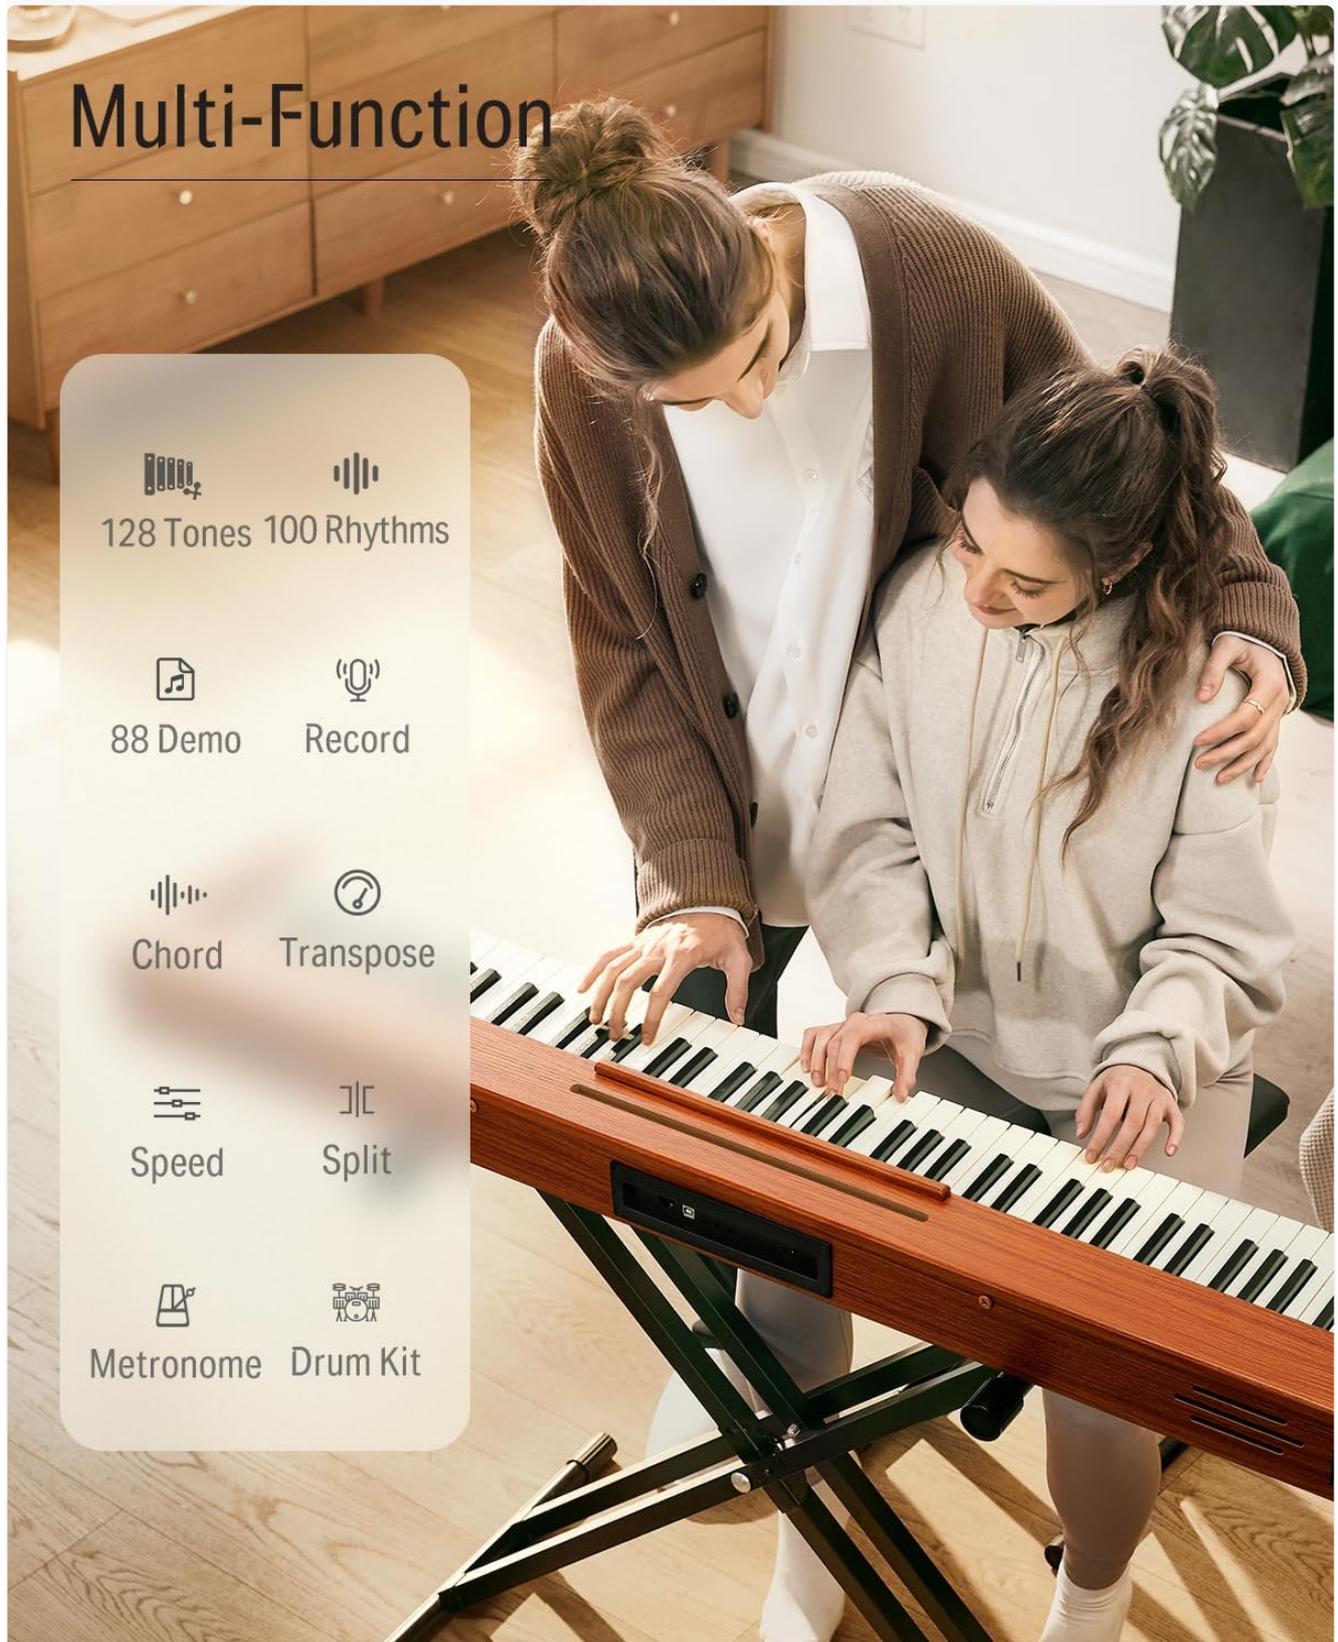


Figure 4.1: The multi-function control panel showing options for 128 tones, 100 rhythms, 88 demos, record, chord, transpose, speed, split, metronome, and drum kit.

4.3 Velocity-Sensitive Keyboard

The 88 velocity-sensitive keys respond to your playing dynamics, allowing for expressive performances. The piano features 5-level velocity-sensitive curves, perfect for developing touch and technique.



Velocity-sensitive **88** KEY Keyboard

The 5-level velocity-sensitive keyboard is perfect for players that are still developing their touch.

Figure 4.2: A user demonstrating the velocity-sensitive keyboard, which is ideal for refining playing touch.

4.4 Recording and Playback


Utilize the built-in recording function to capture your performances. You can review your playing or save songs to flash drives via the USB port for playback on other devices.

4.5 Bluetooth and MIDI Connectivity

The DEP-1S supports Bluetooth audio and MIDI, enabling seamless connection to smartphones or tablets for learning, entertainment, and composing. Play music through the piano's speakers via Bluetooth or connect to MIDI applications for interactive lessons and music production.

Wireless Connection

You can connect Ipad or phone to take a lesson in the educational app or have music editing.

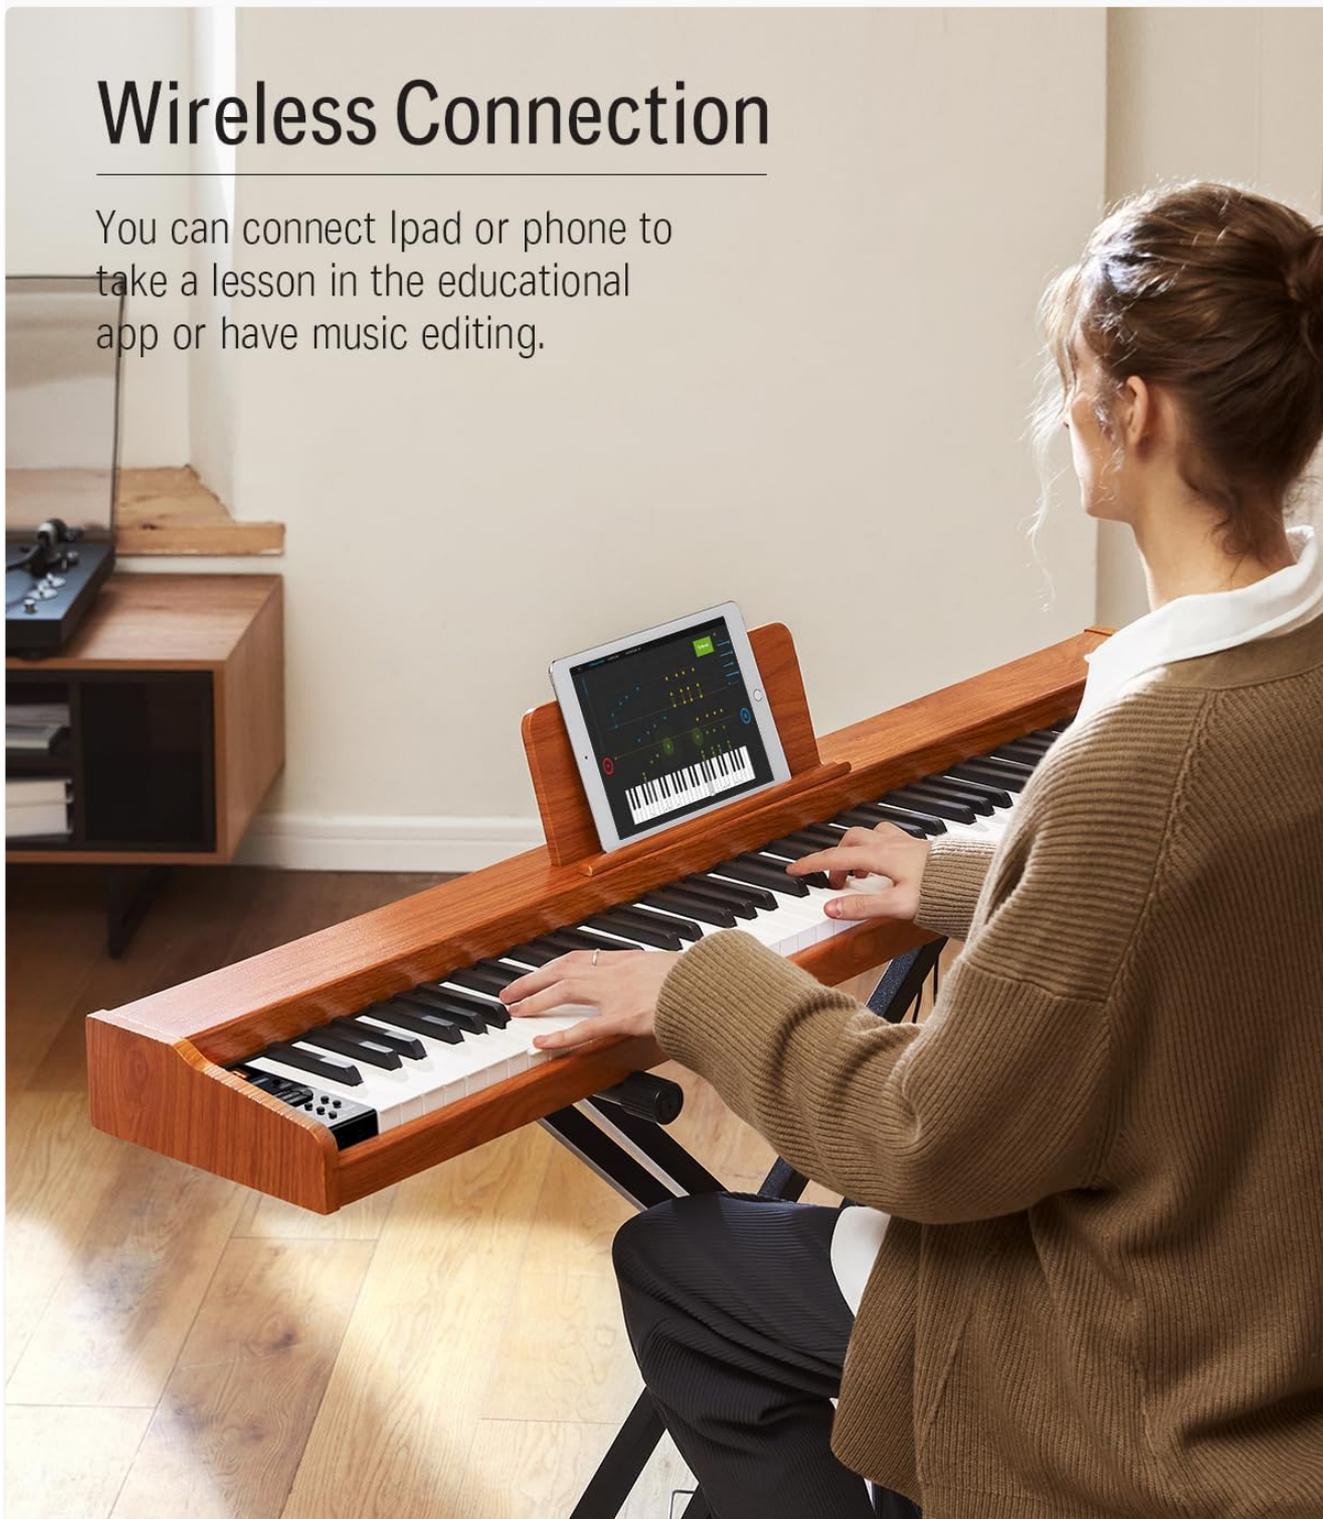

Garageband



Perfect Piano



Pop Piano

Figure 4.3: Wireless connection allows for integration with educational apps and music editing software on smart devices.

4.6 Split Mode and Dual Headphones

- **Split Mode:** Divide the keyboard into two sections, allowing two players to use the piano simultaneously, ideal

for teacher-student interaction.

- **Dual Headphones:** Two headphone jacks enable two users to listen privately, perfect for shared practice sessions without disturbing others.

4.7 Chord Accompaniment

The piano supports chord accompaniment, enriching your performance with synchronized, single-finger, or multi-finger chord functions.

4.8 Sound Sample

Video 4.1: A sound sample of the Donner DEP-1S Digital Piano, recorded directly from the instrument.

5. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your digital piano.

- **Cleaning:** Use a soft, dry cloth to wipe down the piano's surface. For stubborn dirt, slightly dampen the cloth with water. Avoid abrasive cleaners, waxes, or solvents.
- **Key Cleaning:** Gently wipe the keys with a soft, slightly damp cloth. Do not use excessive moisture.
- **Storage:** When not in use, store the piano in a cool, dry place away from direct sunlight and extreme temperature fluctuations.
- **Transportation:** When moving the piano, ensure it is properly secured to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your Donner DEP-1S Digital Piano, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	Volume too low; headphones connected; power issue	Increase volume; unplug headphones; check power connection.
Keys feel loose or fall out	Manufacturing defect (keys may be glued rather than securely fastened)	Contact Donner customer support for assistance or replacement. Attempting to re-glue keys yourself may void warranty.
Bluetooth not connecting	Bluetooth not enabled on piano or device; device too far	Ensure Bluetooth is active on both devices; move device closer; try re-pairing.
Recording not working	Memory full; incorrect recording mode	Delete old recordings; refer to manual for correct recording procedure.

7. SPECIFICATIONS

Feature	Detail
Model Name	DEP-1S

Feature	Detail
Number of Keys	88
Key Type	Velocity-Sensitive
Dimensions (L x W x H)	49.22"D x 3.55"W x 11.42"H
Item Weight	17.6 pounds (8 Kilograms)
Connectivity	USB, Bluetooth, 3.5mm Headphone Jack, Audio In/Out
Special Features	Built-In Speaker, Headphone Jack, Recording, Chord Accompaniment, Split Mode
Skill Level	Beginner
Color	Retro Wood Color

8. WARRANTY INFORMATION

Donner provides a limited warranty for this product against defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. Specific warranty terms and duration may vary by region. For detailed warranty information, please refer to the official Donner website or contact customer support.

9. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact Donner customer support through the following channels:

- **Official Website:** Visit the Donner official website for FAQs, support resources, and contact forms.
- **Email Support:** Refer to your product packaging or the official website for the support email address.
- **Online Store:** If purchased from Amazon, you can also reach out to the seller, Donner Music, through your order history for assistance.

© 2024 Donner. All rights reserved.



[Donner DEP-1S Digital Piano User Manual](#)

This user manual provides comprehensive instructions for the Donner DEP-1S Digital Piano, covering features, operation, installation, troubleshooting, and product care. It details the keyboard, tones, rhythms, demo songs, and various functions like volume control, tone selection, rhythm selection, tempo control, chord accompaniment, synchronous initiation, metronome, and recording. Safety considerations and product care guidelines are also included.


lang: **score:21** filesize: 6.81 M page_count: 32 document date: 2025-02-10



[\[pdf\] User Manual](#)

DEP 1S Digitalpiano Donner Halbgewichtete E Piano Tastatur im Holzstil Donnermusic Produktbroschüren Manual 01 v 1715327283 cdn shopify s files 1 0518 1898 7676 ||| 5 ...

lang: **score:18** filesize: 6.82 M page_count: 32 document date: 2024-05-10

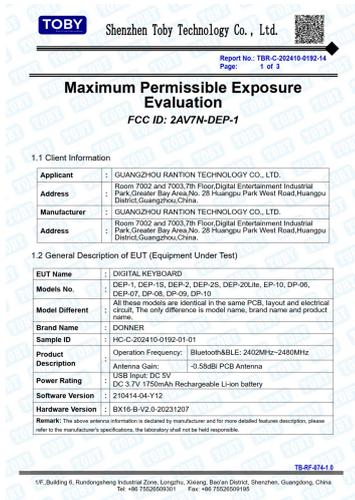

[\[pdf\] SAR Rating](#)

RF Exposure FCC GUANGZHOU RANTION TECHNOLOGY CO LTD DEP 1 2AV7N 2AV7NDEP1 dep Shenzhen Toby Technology Co., Ltd. Report No.: TBR-C-202410-0192-14 Page: 1 of 3 Maximum Permiss ... nder Test EUT Name Models No. Model Different Brand Name Sample ID : DIGITAL KEYBOARD : DEP-1, **DEP-1S**, DEP-2, DEP-2S, DEP-20Lite, EP-10, DP-06, DEP-07, DP-08, DP-09, DP-10 All these models are i...

lang:en **score:11** filesize: 1.22 M page_count: 3 document date: 2024-12-12