

manuals.plus /

› [Blackview](#) /

› [Blackview Wave 6C Android Phone User Manual](#)

Blackview Wave 6C

Blackview Wave 6C Android Phone User Manual

1. PRODUCT OVERVIEW

The Blackview Wave 6C is an Android 13 smartphone designed for reliable daily use. It features a 6.52-inch HD+ display, an octa-core processor, 4GB of RAM (with 2GB virtual memory), 32GB of internal storage expandable up to 1TB, and a 5100mAh battery. The phone supports 4G dual SIM functionality and includes an 8MP rear camera and a 5MP front camera.



Figure 1: Blackview Wave 6C Smartphone

The device operates on Android 13 Go Edition with Blackview's Doke OS 4.0, offering a user-friendly interface and various customization options. It is equipped with essential features such as Face ID, GPS, OTG support, and a 3.5mm headphone jack.

2. SETUP GUIDE

2.1 Unboxing and Initial Inspection

Upon opening the package, verify that all components are present and undamaged. The standard package includes the Blackview Wave 6C smartphone, a charger, a USB Type-C charging cable, a SIM eject tool, and a user manual.

Your browser does not support the video tag.

Video 1: Unboxing the Blackview Wave 6C. This video demonstrates the unboxing process of the Blackview Wave 6C, showing the phone and included accessories.

2.2 SIM Card Installation

1. Locate the SIM card tray on the side of the phone.
2. Insert the SIM eject tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure proper orientation as indicated on the tray.
4. Carefully push the tray back into the phone until it is flush with the side.

2.3 Initial Charging and Power On

1. Connect the USB Type-C cable to the phone's charging port and the other end to the provided 10W charger.
2. Plug the charger into a power outlet. Allow the phone to charge for at least 30 minutes before first use.
3. To power on, press and hold the power button located on the side of the phone until the Blackview logo appears on the screen.
4. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

3. OPERATING INSTRUCTIONS

3.1 User Interface and Navigation

The Blackview Wave 6C runs on Android 13 Go Edition with Doke OS 4.0. This system provides a customizable home screen, enhanced privacy controls, and intuitive gesture navigation. Swipe up from the bottom of the screen to access the app drawer, and swipe down from the top for quick settings and notifications.



5100 ⚡ mAh
Powerful Battery
Always energetic And On Call

Type-C OTG Supported 10W

Figure 2: Blackview Wave 6C Home Screen with Doke OS 4.0

 
3.2 Camera Usage

The phone features an 8MP rear camera and a 5MP front camera. To open the camera app, tap the camera icon on the home screen or app drawer. Available shooting modes include Portrait, Panorama, and HDR. Tap the shutter button to capture photos or the video icon to record videos.

6.2" HD+ Dot Notch Screen

Enjoy a visual world of delight

Providing Immersive visual experience, AI brightness dimming and eye protection mode also help minimize eye fatigue

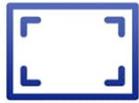

720*1600
Resolution



10 Point
Touch



Incell
Technology



6.2" HD+

Figure 3: Camera Features of Blackview Wave 6C

3.3 Security Features

The Blackview Wave 6C supports Face ID for secure unlocking. To set up Face ID, navigate to **Settings > Security > Face Unlock** and follow the on-screen instructions to register your face.

3.4 Connectivity

- **4G Dual SIM:** The device supports two 4G SIM cards for flexible network usage.
- **Wi-Fi:** Connect to wireless networks via **Settings > Network & internet > Wi-Fi**
- **Bluetooth 4.2:** Pair with Bluetooth devices via **Settings > Connected devices > Bluetooth**.
- **GPS:** The phone integrates GPS, GLONASS, and Galileo navigation systems for accurate location services.
- **OTG (On-The-Go):** Use an OTG cable to connect USB devices like flash drives or to charge other devices.

4. MAINTENANCE

4.1 Battery Care

The 5100mAh battery provides extended usage. To maximize battery life:

- Use the provided 10W charger for optimal charging speed.
- Avoid extreme temperatures.
- Close unused apps running in the background.
- Adjust screen brightness and screen timeout settings.



Figure 4: 5100mAh Battery and Charging

4.2 Storage Management

The phone has 32GB of internal storage and supports microSD cards up to 1TB. Regularly clear cache, delete unnecessary files, and uninstall unused applications to maintain optimal performance. You can check storage usage in **Settings > Storage**.

4.3 Physical Care

The Blackview Wave 6C features an ultra-slim and light body. To protect your device:

- Use the complimentary TPU protective case to guard against bumps and minor drops.

- Keep the screen clean using a soft, lint-free cloth.
- Avoid exposing the phone to excessive moisture or dust.

5. TROUBLESHOOTING

If you encounter issues with your Blackview Wave 6C, refer to the following common solutions:

- **Phone is unresponsive:** Press and hold the power button for about 10-15 seconds to force a restart.
- **Apps crashing or slow performance:** Clear app cache (**Settings > Apps > [App Name] > Storage & cache > Clear cache**) or uninstall and reinstall the app. Ensure sufficient storage space.
- **Battery drains quickly:** Check battery usage in **Settings > Battery** to identify power-consuming apps. Reduce screen brightness and disable unnecessary features like GPS or Bluetooth when not in use.
- **Network connectivity issues:** Toggle Airplane Mode on and off. Restart the phone. Verify SIM card installation. Check network settings in **Settings > Network & internet**.
- **Face ID not working:** Ensure your face is well-lit and clear of obstructions. Re-register your face if the issue persists.

For more complex issues or persistent problems, contact Blackview customer support.

6. SPECIFICATIONS

Key technical specifications for the Blackview Wave 6C:

Feature	Specification
Brand	Blackview
Model Name	Cell Phone Wave 6C
Operating System	Android 13.0 (Go Edition)
CPU Model	Unisoc SC9863A (Octa-Core)
RAM Memory	4 GB (2GB + 2GB virtual)
Internal Storage	32 GB
Expandable Storage	Up to 1 TB (microSD)
Screen Size	6.52 Inches
Resolution	1600*720 pixels (HD+)
Refresh Rate	60 Hz
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	5100 mAh
Charging	10W Fast Charge (USB Type-C)
SIM Card Slot	Dual SIM (Nano)

Feature	Specification
Connectivity	4G LTE, Wi-Fi (2.4G), Bluetooth 4.2, GPS+Glonass+Galileo
Biometric Security	Face Recognition
Headphones Jack	3.5 mm
Dimensions	6.48 x 3 x 0.38 inches
Weight	0.42 Pounds (191g)

7. WARRANTY AND SUPPORT

The Blackview Wave 6C comes with a 2-year manufacturer's guarantee. This warranty covers defects in materials and workmanship under normal use. For technical support, warranty claims, or any product-related inquiries, please contact Blackview customer service through the official Blackview channels or the seller from whom you purchased the device. Ensure you have your proof of purchase and product details available when contacting support.

