

Anycash S1

Printpods Mini Sticker Printer User Manual

Model: S1

1. INTRODUCTION

Thank you for choosing the Printpods Mini Sticker Printer. This compact and portable thermal printer allows you to print various content, including stickers, notes, photos, and to-do lists, directly from your smartphone via Bluetooth. Its inkless design ensures convenience and ease of use for all your creative and organizational needs.



The Printpods Mini Sticker Printer in light blue, shown with examples of printed content including a 'cheer up' bubble, a systemic circulation diagram, a to-do list, and a cat photo, alongside three rolls of sticker paper.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Printpods Mini Sticker Printer
- USB Type-C Charging Cable
- 3 Rolls of Sticker Paper
- User Manual

Package Content



An illustration showing the Printpods Mini Sticker Printer, a Type-C cable, three rolls of stickers, and the user manual, all included in the package.

3. SETUP GUIDE


3.1 Charging the Printer

Before first use, fully charge the printer using the provided USB Type-C cable. Connect the cable to the printer's charging port and a compatible USB power source. The indicator light will show charging status.

3.2 App Installation and Bluetooth Connection

The Printpods Mini Sticker Printer operates via the 'Luck Jingle' mobile application. Follow these steps to connect:

1. Download the 'Luck Jingle' app from your device's app store (available on iOS and Android).
2. Ensure Bluetooth is enabled on your smartphone.
3. Long press the power button on the printer to turn it on. The indicator light will illuminate.
4. Open the 'Luck Jingle' app and follow the on-screen prompts to search for and connect to your printer. The printer will typically appear as 'Mini Printer' or a similar device name.

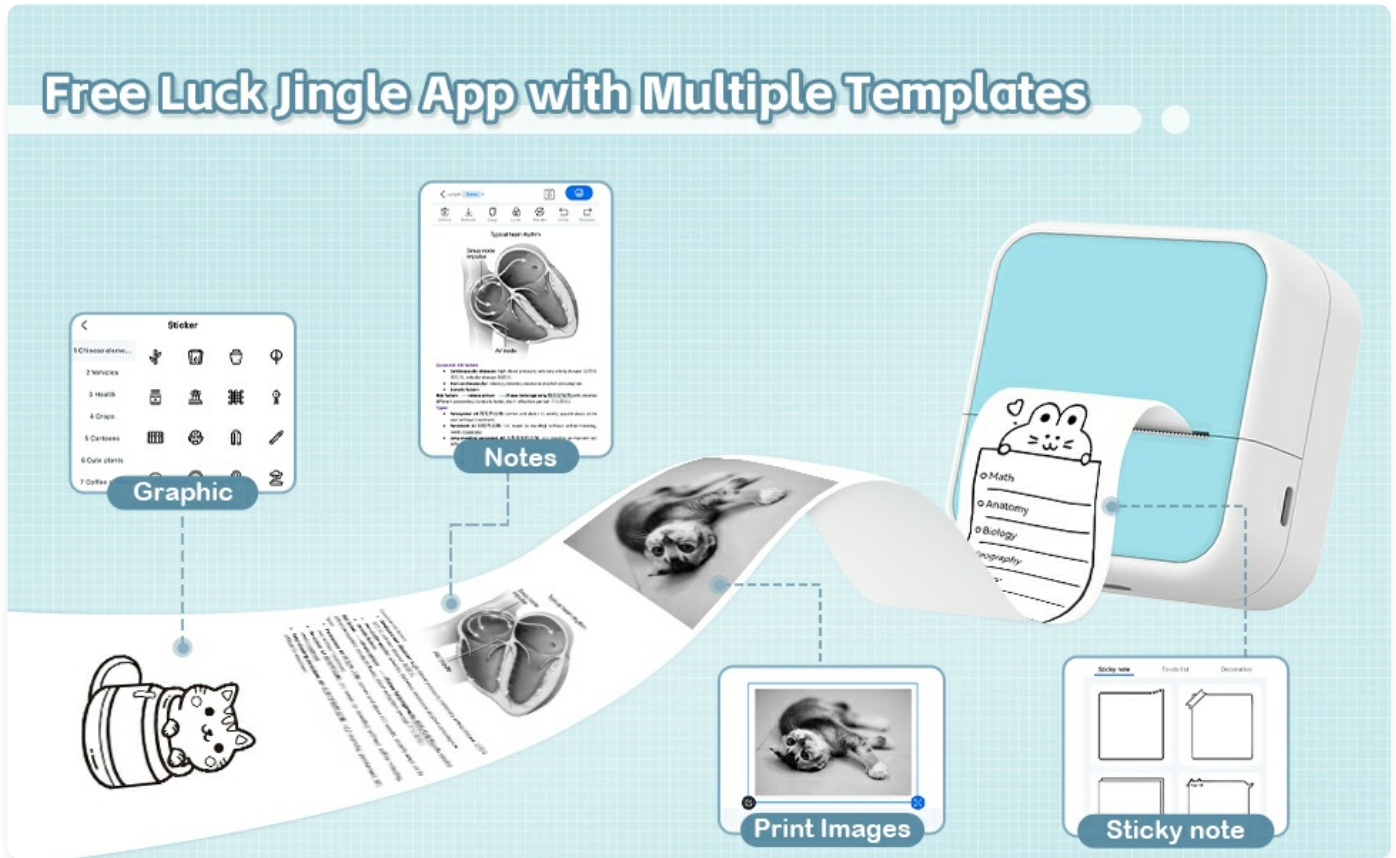

Visual guide demonstrating how to long press the power button to turn on the printer and then connect it within the Luck Jingle App on a smartphone.



A visual representation of the Bluetooth connection between the Printpods Mini Sticker Printer and a mobile device, highlighting the Luck Jingle app.

3.3 Loading Paper

The printer uses thermal sticker paper rolls. Follow these steps to load a new roll:

1. Gently open the top cover of the printer.
2. Insert a new paper roll into the compartment, ensuring the paper feeds out from the top and is aligned correctly.
3. Close the top cover firmly until it clicks into place.



A step-by-step visual guide showing how to open the top cover, insert the paper roll in the correct direction, and close the top cover of the printer.

4. OPERATING INSTRUCTIONS


The Printpods Mini Sticker Printer utilizes inkless thermal printing technology, producing monochrome (black and white) prints. All printing functions are managed through the 'Luck Jingle' app.

4.1 Using the Luck Jingle App

The app offers various features to create and print content:

- **Label Print:** Create custom labels with text, icons, and QR codes.
- **Note Editor:** Design and print notes, study materials, or journal entries.
- **Picture Images:** Print photos directly from your phone's gallery. Note that prints are monochrome.
- **Templates:** Access a variety of pre-designed templates for to-do lists, bullet journal elements, graphics, and more.

To print, select your desired content within the app, adjust settings (like size or density if available), and tap the print button. The printer will automatically feed and cut the paper.

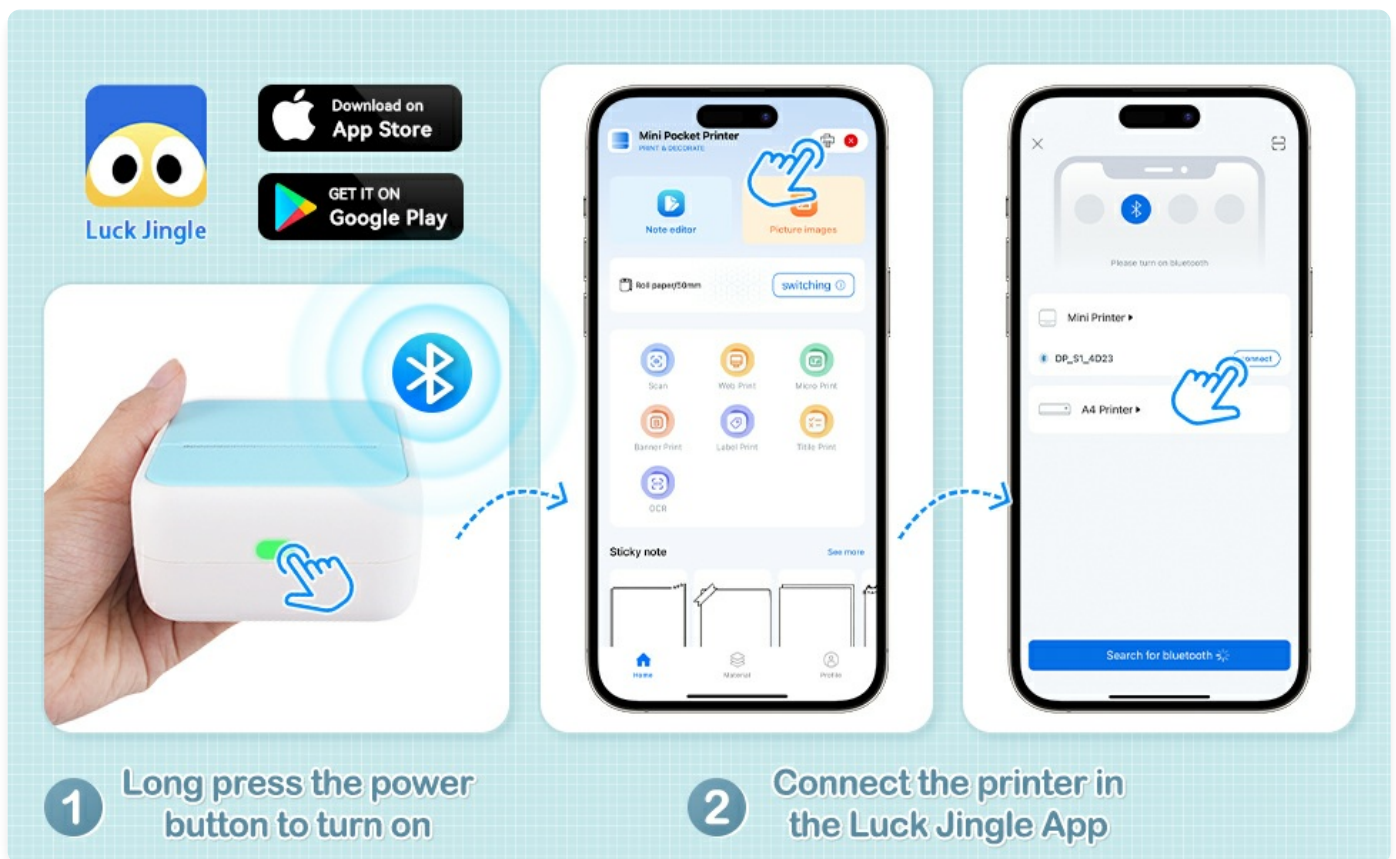

The Printpods Mini Sticker Printer integrated into a bullet journaling setup, demonstrating its use for creating custom entries and decorative elements.



The printer assisting with study notes, showing a printed checklist being added to a notebook, useful for students and organization.



The Printpods Mini Sticker Printer on a desk, demonstrating its capability to print various to-do lists and organizational templates.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the printer. Do not use liquid cleaners or abrasive materials.
- **Thermal Head:** The thermal print head is delicate. If print quality degrades, gently clean the print head with an alcohol swab, ensuring the printer is off and cool. Allow it to dry completely before use.
- **Paper Storage:** Store thermal paper in a cool, dry place away from direct sunlight to preserve its quality and print longevity.
- **Battery Care:** For optimal battery life, avoid extreme temperatures and charge the device regularly, even if not in frequent use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not connecting via Bluetooth	Bluetooth is off on device; Printer is off; App issue; Printer out of range.	Ensure Bluetooth is on. Turn printer off/on. Restart app/phone. Move closer to printer.
Poor print quality (faint, blurry)	Low battery; Incorrect paper loading; Dirty print head; Low image resolution.	Charge printer. Re-load paper correctly. Clean print head. Use higher resolution images or adjust image lighting in app.
Printer not printing	No paper; Paper jammed; Printer off; App error.	Check paper supply. Clear any paper jams. Ensure printer is on. Restart app.

Problem	Possible Cause	Solution
App is slow or unresponsive	Outdated app version; Device memory issues.	Update the 'Luck Jingle' app. Close other apps on your phone. Restart your phone.

7. SPECIFICATIONS


Feature	Detail
Model Name	S1
Brand	Anycash
Connectivity Technology	Bluetooth
Printing Technology	Thermal
Printer Output	Monochrome
Max Print Speed (Monochrome)	15 ppm
Max Copy Resolution (Black & White)	300 dpi
Maximum Media Size	2 Inches
Compatible Devices	Smartphones (iOS, Android)
Item Weight	11.3 ounces
Product Dimensions	1.5 x 3 x 3 inches
Power Source	1 C battery (included)
Material Type	Plastics

8. WARRANTY AND SUPPORT

The Printpods Mini Sticker Printer comes with a limited warranty. Please refer to the product packaging or the official Anycash website for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or any inquiries regarding your product, please contact Anycash customer service through the contact information provided on the official product page or within the 'Luck Jingle' application.

 Related Documents - S1

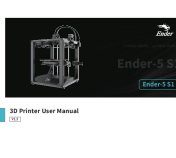	Liene PixCut S1 Photo Sticker Printer and Cutter User Manual A comprehensive user manual for the Liene PixCut S1 Photo Sticker Printer and Cutter, covering setup, operation, maintenance, and troubleshooting.
	MakeID S1 Pro Label Printer User Manual Comprehensive user manual for the MakeID S1 Pro label printer, covering installation, app usage, button functions, troubleshooting, and warranty information.
	Inoviva Slushie S1.0 User Manual: Create Delicious Frozen Drinks Comprehensive user manual for the Inoviva Slushie S1.0 frozen drink maker. Learn how to operate, clean, and maintain your machine, along with recipe inspirations for slushies, frappés, milkshakes, and cocktails.
	Anycubic Kobra S1 Combo User Manual Comprehensive user manual for the Anycubic Kobra S1 Combo 3D printer, covering setup, operation, features, and safety precautions.
	Creality Ender-3 S1 Pro 3D Printer User Manual Comprehensive user manual for the Creality Ender-3 S1 Pro 3D printer, detailing instructions for safe operation, lists of main parts, and accessory kit items.
	Creality Ender-5 S1 3D Printer User Manual Comprehensive user manual for the Creality Ender-5 S1 3D Printer, covering assembly, operation, maintenance, and troubleshooting. Learn how to set up and use your Ender-5 S1 for high-quality 3D printing.