

[Manuals.plus](#) /

› [WERHY](#) /

› WERHY H3 PRO Electric Scooter User Manual

WERHY H3PRO

WERHY H3 PRO Electric Scooter User Manual

Model: H3PRO

INTRODUCTION

Thank you for choosing the WERHY H3 PRO Electric Scooter. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new electric scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.



The WERHY H3 PRO Electric Scooter, featuring a comfortable seat and rear storage basket.

SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Do not ride in heavy rain or through puddles deeper than 1 inch.
- Ensure all bolts and quick releases are securely fastened before each ride.
- Familiarize yourself with local laws and regulations regarding electric scooter use.
- Maintain a safe distance from other vehicles and pedestrians.
- Avoid riding on slippery surfaces, steep inclines, or uneven terrain.
- Do not perform stunts or sudden maneuvers.
- The scooter is designed for one rider only. Do not carry passengers.

- Regularly check tire pressure, brake function, and battery level.




The WERHY H3 PRO features a triple protection braking system, including front and rear disc brakes plus an electronic brake, for enhanced safety.

PACKAGE CONTENTS

Please check the contents of your package carefully. If any items are missing or damaged, contact customer support.

- WERHY H3 PRO Electric Scooter (main unit)
- Adjustable Height Seat
- Rear Storage Basket
- Charger
- User Manual (this document)
- Assembly Tools (if required)

- Gift Lock
- Gift Recoil Pad
- Mobile Phone Holder

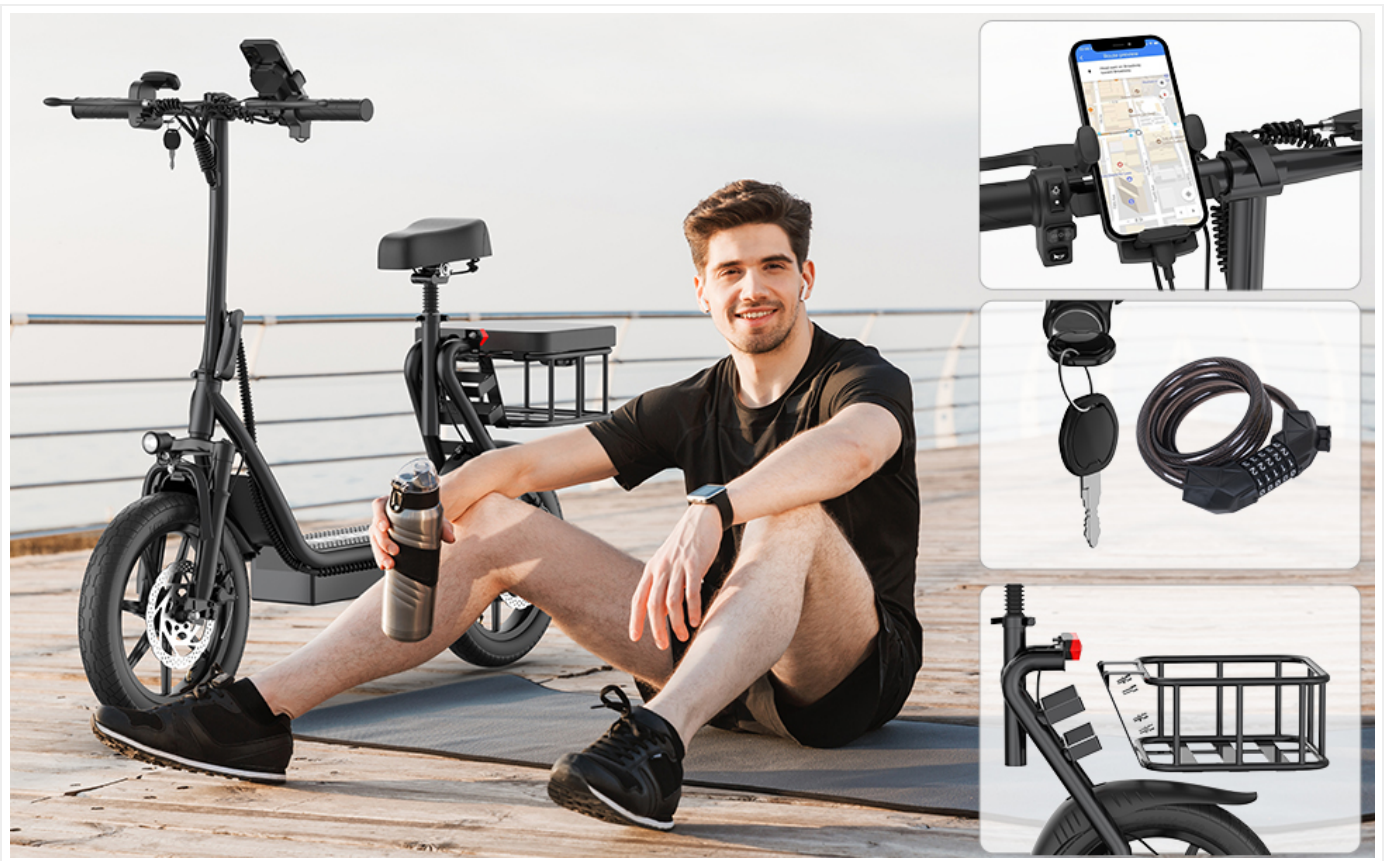

The WERHY H3 PRO comes equipped with a phone holder, a gift lock, and a gift recoil pad for added convenience and security.

SETUP AND ASSEMBLY

The WERHY H3 PRO Electric Scooter is designed for quick and easy setup. Follow these steps to prepare your scooter for its first ride:

1. **Unfolding the Scooter:** Carefully lift the handlebar stem until it locks into the upright position. Ensure the folding mechanism is securely latched.
2. **Attaching the Handlebars:** If detached, connect the handlebar assembly to the stem and secure it with the provided screws. Ensure all cables are clear and not pinched.
3. **Installing the Seat and Basket:** Attach the adjustable seat and rear storage basket to the designated mounting points. Tighten all fasteners securely.
4. **Charging the Battery:** Before first use, fully charge the scooter's battery. Connect the charger to the charging port and then to a power outlet. The indicator light on the charger will change when fully charged.
5. **Tire Pressure Check:** Verify that the 14-inch pneumatic tires are inflated to the recommended pressure (refer to the tire sidewall for details).
6. **Brake Check:** Test both front and rear brakes to ensure they function correctly and provide adequate stopping power.



The WERHY H3 PRO features a convenient foldable design, allowing for easy storage and transport in approximately 3 seconds.

OPERATING INSTRUCTIONS


Learn how to operate your WERHY H3 PRO Electric Scooter safely and efficiently.

Controls and Display

- **Power Button:** Press and hold to turn the scooter ON/OFF.
- **Accelerator:** Use the thumb throttle to control speed.
- **Brake Levers:** Located on the handlebars, activate the front and rear disc brakes.
- **LCD Display:** Shows current speed, battery level, riding mode, and mileage.
- **Headlight:** Press the light button to turn the adjustable headlight ON/OFF.
- **Taillight/Turn Signals:** The responsive taillight and conspicuous turn signals enhance visibility.
- **Horn:** Use the horn button to alert others.



LCD Display

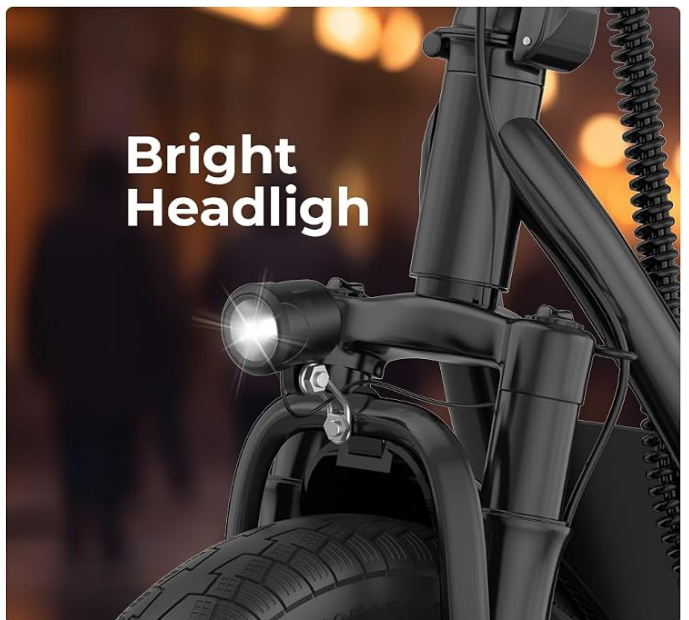


Bright Headlight

Rich Configuration Meet Riding Need



Turn Signal

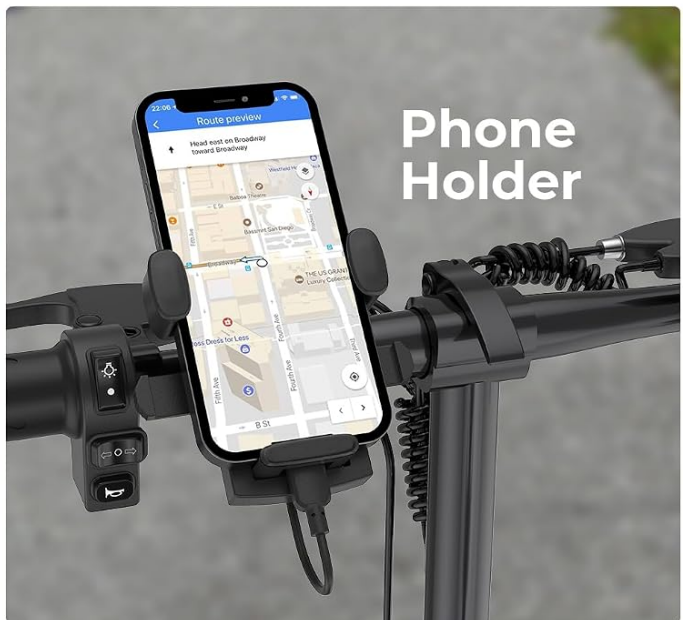

Phone Holder

The scooter's rich configuration includes an LCD display for vital information, a bright adjustable headlight, responsive turn signals, and a convenient phone holder.

Riding Tips

- Start slowly and gradually increase speed.
- Maintain a balanced posture, keeping both feet on the wide footboard.
- Use both brakes simultaneously for effective stopping.
- Anticipate turns and obstacles, and slow down accordingly.
- Adjust the seat height for comfortable riding.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth. Do not use high-pressure water jets or corrosive cleaners.

- **Tires:** Check tire pressure weekly. Inspect tires for wear, punctures, or damage.
- **Brakes:** Periodically check brake pads for wear and ensure brake levers operate smoothly. Adjust if necessary.
- **Battery Care:**
 - Charge the battery fully before long-term storage.
 - Store the scooter in a cool, dry place.
 - Avoid completely draining the battery before recharging.
- **Fasteners:** Regularly check and tighten all screws, bolts, and connections.
- **Lubrication:** Apply a small amount of lubricant to moving parts like the folding mechanism if needed.

TROUBLESHOOTING

This section addresses common issues you might encounter with your WERHY H3 PRO Electric Scooter.

Problem	Possible Cause	Solution
Scooter does not turn on	Low battery; Power button not pressed correctly; Loose connections	Charge the battery; Press and hold the power button firmly; Check all cable connections.
Loss of power during ride	Low battery; Overload; Motor overheating	Recharge battery; Reduce load (max 265 lbs); Allow motor to cool down.
Brakes not effective	Worn brake pads; Loose brake cable; Air in hydraulic system (if applicable)	Inspect and replace brake pads; Adjust brake cable tension; Consult a professional for hydraulic brake issues.
Unusual noises	Loose components; Debris in wheels; Worn bearings	Check and tighten all fasteners; Inspect wheels for foreign objects; Contact support if noise persists.

SPECIFICATIONS

Detailed technical specifications for the WERHY H3 PRO Electric Scooter.

Feature	Detail
Model Name	H3PRO
Motor Power	500W (750W Peak)
Max Speed	Up to 22 mph
Battery Capacity	22.5 AH
Max Range	Up to 49 Miles
Weight Limit	265 Pounds

Feature	Detail
Wheel Size	14 Inches (Pneumatic Tires)
Brake System	Front and Rear Disc Brakes + Electronic Brake
Suspension	Dual Shock Absorbers
Frame Material	Aluminum
Special Features	Adjustable Height Seat, Wide Footboard (21*9 inches), Digital Display, Headlight, Taillight, Turn Signals, Horn, Mobile Phone Holder, Rear Storage Basket, Foldable Design



**500W**
Powerful Motor
(750W Peak)

**22 MPH**
Max speed

**22.5 AH**
Battery

**265LBS**
Max Load

Key performance specifications of the WERHY H3 PRO Electric Scooter.

WARRANTY AND SUPPORT

WERHY is committed to providing high-quality products and excellent customer service.

Warranty Information

The WERHY H3 PRO Electric Scooter comes with a limited warranty:

- **One-year warranty** for the E-scooter and its various parts.
- **Six-month warranty** for the battery and motor.

This warranty covers manufacturing defects and workmanship. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

If you have any questions, require assistance with assembly, operation, or troubleshooting, or need to claim warranty service, please contact WERHY customer support. Refer to the contact information provided on the product packaging or the official WERHY website.

For more information, visit the official [WERHY Store on Amazon](#).

© 2024 WERHY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I recently attempted to replace the throttle on my WERHY H3 PRO 500W electric scooter with a keyed ignition, but the wiring pins were different from the generic 48V throttle I purchased. Now, after plugging the original throttle back in, the scooter will not turn on. How can I fix this?

It appears that attempting to connect the generic 48V throttle may have caused a short circuit or triggered a protection mechanism, which is why your WERHY H3 PRO no longer powers on even with...

[Read full answer](#)