

PEICHENG CP30

PEICHENG 10.1-inch Android 13 Tablet User Manual

Model: CP30

Your comprehensive guide to setting up, operating, and maintaining your new tablet.

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the PEICHENG 10.1-inch Android 13 Tablet. This device is designed to provide a versatile and powerful experience for entertainment, productivity, and communication. Featuring a high-speed Quad-Core CPU, ample storage, and a vibrant IPS display, your new tablet is ready for all your daily tasks.



Image: The PEICHENG 10.1-inch Android 13 Tablet, shown with its protective case acting as a stand, displaying a colorful image on its screen. The back of the tablet is visible in the background.

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- PEICHENG 10.1-inch Android 13 Tablet
- Protective Case (pre-installed or separate)
- USB-C Charging Cable
- Power Adapter
- User Manual (this document)

3. PRODUCT FEATURES

The PEICHENG CP30 tablet offers a range of features designed for optimal user experience:

Powerful Performance

Equipped with a high-speed Quad-Core CPU and Android 13 operating system, ensuring smooth application launches and efficient multitasking.

QUAD CORE CPU

Powerful quad-core CPU processor, running smoothly and enjoying the ultimate experience.



Image: A tablet screen showing a high-quality image of a car, emphasizing the smooth performance enabled by the Quad Core CPU.

Vibrant IPS Display

Enjoy stunning visuals on the 10.1-inch IPS screen with a resolution of 1280x800 pixels, offering wide viewing angles and vivid colors for an immersive experience.

IPS 1280*800 Screen

Wide field of view and great experience brought by the large screen



Image: The tablet screen displaying a beautiful ocean sunset, highlighting its IPS 1280x800 resolution for a wide field of view.

Ample Storage Capacity

With 8GB of RAM and 128GB of internal storage, you have plenty of space for apps, photos, videos, and documents. Expandable via microSD card (not included).

LARGE-CAPACITY STORAGE SPACE

RAM
8GB

ROM
128GB



Image: A tablet on a wooden desk showing its home screen with various app icons, emphasizing its 8GB RAM and 128GB ROM storage capacity.

Dual Cameras

Capture moments with the 2MP front camera for video calls and selfies, and an 8MP back camera for photos and videos.

HIGH DEFINITION FRONT AND REAR DUAL CAMERAS

Front Camera 2.0MP

Back Camera 8.0MP



Image: The tablet screen displaying a selfie taken by a person outdoors, illustrating the high-definition front (2.0MP) and rear (8.0MP) dual cameras.

Long-Lasting Battery

A 6000mAh battery provides extended usage times for reading, watching videos, and browsing, with convenient Type-C USB charging.

LARGE-CAPACITY BATTERY

6000mAh

Battery



Image: Three individuals gathered around a table, one using the tablet, signifying the long-lasting 6000mAh battery life for extended use.

Wi-Fi Connectivity & Dual Speakers

Stay connected with stable Wi-Fi and enjoy enhanced audio with powerful dual speakers for an improved entertainment experience.

10.1" TABLET



Android 13

10.1inch

8GB+128GB

2MP+8MP

Wifi



Image: A tablet resting on a table, accompanied by graphic icons representing its key features: Android 13, 10.1-inch screen, 8GB+128GB storage, 2MP+8MP cameras, and Wi-Fi connectivity.

4. SETUP GUIDE

4.1 Initial Charging

1. Connect the USB-C cable to the tablet's charging port.
2. Connect the other end of the USB-C cable to the power adapter.
3. Plug the power adapter into a wall outlet.
4. Allow the tablet to charge fully before first use (approximately 3-4 hours). The battery icon on the screen will indicate charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the PEICHENG logo appears on the screen.

- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" or "Shut down".
- **To Restart:** From the power-off menu, select "Restart".

4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network from the list and enter the password. This is essential for downloading updates and apps.
3. **Google Account:** Sign in with your existing Google account or create a new one. This is required to access the Google Play Store and other Google services.
4. **Date & Time:** Set your time zone and confirm date and time settings.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for security.
6. Follow any remaining on-screen prompts to complete the setup.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Tap:** Touch the screen once to open an app, select an item, or press a button.
- **Tap & Hold:** Touch and hold an item to access context menus or move icons.
- **Swipe:** Drag your finger across the screen to scroll through pages, lists, or switch between home screens.
- **Pinch-to-Zoom:** Place two fingers on the screen and pinch them together or spread them apart to zoom in or out.

5.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle the Wi-Fi switch to the **On** position.
3. Select your desired network from the list of available networks.
4. Enter the network password if prompted, then tap **Connect**.

5.3 Downloading Applications

Access the Google Play Store to download and install a wide variety of applications:

1. Tap the **Play Store** icon on your home screen or app drawer.
2. Search for the app you wish to download using the search bar.
3. Tap on the app icon, then tap **Install**.
4. The app will download and install automatically. Once complete, you can open it from your home screen or app drawer.

5.4 Using the Camera

To take photos or record videos:

1. Tap the **Camera** icon.

- 2. Tap the camera switch icon to toggle between the front (2MP) and back (8MP) cameras.
- 3. Tap the shutter button to take a photo or the record button to start/stop video recording.
- 4. Your photos and videos will be saved in the Gallery/Photos app.

6. MAINTENANCE

6.1 Cleaning the Tablet

- Use a soft, lint-free cloth (e.g., microfiber cloth) to gently wipe the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Do not spray liquid directly onto the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.

6.2 Battery Care

- Avoid fully discharging the battery frequently. Charge it before it drops below 20%.
- Do not expose the tablet to extreme temperatures (hot or cold), as this can degrade battery life.
- Use only the provided charging cable and power adapter or certified compatible accessories.

6.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features:

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates. Ensure your tablet is connected to Wi-Fi and has sufficient battery life before starting an update.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet won't turn on.	Battery is drained; Power button not pressed long enough.	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds.
Wi-Fi connection issues.	Incorrect password; Router issues; Tablet Wi-Fi off.	Verify Wi-Fi password. Restart your Wi-Fi router. Go to Settings > Network & internet > Wi-Fi and ensure Wi-Fi is on.
Apps are crashing or running slowly.	Too many apps open; Low storage; Outdated app.	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Update the app via Play Store. Restart the tablet.

Problem	Possible Cause	Solution
Screen is unresponsive.	Temporary software glitch.	Perform a forced restart: Press and hold the Power button for about 10-15 seconds until the tablet restarts.
Tablet storage is full.	Too many files/apps.	Delete unnecessary files and apps. Move photos/videos to cloud storage or an external SD card (if supported). Clear app caches.

If problems persist, consider performing a factory reset (Settings > System > Reset options > Erase all data (factory reset)). **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

8. SPECIFICATIONS

Feature	Detail
Model	CP30
Operating System	Android 13
Processor	Quad CORE CPU
RAM	8GB
Internal Storage	128GB
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels IPS
Front Camera	2MP
Rear Camera	8MP
Battery Capacity	6000mAh Lithium Ion
Wireless Connectivity	Wi-Fi (802.11g)
Dimensions (LxWxH)	10 x 6.4 x 0.3 inches
Item Weight	2.35 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where you purchased the PEICHENG tablet. Keep your proof of purchase for warranty

claims.

For technical assistance or further inquiries, please visit the official PEICHENG support website or contact their customer service directly. (Specific contact details are not provided in this manual; please refer to product packaging or official brand website for the most current information.)

© 2024 PEICHENG. All rights reserved.

Information in this manual is subject to change without notice.