

[Manuals.plus](#) /

› [GESKE](#) /

› GESKE LED Sonic Full-Body Brush 9-in-1 Instruction Manual

GESKE Sonic Full-Body Brush GK000708TQ01

GESKE LED Sonic Full-Body Brush 9-in-1

1

INSTRUCTION MANUAL

Product Overview

The GESKE LED Sonic Full-Body Brush 9-in-1 is designed for comprehensive body cleansing and intensive exfoliation. It features SmartSonic Pulsations and Red LED Light Active Regeneration Technology to promote skin renewal, deep cleansing, and massage, resulting in smoother, rejuvenated skin. The device includes an adjustable handle for full body coverage and exchangeable cleansing heads.



Image: GESKE LED Sonic Full-Body Brush in Turquoise.

Key Features:

- **Deep Cleansing:** Soft & Flexible Silicone Tips for effective deep cleansing and smoothing.
- **Intensive Exfoliation:** Dedicated surface to remove dead skin cells from feet, knees, and elbows.
- **Red LED Light Active Regeneration Technology:** Promotes skin renewal and a natural glow.
- **SmartSonic Pulsations:** Massages and tones the skin.
- **Adjustable Handle:** Extendable and rotatable telescoping handle for reaching all body parts, including the back.
- **Easy-Exchange Cleansing Head:** Detachable head for individual use.
- **Smart App Advantage:** Scan your skin for customized skincare routines and video-guided sessions.

Setup

Attaching the Brush Head:

1. Ensure the device is turned off.
2. Align the desired brush attachment (cleansing or exfoliating) with the head of the handle.
3. Gently press the attachment onto the handle until it clicks securely into place.

Charging the Device:

The GESKE LED Sonic Full-Body Brush is powered by a rechargeable Lithium Ion battery (included). Before first use, fully charge the device using the provided charging cable. Connect the cable to the device and a suitable power source. The indicator lights will show charging status.

Operating Instructions

General Usage:

1. Wet your skin and apply body wash or cleanser.
2. Turn on the brush by pressing the power button on the rim of the attachment for 2 seconds.
3. Select the desired intensity using the plus and minus buttons.
4. To activate the Red LED Light Active Regeneration Technology, press the power button on the back of the handle head for 2 seconds.
5. Use the adjustable handle to reach all parts of your body.

Refreshing Body Cleanse:

This mode focuses on using the brush for cleansing your skin.

1. Ensure your skin is wet, typically in the shower or bath.
2. Wet the brush head and apply body wash or cleanser to the brush or directly to your skin.
3. Gently move the brush in circular motions over your body. The Red LED Light Active Regeneration Technology helps to firm, lift, smooth, and tighten the skin.
4. Rinse your skin with water to wash away any cleanser, body wash, or foam.

Treat yourself
to a luxurious
pamper and
cleanse



Image: User demonstrating the GESKE LED Sonic Full-Body Brush on the neck area.

Silken Smooth Exfoliation:

This mode focuses on exfoliating your skin using the coarse surface of the attachment.

1. Use the exfoliation side on wet skin. Common areas for calluses include hands, feet, knees, and elbows.
2. Apply the exfoliating side to your skin where you have calluses and move it in gentle circular motions.
3. Use light and gentle pressure to avoid skin irritation.
4. After exfoliation, rinse the body with warm water.
5. Gently pat your skin dry with a soft towel. Avoid rubbing, as this can irritate freshly exfoliated skin.

Radiate a beautiful glow all over your body with deep cleansed, toned skin - with expert results

- 1 SmartSonic Pulsations that massage and tone your skin
- 2 Flexible silicone bristles for gentle yet efficient cleaning
- 3 Adjustable Telescoping Handle ensures full body coverage
- 4 Deep exfoliation to eliminate dead skin cells
- 5 Red Light LED minimizes fine lines and boosts skin renewal
- 6 Exchangeable heads for broad and targeted cleansing

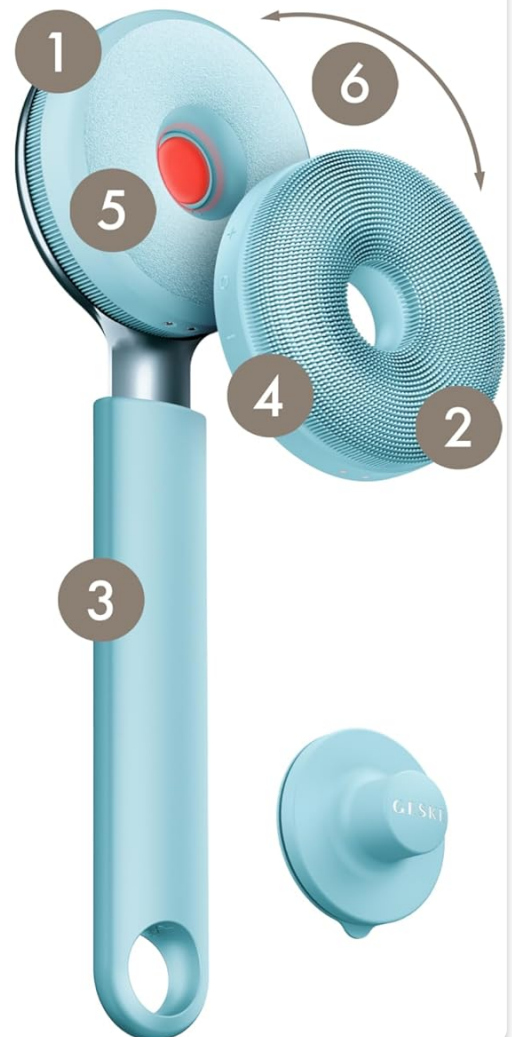


Image: Detailed diagram highlighting the features of the GESKE LED Sonic Full-Body Brush.

Official How-To Video:

Your browser does not support the video tag.

Video: Official tutorial on how to use the GESKE LED Sonic Full-Body Brush 9-in-1.

Maintenance & Care

Cleaning Your Device:

1. Turn the device off by holding the power button for 2 seconds.
2. Detach the cleansing head from the handle.
3. Wash the cleansing head and the device handle with mild soap and warm water.
4. Avoid submerging the entire device in water.
5. Spray the GESKE Organic Device Cleanser (if available) all over the attachments to ensure thorough cleaning.

6. Let the attachments dry completely before storing or reattaching them to the device.

For the best results, spray on GESKE devices to clean them thoroughly



Image: GESKE Organic Device Cleanser for thorough device cleaning.

After-Care for Skin:

After cleansing and exfoliation, apply a moisturizer to the treated areas. Keeping the skin hydrated can prevent and reduce the formation of calluses and maintain skin health.

Safety Information & Warnings

- Do not submerge the device in water.
- Keep away from children to prevent choking hazards from the battery.
- Avoid using the device over sensitive or irritated skin, open wounds, cuts, or rashes.
- Allow your skin to heal completely before using the device on affected areas.
- Do not use the device if you have an infection.

Troubleshooting

If you experience any issues with your GESKE LED Sonic Full-Body Brush, please refer to the troubleshooting section on the official GESKE website or contact customer support for assistance. Ensure the device is fully charged and properly assembled before use.

Specifications

Feature	Detail
Model Name	Sonic Full-Body Brush
Manufacturer Part Number	GK000708TQ01
Product Dimensions	3.15 x 1.38 x 11.89 inches
Item Weight	214 Grams (7.55 ounces)
Power Source	Rechargeable Lithium Ion Battery (1 included)
Operation Mode	Automatic
Product Benefits	Deep Cleansing, Exfoliating, Radiant Skin
Skin Type	All
Color	Turquoise
Date First Available	July 23, 2024

Warranty & Support

Warranty Information:

The GESKE LED Sonic Full-Body Brush comes with a **15-year guarantee**, ensuring long-term product reliability and customer satisfaction.



Image: GESKE device highlighting the 15-year guarantee and other features.

Customer Support:

For further assistance, product registration, or to explore more GESKE products and smart app features, please visit the official GESKE website or their Amazon Brand Store.

- GESKE Brand Store: [Visit Store](#)
- Smart App Guidance: [Download App](#)



SMARTAPP GUIDANCE

By consolidating the required knowledge into a single app, we streamline your beauty routine. We empower you with genuine accessibility to this expertise, transforming the dream of beauty into reality for everyone.



Image: SmartApp Guidance for personalized skincare routines.