

GESKE GK000708GY01

GESKE LED Sonic Full-Body Brush Instruction Manual

Model: GK000708GY01 | Brand: GESKE

1. INTRODUCTION

The GESKE LED Sonic Full-Body Brush is a versatile 9-in-1 device designed for comprehensive body care. It combines SmartSonic Pulsations with flexible silicone tips for deep cleansing and a red LED light for skin renewal. The device also features an intensive exfoliation surface to remove dead skin cells and an adjustable handle for reaching all body areas.

This manual provides essential information for the safe and effective use of your GESKE LED Sonic Full-Body Brush.

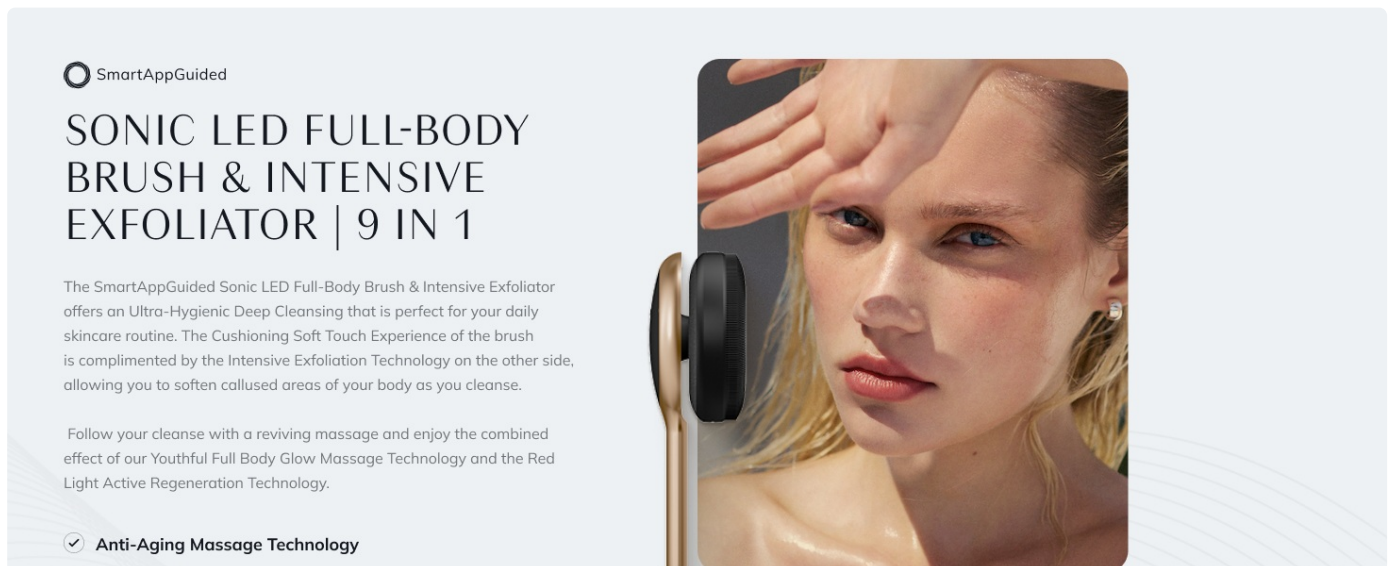


Image: Overview of the GESKE Sonic LED Full-Body Brush highlighting its 9-in-1 capabilities including deep cleansing, exfoliation, and LED light therapy.

Key Features:

- **SmartSonic Pulsations:** For effective cleansing and skin toning.
- **Flexible Silicone Bristles:** Gentle yet efficient for full-body cleaning.
- **Adjustable Telescoping Handle:** Ensures full body coverage, including hard-to-reach areas.
- **Deep Exfoliation Surface:** To eliminate dead skin cells and smooth rough areas.
- **Red LED Light:** Promotes skin renewal and reduces the appearance of fine lines.
- **Easy-Exchange Cleansing Heads:** For broad and targeted cleansing.

- **Smart App Integration:** Personalized skincare routines and video-guided sessions.

2. SAFETY INFORMATION

Please read all safety instructions before using the device. Failure to follow these instructions may result in injury or damage to the device.

- **Do not submerge the device in water.** While the device is waterproof (IPX7 rated), prolonged submersion is not recommended.
- Keep out of reach of children.
- Do not use on broken, irritated, or severely sunburned skin.
- If you have a skin condition or medical concerns, consult a dermatologist before use.
- Use only the provided charging cable.
- Discontinue use if you experience any discomfort or adverse reactions.

3. PACKAGE CONTENTS

Please refer to your product packaging for a complete and accurate list of contents. Typically, the package includes:

- GESKE LED Sonic Full-Body Brush (with attached cleansing head)
- Magnetic Charging Cable
- User Manual

4. SETUP

4.1 Initial Charge

Before first use, fully charge your GESKE LED Sonic Full-Body Brush. The device uses a rechargeable Lithium Ion battery.

1. Connect the magnetic charging cable to the charging port on the device.
2. Connect the USB end of the cable to a suitable USB power adapter (not included) or a computer USB port.
3. The indicator light on the device will show charging status. Refer to the device's specific light indicators for full charge notification.
4. A full charge typically takes several hours.

4.2 Attaching/Exchanging Cleansing Heads

The device features Easy-Exchange Cleansing Heads. To attach or detach a head:

1. Ensure the device is turned off.
2. To detach, gently pull the cleansing head away from the device handle.
3. To attach, align the new cleansing head with the connector on the handle and push firmly until it clicks into place.

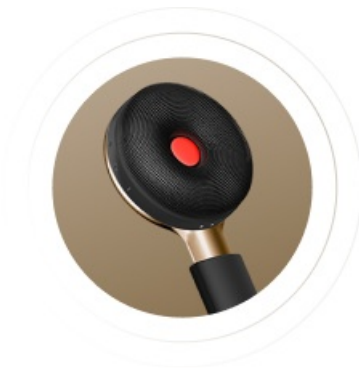 


Image: Close-up view of the detachable cleansing head, illustrating the design for easy exchange.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press and hold the power button located on the device handle to turn the device on or off.

5.2 Deep Cleansing and Massage

For deep cleansing and massage, use the side of the brush with the soft, flexible silicone tips.

1. Wet your body and apply your preferred body cleanser to the brush head or directly to your skin.
2. Turn on the device.
3. Gently move the brush in circular motions over your skin. The SmartSonic Pulsations will activate for effective cleansing.
4. The Red LED Light Active Regeneration Technology will also be active during this process, promoting skin renewal.
5. Rinse your body and the brush head thoroughly after use.

Treat yourself
to a luxurious
pamper and
cleanse

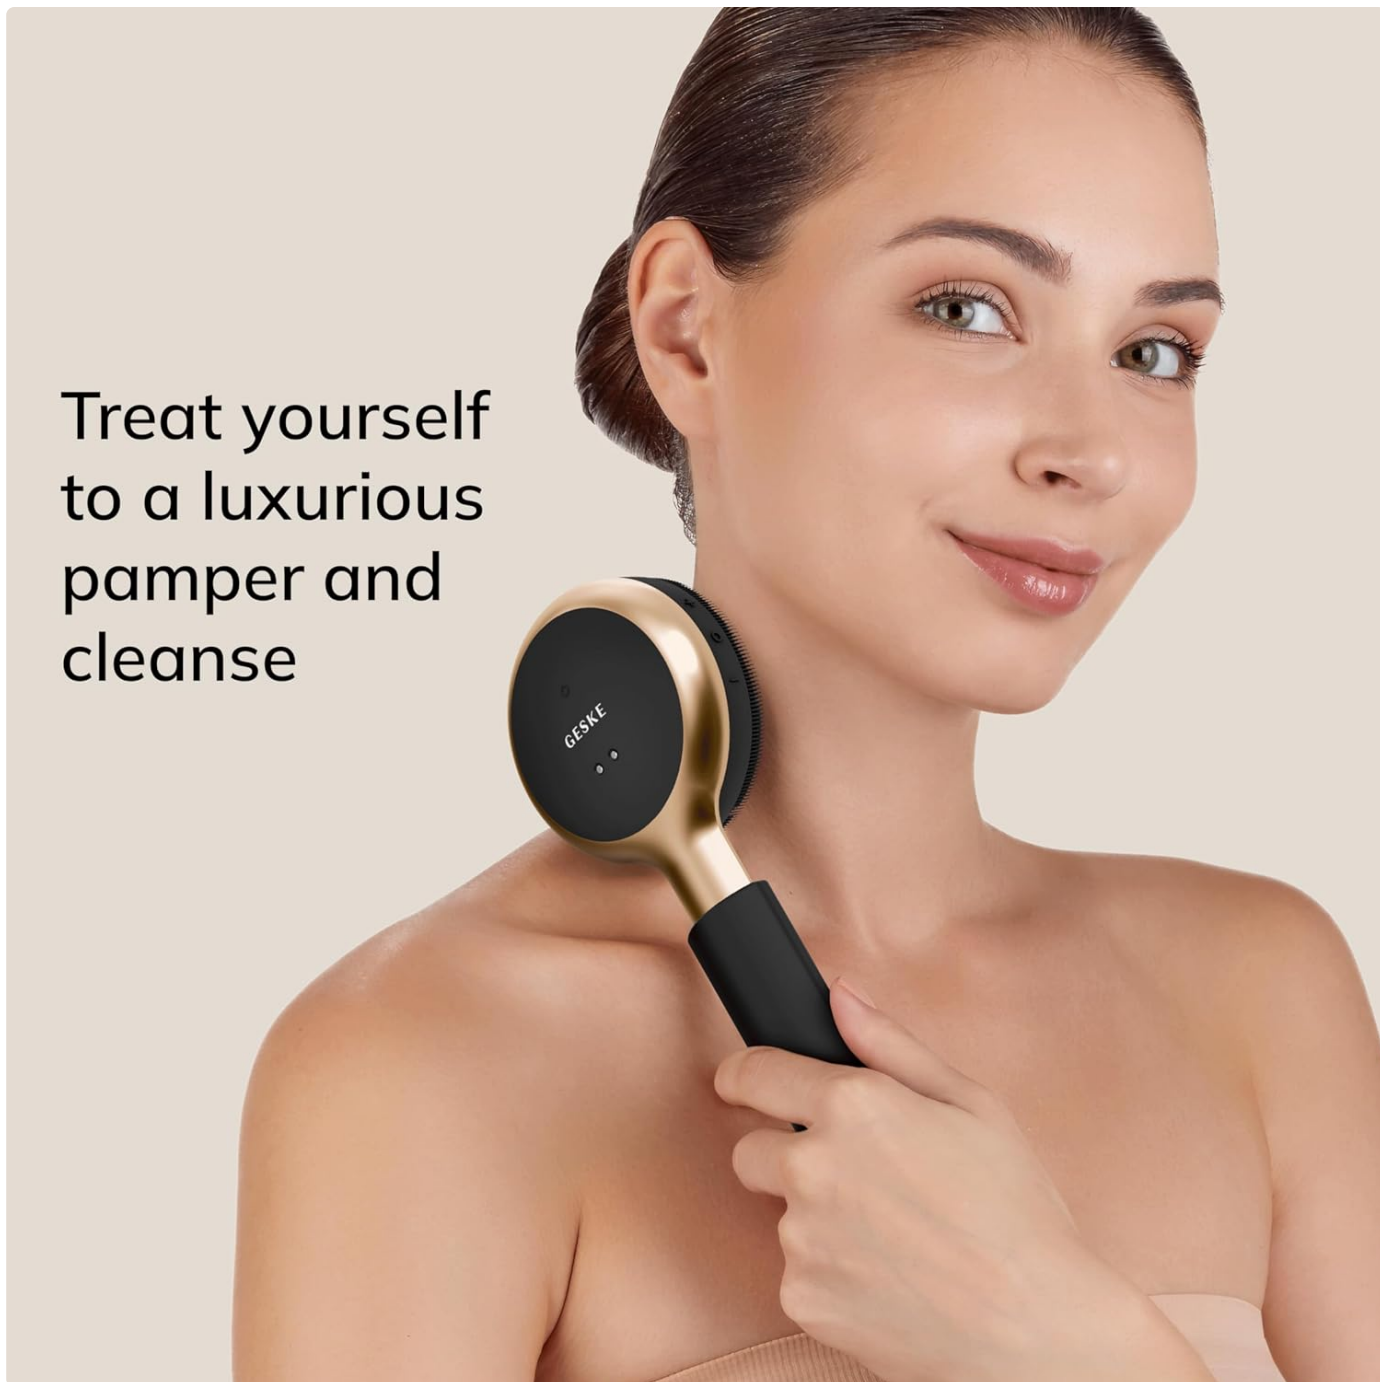 


Image: A woman demonstrating the use of the GESKE Full-Body Brush on her neck for cleansing and massage.

5.3 Intensive Exfoliation

For intensive exfoliation, flip the brush to use the dedicated exfoliation surface.

1. Use on damp skin, focusing on areas with rough skin or calluses such as feet, knees, and elbows.
2. Gently scrub the exfoliation surface over the desired areas.
3. Avoid excessive pressure to prevent skin irritation.
4. Rinse your skin and the brush head thoroughly after use.

5.4 Adjustable Handle

The telescoping handle can be extended and rotated to reach all parts of your body, including your back.

1. To extend the handle, pull the lower section away from the main body.
2. To rotate the head, gently twist the head section to your desired angle.

5.5 Smart App Integration

Enhance your skincare routine by connecting your device to the GESKE Smart App.

1. Download the GESKE app from your device's app store (www.geske.com/app).
2. Follow the in-app instructions to pair your device.
3. Utilize the skin scan feature to receive a customized skincare routine.
4. Access video-guided sessions for optimal use of your GESKE device.

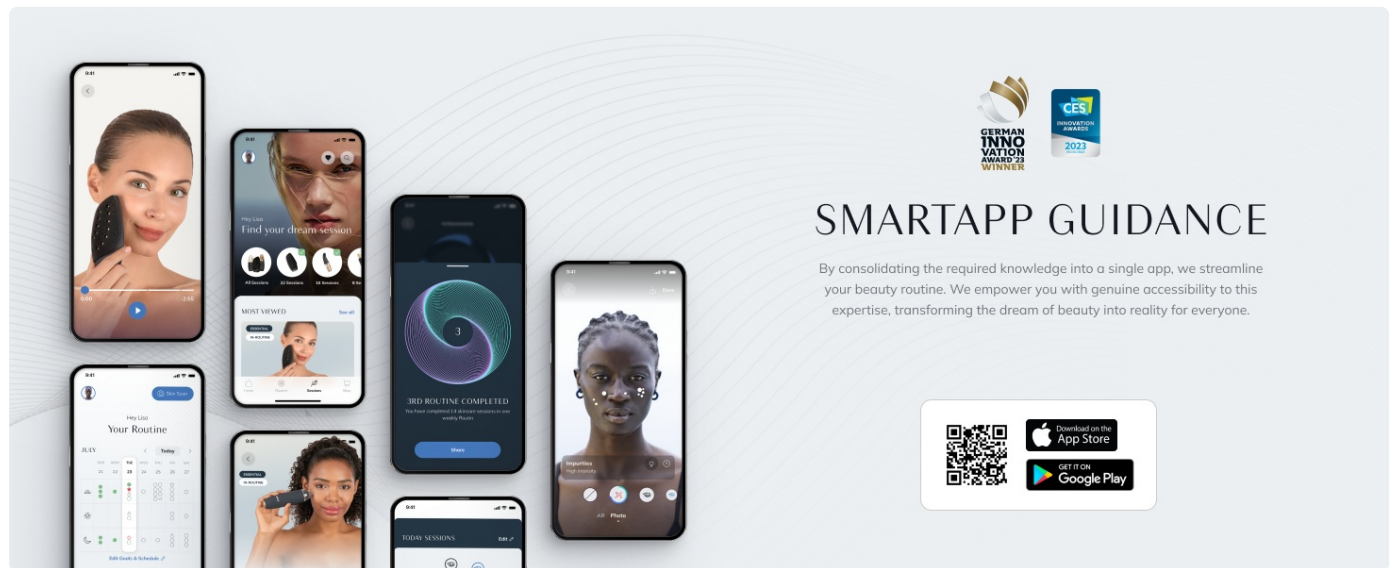 


Image: Screenshots of the GESKE SmartApp, showing personalized routines and how-to videos, with QR codes for download.

6. MAINTENANCE

6.1 Cleaning the Device

Proper cleaning ensures hygiene and extends the lifespan of your device.

- After each use, wash the cleansing head with mild soap and warm water.
- Rinse thoroughly to remove all soap residue.
- Allow the device to air dry completely before storing.
- Do not use abrasive cleaners or harsh chemicals, as these can damage the silicone material.

For the best results, spray on GESKE devices to clean them thoroughly



Image: GESKE Organic Device Cleanser, recommended for thorough cleaning of GESKE devices.

6.2 Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully dry before storage.

7. TROUBLESHOOTING

If you encounter any issues with your GESKE LED Sonic Full-Body Brush, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on or operate.	Low battery or no charge.	Ensure the device is fully charged using the magnetic charging cable.
Charging cable does not stay connected.	Improper alignment or debris in charging port.	Ensure the magnetic cable is correctly aligned with the charging port. Clean the charging port if necessary.
Weak or no pulsations.	Low battery.	Recharge the device fully.

Problem	Possible Cause	Solution
Cleansing head detaches during use.	Head not securely attached.	Ensure the cleansing head is firmly pushed onto the handle until it clicks into place.

If the problem persists, please contact GESKE customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	GK000708GY01
Product Dimensions	3.15 x 1.38 x 11.89 inches
Item Weight	7.55 ounces (214 g)
Power Source	Rechargeable Lithium Ion Battery (1 included)
Material Type	Silicone
Bristle Material	Silicone
Operation Mode	Automatic
Skin Type	All
Manufacturer	GESKE Beauty Tech Inc.
Product Care Instructions	Wash with Mild Soap and Warm Water. Allow to dry thoroughly after each use. Do not submerge in water.

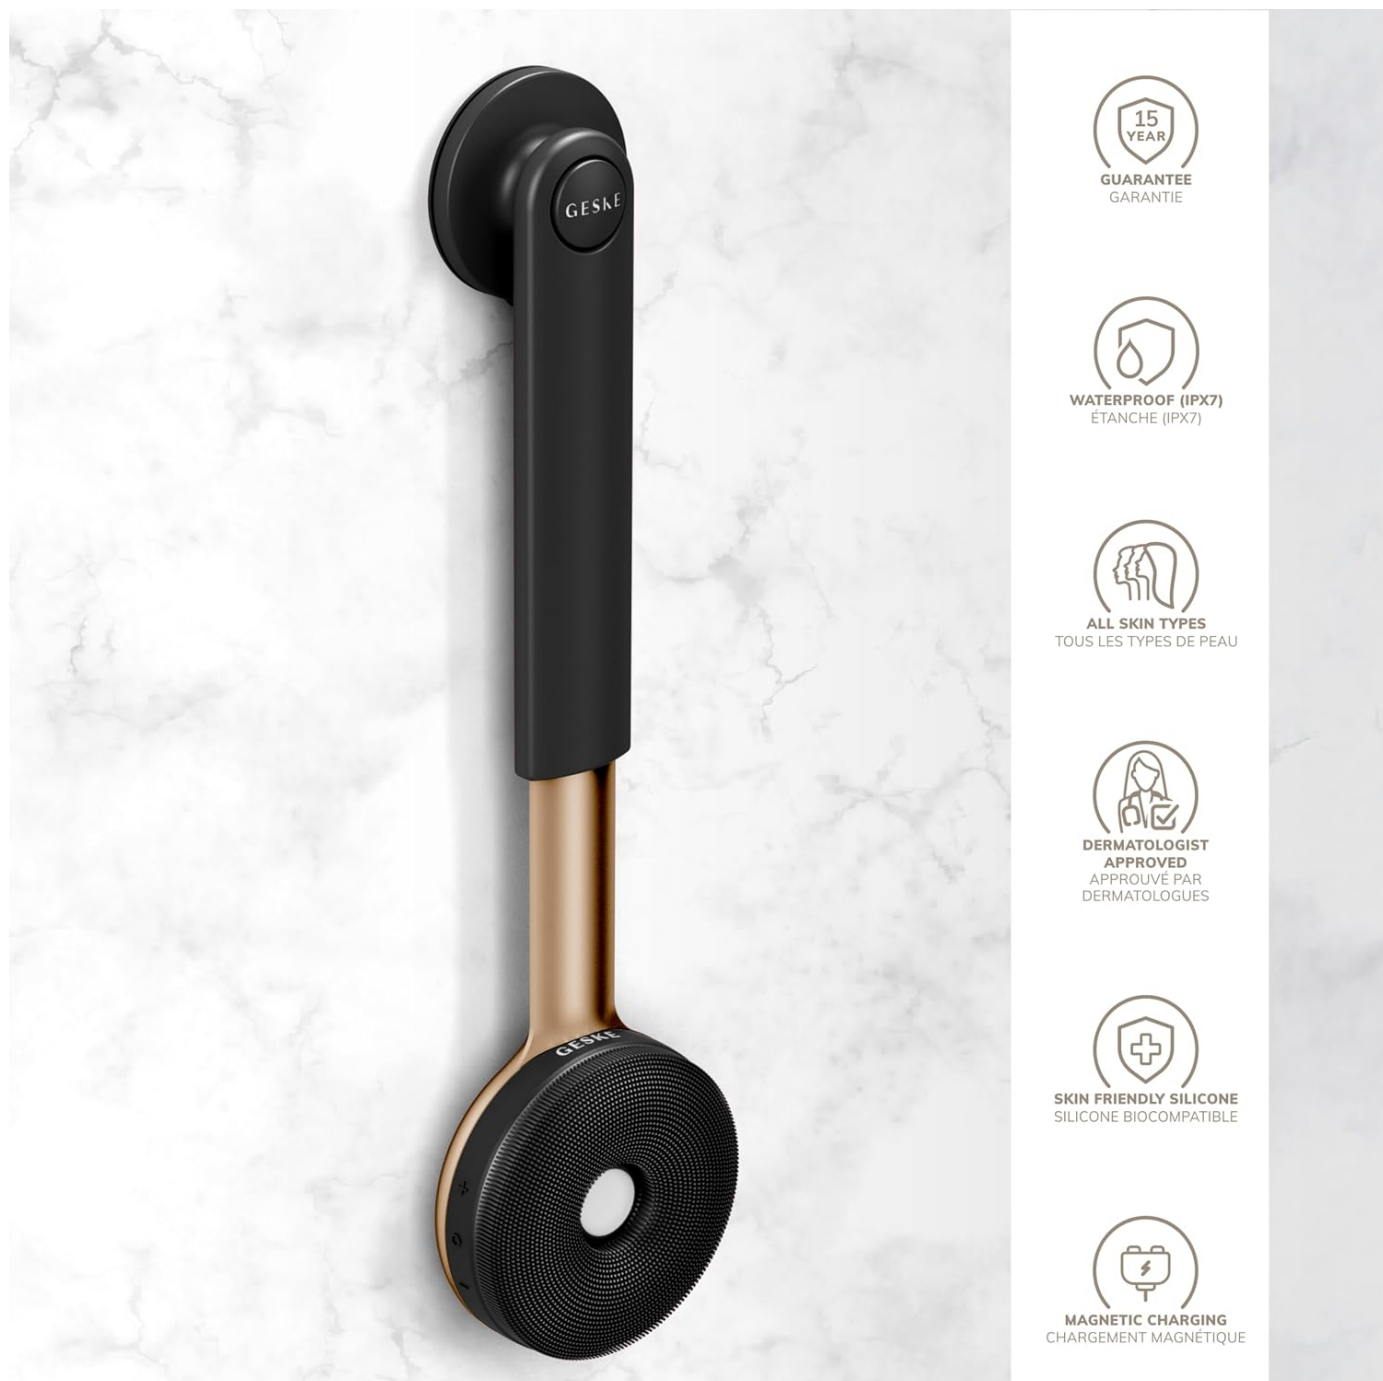 


Image: The GESKE Full-Body Brush highlighting key specifications such as IPX7 waterproof rating and 15-year guarantee.

9. WARRANTY

The GESKE LED Sonic Full-Body Brush comes with a **15-year guarantee**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official GESKE website.

10. SUPPORT

For further assistance, product inquiries, or technical support, please contact GESKE customer service.

- **Online Support:** Visit the official GESKE website or their Amazon Brand Store for FAQs and contact information.
- **GESKE Brand Store:** [GESKE German Beauty Tech Store](#)
- **Smart App:** The GESKE app also provides support resources and video guides. Download it here: www.geske.com/app

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question