

[Manuals.plus](#) /

› [Pro Breeze](#) /

› Pro Breeze OmniWarm 2500W Oil-Filled Radiator User Manual

Pro Breeze OmniWarm 2500W

Pro Breeze OmniWarm 2500W Oil-Filled Radiator User Manual

Model: OmniWarm 2500W | Brand: Pro Breeze



1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pro Breeze OmniWarm 2500W Oil-Filled Radiator. Please read these instructions thoroughly before use and retain them for future reference. The Pro Breeze OmniWarm 2500W oil-filled radiator is designed to provide efficient and consistent heating for various indoor spaces. It features 11 powerful fins, a digital display, multiple heat settings, an adjustable thermostat, Eco mode, and a 24-hour timer for optimized energy use.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.

- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes overheat protection and a tip-over switch for enhanced safety.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your oil-filled radiator:

- Heating Fins (11 elements)
- Control Panel with Digital Display
- Carry Handle
- Power Cord and Cable Tidy
- Swivel Wheels (4)
- Remote Control (for models with remote functionality)



Image 3.1: Overview of the Pro Breeze OmniWarm 2500W Oil-Filled Radiator, showing its main body, digital control panel, and included remote control.

4. SETUP AND ASSEMBLY

Your radiator comes with wheels that need to be attached before first use.

1. Carefully invert the radiator, ensuring it is stable.
2. Locate the wheel brackets and align them with the mounting points at the base of the radiator.
3. Insert the U-shaped bolts through the holes in the wheel brackets and around the base of the radiator fins.
4. Secure the brackets by tightening the wing nuts onto the U-shaped bolts. Ensure all wheels are firmly attached.
5. Return the radiator to an upright position.

Placement: Place the radiator on a firm, level surface, ensuring there is at least 1 meter (3 feet) of clear space around the front, sides, and rear for proper air circulation and safety.

Conception **compacte et portable**

Déplacez facilement votre appareil de chauffage entre les pièces à l'aide des 4 roues, et rangez-le lorsqu'il n'est pas utilisé.



Image 4.1: The radiator's compact design and dimensions (Height 61.8cm, Length 28cm, Depth 45.6cm), highlighting its portability with swivel wheels.

5. OPERATING INSTRUCTIONS

The radiator can be controlled via its touch control panel or the included remote control.

5.1 Powering On/Off

- Plug the power cord into a suitable wall outlet.

- Press the **Power button**  on the control panel or remote to turn the unit on or off. The digital display will illuminate.

5.2 Heat Settings

The radiator offers three heat settings:

- **Low (1000W)**
- **Medium (1500W)**
- **High (2500W)**

Press the **Mode button**  repeatedly to cycle through the available heat settings. The selected setting will be indicated on the digital display.

Plus de puissance de chauffage

Choisissez parmi 3 niveaux de chauffage puissants ou réglez la température souhaitée pour la sélection automatique.



Image 5.1: The control panel displaying current temperature and heat settings (Low, Medium, High), with an indication of the special temperature sensor.

5.3 Thermostat Control

The adjustable thermostat allows you to set your desired room temperature.

- When the heater is on, use the **Plus (+)** and **Minus (-)** buttons on the control panel or remote to adjust the target temperature.
- The digital display will show the set temperature. The heater will automatically turn off once the room reaches the set temperature and restart if the temperature drops.

5.4 Eco Mode

Eco mode helps save energy by intelligently adjusting the power output to maintain your desired temperature.

- Press the **Eco button**  on the control panel or remote to activate Eco mode.
- The Eco indicator will appear on the digital display.

Économisez les coûts énergétiques

Le mode Eco permet d'économiser de l'énergie en adaptant intelligemment le réglage de la puissance afin de maintenir la température que vous souhaitez.



Image 5.2: The radiator operating in Eco mode, designed for energy efficiency and cost savings.

5.5 24-Hour Timer

The 24-hour timer allows you to program the heater to turn on or off automatically.

- Press the **Timer button**  on the control panel or remote.
- Use the **Plus (+)** and **Minus (-)** buttons to set the desired number of hours (1-24) for the timer.
- If the heater is on, the timer will set the duration until it turns off. If the heater is off, the timer will set the duration until it turns on.

5.6 Mute Function

The mute function allows you to disable the control panel sounds for quiet operation.

- Press the **Mute button**  on the control panel or remote to toggle the sound on or off.

Régler & oublier

La minuterie de 24 heures avec des incréments d'une heure vous permet de ne chauffer que lorsque vous en avez besoin.

24



Fonction de mise en sourdine

Désactivez les sons du panneau de commande, parfait pour les moments de calme.

Image 5.3: The 24-hour timer function and the mute option for silent operation.

5.7 Child Lock

The child lock feature prevents accidental changes to settings.

- To activate the child lock, press and hold the **Mode button** and **Timer button** simultaneously for a few seconds until the lock icon appears on the display.
- To deactivate, repeat the same action.

6. MAINTENANCE AND STORAGE

6.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the heater in water or allow water to drip into the interior.
- Clean the air inlets and outlets regularly with a vacuum cleaner or a soft brush to remove dust and debris.

6.2 Storage

- When not in use, store the heater in a cool, dry place.
- Use the integrated cable tidy to wrap the power cord neatly.
- It is recommended to store the heater in its original packaging to protect it from dust and damage.

7. TROUBLESHOOTING

If you encounter issues with your radiator, refer to the following table:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Power button not pressed. Overheat protection activated. Tip-over switch activated.	Check if the power cord is securely plugged in. Press the Power button. Unplug, let cool for 30 minutes, then plug in again. Ensure the heater is on a flat, stable surface.
Heater is on but not heating.	Thermostat set too low. Eco mode active.	Increase the target temperature using the '+' button. Adjust the target temperature or switch to a higher heat setting.
Heater makes unusual noises.	Normal expansion/contraction of metal. Loose components.	This is normal during heating/cooling cycles. If persistent or loud, discontinue use and contact customer support.
Digital display is not working.	Power issue. Internal fault.	Check power supply. If problem persists, contact customer support.

Chauffer en toute sécurité

Équipé de fonctions de sécurité avancées pour se sentir en sécurité.



Image 7.1: Visual representation of the radiator's safety features, including overheat protection, child lock, and tip-over protection.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	Pro Breeze
Model	OmniWarm 2500W

Specification	Value
Power Output	2500W
Heat Settings	3 (1000W, 1500W, 2500W)
Voltage	230V (AC)
Dimensions (L x W x H)	28 x 44.2 x 61.8 cm
Item Weight	11.57 kg
Color	White
Features	Touch screen, 24-hour timer, automatic thermal cut-off, tip-over protection, Eco mode, adjustable thermostat, child lock.
Indoor/Outdoor Use	Indoor
Fuel Type	Oil

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Pro Breeze website. If you require assistance with troubleshooting or spare parts, please contact Pro Breeze customer service directly.

