

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GoGonova](#) /

› [GoGonova Zuel Cordless Hot Glue Gun Instruction Manual \(Model GT01001-GG4V2A01_FL\)](#)

GoGonova GT01001-GG4V2A01_FL

GoGonova Zuel Cordless Hot Glue Gun Instruction Manual

Model: GT01001-GG4V2A01_FL

INTRODUCTION

Thank you for choosing the GoGonova Zuel Cordless Hot Glue Gun. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.



The GoGonova Zuel cordless hot glue gun, shown with a bundle of mini glue sticks and USB-A to USB-C charging cables. The glue gun is pink and gray with an orange trigger.

IMPORTANT SAFETY INFORMATION

WARNING: Hot glue guns operate at high temperatures. Improper use can result in burns or other injuries. Always exercise caution.

- Do not touch the nozzle or melted glue, as they reach high temperatures and can cause severe burns.
- Keep out of reach of children. Adult supervision is required if children are present.
- Use in a well-ventilated area.
- Never leave the hot glue gun unattended when it is powered on or heating.
- Do not use the glue gun near flammable materials or liquids.
- Ensure the glue gun is placed on a stable, heat-resistant surface when not in use. The built-in stand is designed for this purpose.

- Only use mini glue sticks compatible with this device.
- Do not attempt to disassemble or modify the glue gun.
- If the glue gun is damaged, discontinue use immediately and contact customer support.
- The product will not operate while charging.

PACKAGE CONTENTS

- GoGonova Zuel Cordless Hot Glue Gun
- Mini Glue Sticks (25 Pcs)
- USB-C Charging Cable
- User Manual (this document)

SETUP

1. Charging the Device

Before first use, fully charge the glue gun. The device is equipped with a 2Ah Lithium Ion battery.

1. Connect the provided USB-C charging cable to the USB-C port on the back of the glue gun.
2. Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
3. The indicator light on the base will illuminate **red** while charging.
4. Once fully charged, the indicator light will turn **green**.
5. Unplug the charging cable once charging is complete.

USB-Type C Rechargeable

Recharge Anywhere, Craft Without Limits



The GoGonova Zuel glue gun is shown connected via a USB-C cable to a portable power bank, illustrating its rechargeable feature. A digital clock and a note about not operating while charging are also visible.



This image illustrates the different states of the glue gun's indicator lights: a green light indicates fully charged or in use, a flashing red light signals low power, and a solid red light means the device is currently charging.

2. Inserting a Glue Stick

Insert a mini glue stick into the circular opening at the back of the glue gun until it stops. Do not force it.

OPERATING INSTRUCTIONS

1. Powering On and Heating

- Press and hold the power button (usually located on the base or handle) for a few seconds until the indicator light turns on.
- The glue gun will begin to heat up. It features a 20-second fast preheating function.
- Once ready for use, the indicator light will be **green**.



An X-ray view of the GoGonova Zuel glue gun, illustrating the internal 2000 mAh battery and the rapid heating mechanism, emphasizing its 20-second fast heating capability.

2. Applying Glue

- Hold the glue gun by its ergonomic handle.
- Aim the nozzle at the desired application area.
- Gently squeeze the trigger to dispense melted glue. The anti-drip design ensures glue only flows when the trigger is pressed.
- Apply glue quickly, as hot glue sets rapidly.



A detailed view of the glue gun's nozzle, demonstrating the upgraded anti-drip design with a self-locking suppression mechanism that prevents glue from flowing unless the trigger is pressed.

Spark Your Creativity

Make, Create, Inspire

Paper



Fabric



Metal



Wood



A collage showing various crafting applications for the glue gun, including paper flowers, a fabric Christmas tree, metallic embellishments, and a wooden architectural model, demonstrating its versatility.

3. Resting the Glue Gun

When not actively applying glue, place the gun upright on its built-in stand on a heat-resistant surface. This prevents glue from dripping and keeps the nozzle elevated.

Upright Standing Design

Stands Steady, Always Ready



Perfectly Balanced



Built-In Stand

An illustration of the glue gun standing upright on its base, emphasizing its perfectly balanced and built-in stand design for stability and readiness during use.

4. Powering Off

- Press and hold the power button until the indicator light turns off.
- The glue gun features a smart power-off function and will automatically shut down after 5 minutes of inactivity to conserve battery and enhance safety.
- Allow the glue gun to cool completely before storing.

MAINTENANCE

- **Cleaning:** Ensure the glue gun is completely cool and unplugged before cleaning. Gently wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Nozzle Care:** Never attempt to clean the nozzle while the glue gun is hot. Any hardened glue around the nozzle can be carefully removed once the gun is cold. Do not use sharp objects that could damage the nozzle.
- **Storage:** Store the glue gun in a dry, cool place, away from direct sunlight and out of reach of children. Ensure no glue

sticks are left partially melted in the chamber during long-term storage.

- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Glue gun does not heat up.	Battery is low or depleted. Power button not pressed correctly.	Charge the glue gun fully. Press and hold the power button until the indicator light turns on.
Glue does not dispense.	Glue gun not hot enough. Glue stick not fully inserted. Nozzle clogged.	Allow more time for preheating. Push the glue stick further into the chamber. Ensure the glue gun is cool, then carefully remove any hardened glue from the nozzle.
Glue gun drips excessively.	Incorrect glue stick size. Glue gun is too hot (unlikely with anti-drip).	Ensure you are using mini glue sticks. Place the gun upright on its stand when not in use.
Indicator light flashing red.	Low battery.	Recharge the glue gun.
Glue gun not working while charging.	This is a safety feature.	The glue gun is designed not to operate while charging. Disconnect from power to use.

SPECIFICATIONS

Brand	GoGonova
Model Number	GT01001-GG4V2A01_FL
Power Source	Battery Powered (Cordless)
Battery Type	1 Lithium Ion (included)
Battery Capacity	2000 mAh (2Ah)
Charging Port	USB-C
Voltage	5 Volts
Preheating Time	Approx. 20 seconds
Auto Shut-off	After 5 minutes of inactivity
Compatible Glue Sticks	Mini (standard size)
Compatible Materials	Glass, Metal, Wood, Paper, Fabric
Item Weight	1.23 pounds
Product Dimensions	7.4 x 2.5 x 7.3 inches

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GoGonova website. Please have your model number (GT01001-GG4V2A01_FL) ready when contacting support. You can visit the GoGonova store at [GoGonova Amazon Store](#).

© 2025 GoGonova. All rights reserved.