



[Manuals.plus](#) /

› [CHARMELEON](#) /

› CHARMELEON 10x12 FT Cedar Wood Gazebo Instruction Manual

CHARMELEON 10x12

CHARMELEON 10x12 FT Cedar Wood Gazebo Instruction Manual

Model: 10x12 Grey Wood Color-1

1. INTRODUCTION

Thank you for choosing the CHARMELEON 10x12 FT Cedar Wood Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor structure. Please read these instructions thoroughly before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please observe the following precautions:

- Do not place the product underneath electrical lines.
- Keep children away from the assembly area. This product contains small parts which can be swallowed by children.
- Keep fingers away from areas where they can be pinched or trapped during assembly.
- Do not attempt to assemble the gazebo if any parts are missing. Contact customer support for replacement parts.
- Ensure the gazebo is securely anchored to the ground to prevent tipping in strong winds.
- Regularly inspect all connections and components for tightness and wear.

3. PRODUCT OVERVIEW

The CHARMELEON 10x12 FT Cedar Wood Gazebo is designed to provide a durable and spacious outdoor shelter. It features a natural cedar wood frame and a galvanized steel hardtop roof.

Key Features:

- **Premium Natural Cedar Frame:** Constructed from solid cedar posts and frames for durability and natural resistance to insects and decay.
- **Heavy-Duty Galvanized Steel Hardtop:** A 3mm thick galvanized steel sloped roof provides waterproof, rustproof, and UV-protective qualities. Designed to support snow loads and withstand strong winds.
- **Spacious Interior:** A 10x12 foot open interior offers ample space for outdoor furniture, grilling stations, and social gatherings.
- **Stable Anchoring Plate:** Alloy plates provide dependable wind resistance and facilitate quick installation.

Product Dimensions:

Refer to the diagram below for detailed product dimensions.



Figure 3.1: Overall dimensions of the gazebo. The structure measures approximately 12.86 ft in length, 10.13 ft in width, and 8.17 ft in height at its peak.

Material Quality:

The gazebo frame is made from select-grade cedarwood, known for its tight grain, insect prevention, fade and warp resistance, and eco-friendly properties. The roof features a power coating for enhanced weather resistance.

Materials Matter
Genuine cedar withstands the test of time against wind, rain, and naturally repels pests.

Premium Material & Exquisite Workmanship

VS

OURS

- ✔ Select-Grade Cedarwood (20+ Year Growth Verified)
- ✔ Naturally repels bugs
- ✔ Sturdy

OTHERS

- ✘ Not cedar
- ✘ Attracts termites
- ✘ Cracks easily

Sustainable Cedar Forests

High-quality Structural Posts

Freshly Harvested Logs

Precision-Milled Lumber

Figure 3.2: Detail of the cedar wood frame, emphasizing its quality and natural benefits.

Others: Painting **Ours: Power Coating**

Figure 3.3: Comparison of roof coating types, demonstrating the enhanced durability of power coating.

Weather Resistance:

The gazebo is engineered to withstand various weather conditions, including heavy snow loads and strong winds.

Built to Last

Withstands up to **83** mph winds (Beaufort Scale 12)

Figure 3.4: Gazebo structure designed to resist high winds.

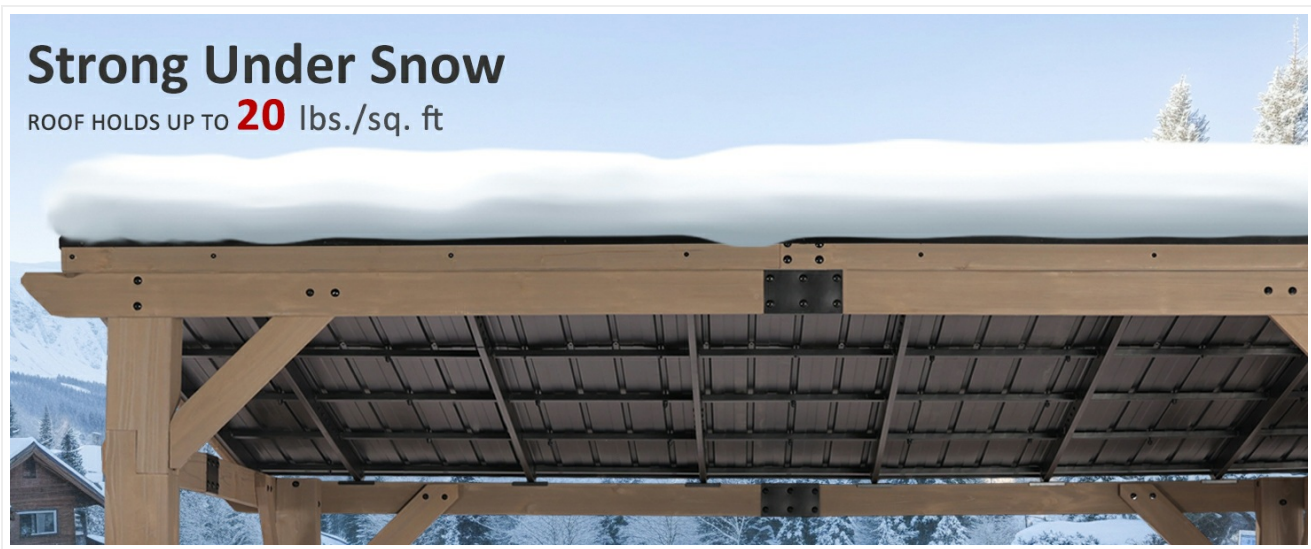


Figure 3.5: Gazebo roof demonstrating its capacity to hold snow.

4. SPECIFICATIONS

Brand	CHARMELEON
Model	10x12 Grey Wood Color-1
Material	Cedar Wood (Frame), Galvanized Steel (Roof)
Style	Modern
Product Dimensions (L x W x H)	136.4"L x 111.3"W x 98"H (approx. 11.37 ft L x 9.28 ft W x 8.17 ft H)
Item Weight	399 Pounds
Water Resistance Level	Waterproof
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Color	Gray

5. SETUP AND ASSEMBLY

The CHARMELEON Gazebo is designed for straightforward DIY assembly. Detailed, step-by-step instructions with illustrations are included in the product packaging. Please ensure all parts are present before beginning assembly.

Important Assembly Notes:

- The item is delivered in multiple packages (typically 4 boxes) and may arrive on separate days. Wait for all packages before starting assembly.
- Assembly is recommended with 2-3 people.
- Ensure the assembly area is clear and level.
- Use the provided hardware and tools as specified in the assembly guide.
- Securely anchor the gazebo to a solid surface using the stable anchoring plates provided.



Figure 5.1: Stable anchoring plate for secure installation.

6. OPERATING INSTRUCTIONS

The CHARMELEON Gazebo provides a versatile outdoor space. Its open design allows for various uses, from dining to relaxation.

General Use:

- The gazebo is suitable for year-round use, offering shade from the sun and protection from rain and light snow.
- Ensure proper ventilation if using a grill or other heat-producing appliances inside the gazebo.

Optional Accessories (Sold Separately):

Curtains and netting can be added to enhance privacy and protection from insects. These accessories are typically designed for easy installation and removal.

Your browser does not support the video tag.

Video 6.1: This video demonstrates the versatility of the CHARMELEON gazebo, showcasing its use as an outdoor living space and the optional curtain feature. It highlights the spacious interior and the ability to open or close the curtains for different settings.

7. MAINTENANCE

Proper maintenance will extend the life and appearance of your CHARMELEON Gazebo.

Cleaning:

- **Wood Frame:** Clean the cedar wood frame with a mild soap and water solution. Rinse thoroughly and allow to air dry. Avoid harsh chemicals or abrasive cleaners that could damage the wood finish.
- **Steel Roof:** The galvanized steel roof can be cleaned with a soft brush or cloth and mild soapy water. Rinse well to prevent soap residue buildup.
- **Curtains/Netting (if applicable):** Follow the care instructions provided with the specific fabric. Typically, these can be spot cleaned or machine washed on a gentle cycle.

Seasonal Care:

- **Winter:** While the roof is designed for snow loads, it is advisable to remove excessive snow accumulation to prolong the roof's lifespan.
- **General Inspection:** Periodically check all bolts, screws, and connections to ensure they remain tight. Retighten as necessary.



Figure 7.1: A well-maintained gazebo providing an inviting outdoor area.

8. TROUBLESHOOTING

This section addresses common issues you might encounter with your gazebo.

Common Issues and Solutions:

- **Wobbly Structure:** Ensure all bolts and screws are tightened. Verify that the gazebo is installed on a level surface and securely anchored.
- **Water Leakage from Roof:** Check for any gaps in the roof panel installation. Ensure all roof screws are properly sealed. Verify that the sloped design allows for proper water runoff and that gutters (if installed) are

clear.

- **Missing Parts:** If parts are missing upon delivery, refer to the contact information in the Warranty and Support section to request replacements. Do not proceed with assembly if critical parts are absent.
- **Difficulty during Assembly:** Review the detailed assembly instructions provided in the packaging. Ensure components are oriented correctly. If issues persist, contact customer support.

9. WARRANTY AND SUPPORT

CHARMELEON is committed to providing high-quality products and customer satisfaction. For specific warranty details, please refer to the documentation included with your purchase or contact CHARMELEON customer support.

Customer Support:

For assistance with missing parts, assembly issues, or any other inquiries, please contact CHARMELEON customer support. Contact information can typically be found on the product packaging or the official CHARMELEON website.