



[Manuals.plus](#) /

› [Furniwell](#) /

› Furniwell FN-0170 41-inch Kitchen Pantry Storage Cabinet User Manual

Furniwell FN-0170

Furniwell FN-0170 41-inch Kitchen Pantry Storage Cabinet User Manual

Model: FN-0170

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Furniwell 41-inch Kitchen Pantry Storage Cabinet. Please read these instructions thoroughly before assembly and retain them for future reference.



Image: The Furniwell 41-inch Kitchen Pantry Storage Cabinet with its doors open, revealing multiple shelves and door-mounted organizers filled with various kitchen and pantry items.

SAFETY INFORMATION

For your safety and to prevent damage to the product, please observe the following:

- **Anti-Tip Device:** Always secure the cabinet to the wall using the provided anti-tip device. This is crucial to prevent the cabinet from tipping over, especially in households with children or pets.
- **Magnetic Clasp:** Be cautious when closing the cabinet doors due to the strong magnetic clasps to prevent pinch injuries.
- **Weight Distribution:** Distribute items evenly across shelves. Avoid placing excessively heavy items on upper shelves or door shelves to maintain stability.
- **Assembly:** Follow all assembly instructions carefully. Do not skip steps or use unapproved parts.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Assembly parts with assembly hardware (screws, dowels, hinges, magnetic clasps, knobs, anti-tip device)
- English manual (this document)
- Cabinet panels (top, bottom, side, back, shelves, doors)

SPECIFICATIONS

Feature	Detail
Brand	Furniwell
Model Number	FN-0170
Color	White
Material	Engineered Wood (Fiberboard)
Product Dimensions (D x W x H)	23.6"D x 23.6"W x 41.3"H
Item Weight	51.8 Pounds
Number of Shelves	5 (internal) + 10 (door dividers)
Special Features	Adjustable Shelves, Anti-tip Device, Magnetic Door Clasps
Assembly Required	Yes

• 41.4" Kitchen Pantry Cabinet



Image: Detailed diagram illustrating the internal and external dimensions of the Furniwell 41-inch Kitchen Pantry Cabinet, including shelf depths and overall height and width.

SETUP AND ASSEMBLY

The Furniwell Kitchen Pantry Storage Cabinet requires assembly. Please follow the detailed step-by-step instructions provided in the separate English manual included in your package. Ensure all parts are identified and laid out before starting.

1. **Unpack and Verify:** Carefully unpack all components and compare them against the parts list in the included manual. Report any discrepancies to customer support.
2. **Prepare Workspace:** Assemble the cabinet on a clean, flat, and soft surface to prevent scratches.
3. **Follow Manual:** Adhere strictly to the assembly sequence and instructions provided in the dedicated assembly manual. Pay close attention to diagrams and part labels.
4. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the material.
5. **Install Anti-Tip Device:** Once the cabinet is fully assembled and in its final position, install the anti-tip device to

secure it to the wall. This step is critical for safety.

Note: Some users have reported that the backside and bottom pieces may require additional reinforcement, such as wood glue, if they do not fit snugly. Ensure all connections are firm.



Image: Close-up views highlighting key structural components of the cabinet, including the sturdy top plate, durable metal hinges, ergonomic wood knobs, and the robust base design.

OPERATING INSTRUCTIONS

Your Furniwell pantry cabinet is designed for versatile storage in various rooms.

- **Adjustable Shelves:** The cabinet features 5 internal shelves and 10 door dividers. The internal shelves are height-adjustable, allowing you to customize the storage space for items of different sizes. To adjust, remove items, lift the shelf, and reposition the shelf pins to the desired height.
- **Door Storage:** The door dividers are framed to prevent items from falling out, ideal for smaller items like spice bottles or condiments. Avoid overloading the door shelves, as excessive weight can cause the doors to droop and become difficult to open or close.

- **Magnetic Clasps:** The strong magnetic clasps ensure the cabinet doors remain securely closed, keeping contents safe and dust-free.
- **Placement:** This freestanding cabinet is suitable for kitchens, dining rooms, living rooms, or hallways. Ensure it is placed on a level surface.

• **Adjustable table top both inside and outside**
Suitable for storage of different sizes of items



Image: A detailed view demonstrating the adjustable shelf feature within the Furniwell cabinet, highlighting the flexibility to customize storage space for various item sizes.

• Pantry Cabinet



• Kitchen



• Dining Room



• Living Room

Image: The Furniwell pantry cabinet displayed in different home environments, including a kitchen, dining room, and living room, illustrating its versatile application.

MAINTENANCE

Proper maintenance will extend the life and appearance of your cabinet.

- **Cleaning:** The cabinet's smooth, white fiberboard surface is easy to clean. Wipe with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically check all screws and fasteners for tightness. Over time, daily use can cause them to loosen. Retighten as necessary to maintain structural integrity.
- **Door Alignment:** If doors become misaligned or difficult to open/close, check the hinge screws and adjust if needed. Ensure door shelves are not overloaded.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet wobbles or feels unstable.	Anti-tip device not installed or loose; uneven floor; loose assembly screws.	Ensure the anti-tip device is securely fastened to the wall. Place the cabinet on a level surface. Check and tighten all assembly screws.
Doors droop or are hard to open/close.	Door shelves are overloaded; loose hinge screws.	Reduce the weight on the door shelves. Check and tighten hinge screws.
Back panel or bottom piece does not stay attached.	Improper fit during assembly; insufficient fasteners.	Re-check assembly steps. If necessary, use wood glue to reinforce the connection points for the back panel or bottom piece.
Missing parts or damaged components.	Shipping damage or packaging error.	Do not proceed with assembly. Contact Furniwell customer support immediately for replacement parts.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual, or require assistance with assembly or parts, please contact Furniwell customer support. Refer to the contact information provided with your purchase or visit the official Furniwell website.

For more information, you may visit the [Furniwell Store on Amazon](#).

