

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOMERY](#) /

› [KOMERY 4K Video Camera Camcorder User Manual](#)

KOMERY 4K Video Camera Camcorder

KOMERY 4K Video Camera Camcorder User Manual

Model: 4K Video Camera Camcorder | Brand: KOMERY

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your KOMERY 4K Video Camera Camcorder. This compact and lightweight camcorder is designed for ease of use, featuring 4K video recording, 30MP photo capabilities, 10X optical zoom, and a 3.0-inch touch screen. It includes Wi-Fi connectivity for easy transfer and remote control, an HDMI output, and a 2.4G remote controller. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your recording experience.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x 4K Super Zoom Camcorder
- 2 x Rechargeable Batteries
- 1 x Type-C Cable
- 1 x HDMI Cable
- 1 x 32GB SD Card
- 1 x User Manual
- 1 x 2.4G Remote Controller
- 1 x DV Bag

3. PRODUCT OVERVIEW

The KOMERY 4K Video Camera Camcorder is equipped with various features to enhance your video recording and photography. Below are key components and their functions.



Image 3.1: Front view of the KOMERY 4K Video Camera Camcorder, illustrating its 4K 30MP resolution, flash light, HDMI output, 10X optical zoom, 2.4G remote control, time-lapse function, Wi-Fi transfer, slow motion, and webcam capabilities.

3.1. Display and Controls



Image 3.2: Side view of the camcorder showing the 3.0-inch touch screen with 270-degree rotation and the 2.4G remote control for convenient operation.

- **3.0-inch Touch Screen:** Provides intuitive control and a clear view of your recordings. The screen can rotate 270 degrees for flexible shooting angles.
- **Control Buttons:** Located on the side and top of the camera for power, mode selection, menu access, zoom, and recording.

3.2. Lens and Imaging



Image 3.3: Display illustrating the Ultra HD 4K video resolution and 30MP image pixel options available on the camcorder.

- **Lens:** Features 10X optical zoom and 4X digital zoom for capturing distant subjects with clarity.
- **Built-in Flash/Fill Light:** Provides additional illumination in low-light conditions.

3.3. Connectivity and Accessories

- **HDMI Output:** Connects the camcorder to a TV or monitor for real-time viewing.
- **Wi-Fi Function:** Enables wireless transfer of photos and videos to a smartphone via the "VD Cam" app, and allows for remote control.
- **USB Port:** For connecting to a computer for data transfer or webcam functionality.
- **2.4G Remote Controller:** Allows for convenient control of the camcorder from a distance, ideal for tripod use.

4. SETUP

4.1. Charging the Battery

1. Open the battery compartment cover.
2. Insert a rechargeable battery, ensuring correct polarity.
3. Close the battery compartment cover.
4. Connect the camcorder to a power source using the provided Type-C cable. The charging indicator will illuminate.
5. Charge until the indicator light changes or turns off, signifying a full charge.

4.2. Inserting the SD Card

1. Locate the SD card slot, usually on the side or bottom of the camcorder.
2. Insert the 32GB SD card with the metal contacts facing the correct direction (refer to the diagram near the slot). Push until it clicks into place.
3. To remove, gently push the card in again until it springs out.

4.3. Powering On/Off

- **To Power On:** Open the LCD screen or press the Power button.
- **To Power Off:** Close the LCD screen or press and hold the Power button.

4.4. Initial Settings

Upon first use or after a battery change, you may need to set the date and time. Navigate to the system settings via the Menu button on the camcorder or the remote control, and adjust accordingly.

5. OPERATING INSTRUCTIONS

5.1. Recording Video

1. Power on the camcorder.
2. Ensure the mode is set to video recording (usually indicated by a camera icon on the screen).
3. Press the **Record** button to start recording. Press again to stop.
4. Use the zoom lever (W/T) to adjust the optical and digital zoom.

Video 5.1: Demonstration of the KOMERY 4K Video Camera Camcorder in use, showcasing its recording capabilities and the functionality of the flip-out screen and zoom feature. This video highlights the camera's performance in various lighting conditions and its ease of handling.

5.2. Taking Photos

1. Switch the mode to photo capture.
2. Frame your shot using the LCD screen.
3. Press the **Photo** button to take a picture.

5.3. Using Special Functions

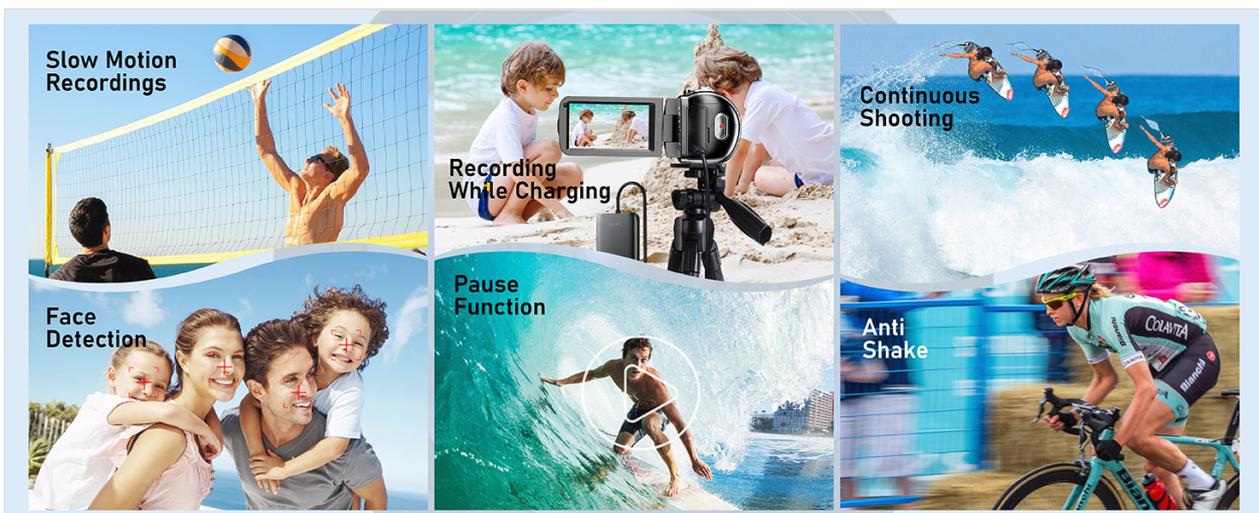


Image 5.1: Visual representation of the camcorder's diverse shooting modes, including Slow Motion Recordings, Recording While Charging, Continuous Shooting, Face Detection, Pause Function, and Anti-Shake.

- **Time-Lapse Recording/Photography:** Access this feature through the menu to capture events over an extended period.
- **Pause Function:** Allows you to temporarily stop and resume recording within a single video file.
- **Motion Detection:** The camera will automatically start recording when motion is detected.
- **Slow Motion Recording:** Capture high-speed action in slow motion for dramatic effect.
- **Continuous Shooting:** Take multiple photos in quick succession.
- **Fill Light:** Activate the built-in flash for improved lighting in dark environments.

5.4. Connectivity Features



Image 5.2: Diagram showing the camcorder's connectivity options: USB connection to a computer for webcam use, HDMI connection to a TV for real-time viewing, and Wi-Fi connection to a smartphone via the "VF CAM" app for remote control and file transfer.

- **Webcam Function:** Connect the camcorder to your computer via USB and select "PC Camera" mode to use it as a webcam for video calls.
- **HDMI Output:** Use the provided HDMI cable to connect the camcorder to a television for viewing your recordings on a larger screen.
- **Wi-Fi Transfer & Remote Control:** Download the "VD Cam" app on your smartphone. Connect to the camcorder's Wi-Fi network to remotely view, capture images, shoot videos, and transfer files.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camcorder in the provided DV bag in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Fully charge batteries before use. Avoid overcharging or completely draining batteries to prolong their lifespan.
- **SD Card Care:** Format the SD card periodically within the camera to maintain optimal performance and prevent data corruption.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is drained or incorrectly inserted.	Ensure battery is fully charged and correctly inserted. Try using the second battery.
Short battery life (e.g., 5-10 minutes).	Battery degradation or specific usage patterns.	Ensure batteries are fully charged. Consider using an external power bank or keeping the camera plugged in for longer recording sessions.
Cannot record or save files.	SD card is full, not inserted, or incompatible.	Check if the SD card has sufficient space. Ensure the card is properly inserted. The camcorder is optimized for 32GB SD cards. Using larger cards may lead to compatibility issues.

Problem	Possible Cause	Solution
Video quality is blurry or out of focus.	Incorrect focus settings, low light, or anti-shake not enabled.	Ensure adequate lighting. Check focus settings in the menu. Activate the anti-shake function if available.
Wi-Fi connection issues.	Incorrect app, Wi-Fi disabled, or interference.	Ensure you are using the "VD Cam" app. Verify Wi-Fi is enabled on the camera and your smartphone. Try reconnecting.

8. SPECIFICATIONS

Feature	Detail
Brand	KOMERY
Item Weight	1.37 pounds
Package Dimensions	6.73 x 5.55 x 3.43 inches
Color	Black
Photo Sensor Technology	CMOS
Video Capture Resolution	4K
Flash Memory Type	SD (up to 32GB recommended)
Video Capture Format	MP4
Supported Audio Format	AAC, MP3, PCM
Screen Size	3 Inches
Connectivity Technology	HDMI, Wi-Fi, USB
Special Features	Built-In Flash, 10X Optical Zoom, 4X Digital Zoom, 2.4G Remote Control, Time-Lapse, Pause Function, Motion Detection, Slow Motion, Continuous Shooting, Webcam Mode

9. WARRANTY AND SUPPORT

KOMERY offers customer support for this product. If you encounter any issues or have questions regarding your camcorder, please refer to your purchase platform for contact options. Typically, you can find support by navigating to "Your orders" > finding the order ID > clicking "Contact seller." We strive to provide 7/24 hour service to assist you.