

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bingozones](#) /

› [Bingozones P37 Max Bluetooth Headphones User Manual](#)

Bingozones P37 Max

Bingozones P37 Max Bluetooth Headphones User Manual

Model: P37 Max

1. PRODUCT OVERVIEW

The Bingozones P37 Max Bluetooth Headphones offer a versatile audio experience with multiple connectivity options and extended battery life. Designed for comfort and clear sound, these over-ear headphones are suitable for various activities.

Key Features:

- **Extended Playtime:** Up to 80 hours of wireless audio on a single charge.
- **Deep Bass Audio:** Enhanced bass for an immersive listening experience.
- **Comfort Design:** Memory foam ear cups, adjustable headband, and 90° swiveling earcups for a comfortable fit.
- **Multi-Mode Connectivity:** Supports Bluetooth 5.3 wireless, 3.5mm AUX wired, and TF Card playback.
- **Integrated Microphone:** For hands-free calls.
- **Universal Compatibility:** Works with Apple and Android devices, laptops, and PCs.
- **Foldable Design:** For easy storage and portability.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Bingozones P37 Max Bluetooth Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

3. SETUP AND CHARGING

3.1 Initial Charging

Before first use, fully charge your headphones. Connect the provided USB-C charging cable to the

charging port on the headphones and the other end to a USB power adapter (not included) or a computer USB port.

A full charge takes approximately 2.5 hours and provides up to 80 hours of playtime.



Figure 1: Charging the P37 Max Headphones

3.2 Power On/Off

- **To Power On:** Press and hold the Power button for 3 seconds until the indicator light flashes.
- **To Power Off:** Press and hold the Power button for 3 seconds until the indicator light turns off.

3.3 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 5 seconds until the indicator light flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "BZ-P37 MAX" from the list of devices.
5. Once connected, the indicator light will turn solid blue or flash blue slowly.

The P37 Max supports **Dual Pairing**, allowing connection to two devices simultaneously. After connecting to the first device, disable Bluetooth on it, then pair with the second device. Re-enable Bluetooth on the first device, and the headphones should connect to both.

Your browser does not support the video tag.

Video 1: Official product video demonstrating features and connectivity of the P37 Max Bluetooth Headphones.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The headphones feature intuitive controls located on the earcups:

- **Power Button:** Press and hold for 3 seconds to power on/off. In Bluetooth mode, short press to Play/Pause music or Answer/End calls. Double press to redial the last number.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode Button (M):** Short press to switch between Bluetooth, TF Card, and AUX modes.



Figure 2: Headphone Control Layout

4.2 Multi-Mode Usage

- **Bluetooth Mode:** Connect wirelessly as described in Section 3.3.
- **Wired Mode (AUX):** Insert the 3.5mm audio cable into the AUX port on the headphones and your audio source. The headphones will automatically switch to wired mode.
- **TF Card Mode:** Insert a TF (Micro SD) card with audio files into the designated slot. The headphones will automatically detect and play music from the card.



Figure 3: AUX and TF Card Inputs

4.3 Adjusting Fit

The P37 Max headphones are designed for comfort during extended wear:

- **Adjustable Headband:** Extend or retract the headband to fit your head size.
- **Swiveling Earcups:** The earcups can swivel 90 degrees to conform to your ear shape and for flat storage.
- **Memory Foam:** The earcups feature memory foam for enhanced comfort and sound isolation.



Figure 4: Comfort Features

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.
- **Water Resistance:** The headphones are water-resistant, but not waterproof. Avoid submerging them in water or exposing them to heavy rain.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Bluetooth off on device; device too far.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move device closer to headphones.
No sound in Bluetooth mode.	Volume too low; device not connected; incorrect audio output selected.	Increase headphone and device volume. Re-pair headphones. Check device's audio output settings.
No sound in wired mode.	3.5mm cable not fully inserted; cable is faulty.	Ensure the 3.5mm cable is securely plugged into both the headphones and the audio source. Try a different 3.5mm cable.
Microphone not working.	Microphone muted on device; incorrect input device selected.	Check device's microphone settings. Ensure P37 Max is selected as the input device.

7. SPECIFICATIONS

- **Model Name:** P37 Max
- **Brand:** Bingozones
- **Connectivity Technology:** Wireless (Bluetooth), Wired (3.5mm AUX), TF Card
- **Wireless Communication Technology:** Bluetooth 5.3
- **Noise Control:** Sound Isolation
- **Battery Life:** Up to 80 Hours
- **Charging Time:** Approximately 2.5 Hours
- **Headphones Jack:** 3.5 mm Jack
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Aluminum
- **Item Weight:** 9.9 ounces
- **Special Features:** Adjustable Headband, Lightweight, Microphone Included, Universal Phone Control, Volume Control
- **Water Resistance Level:** Water Resistant
- **Impedance:** 38 Ohms

8. WARRANTY AND SUPPORT

Bingozones is committed to providing excellent customer service. Your P37 Max Bluetooth Headphones come with the following:

- **30-Day Return Policy:** For any issues or dissatisfaction.
- **12-Month Warranty:** Covering manufacturing defects and malfunctions.
- **Lifetime Worry-Free User Support:** Our support team is available to address any questions or concerns, typically responding within 10 hours.

For support, please refer to the contact information provided with your purchase or visit the official Bingozones website.