

[Manuals.plus](#) /

› [Pemberly Row](#) /

› Pemberly Row Modern Arched Tall Display Cabinet Instruction Manual

Pemberly Row PR-4753-2835737

Pemberly Row Modern Arched Tall Display Cabinet Instruction Manual

Model: PR-4753-2835737

1. INTRODUCTION

Thank you for choosing the Pemberly Row Modern Arched Tall Display Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference. This cabinet is designed to provide elegant storage and display solutions for your home, featuring a distinctive arched design, tempered glass doors, adjustable shelving, and a full-glide drawer.



Figure 1.1: Front view of the Pemberly Row Modern Arched Tall Display Cabinet.



Figure 1.2: The display cabinet integrated into a home environment.

2. SAFETY INFORMATION

To ensure safe use of this product, please adhere to the following guidelines:

- **Weight Limits:** Do not exceed the maximum weight capacity for each shelf (73 lbs) and the drawer (22 lbs). Overloading can cause structural damage or tipping.
- **Anti-Tip Device:** It is highly recommended to secure the cabinet to a wall using an anti-tip device (not specified if included, but standard safety advice). This prevents accidental tipping, especially in households with children or pets.
- **Stable Surface:** Always place the cabinet on a flat, level, and stable surface to prevent wobbling or tipping.
- **Assembly:** Assembly must be performed by adults. Follow all assembly instructions carefully. Do not use power tools for assembly unless specifically instructed, as this may overtighten fasteners and damage the material.
- **Glass Care:** Tempered glass, while strong, can break if subjected to sharp impacts. Handle glass components with care during assembly and use.

- **Ventilation:** Ensure adequate ventilation when assembling in enclosed spaces.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware listed in the assembly instructions (typically included in the product packaging) are present and undamaged.

- Cabinet Panels (e.g., top, bottom, side, back panels)
- Tempered Glass Doors
- Adjustable Shelves
- Drawer Components
- Hardware Pack (screws, dowels, cam locks, hinges, drawer slides, handles, etc.)
- Assembly Instructions Manual

4. SETUP AND ASSEMBLY

Assembly of the Pemberly Row Modern Arched Tall Display Cabinet is required. Please follow the detailed step-by-step instructions provided in the separate assembly manual included with your product.

1. **Preparation:** Clear a spacious, clean, and soft area (e.g., carpeted floor) for assembly to prevent scratching the furniture.
2. **Tools Required:** Typically, a Phillips head screwdriver and possibly a hammer are needed. Do not use power drills unless specified.
3. **Identify Parts:** Lay out all components and hardware, matching them with the parts list in the assembly manual.
4. **Follow Steps:** Assemble the cabinet by following the numerical sequence of steps in the provided manual. Pay close attention to diagrams and fastener types.
5. **Secure Connections:** Ensure all screws, cam locks, and other fasteners are tightened securely, but do not overtighten.
6. **Door and Drawer Alignment:** Adjust hinges and drawer slides as needed to ensure doors close smoothly and drawers operate freely.
7. **Wall Anchoring:** Once assembled and in its final position, install the anti-tip device to secure the cabinet to the wall.



Figure 4.1: Product dimensions for planning placement.

5. OPERATING INSTRUCTIONS

Your display cabinet is designed for ease of use and versatility.

- **Adjustable Shelves:** The cabinet features adjustable shelves in the upper display section. To adjust a shelf, carefully remove any items, lift the shelf, and reposition the shelf pins into the desired holes along the cabinet sides. Ensure all four pins are securely seated before placing items back on the shelf.
- **Soft-Close Hinges:** The tempered glass doors are equipped with soft-close hinges. This feature allows the doors to close gently and quietly, preventing slamming and reducing wear. Simply push the door gently towards the closed position, and the mechanism will engage.
- **Full-Glide Drawer:** The integrated drawer operates on full-glide slides, allowing it to extend completely for easy access to its contents. To open, pull the drawer handle. To close, push the drawer until it is fully seated.



Figure 5.1: Detail of the full-glide drawer, showing its capacity.



Figure 5.2: Cabinet with doors open, illustrating adjustable shelf positions and drawer access.

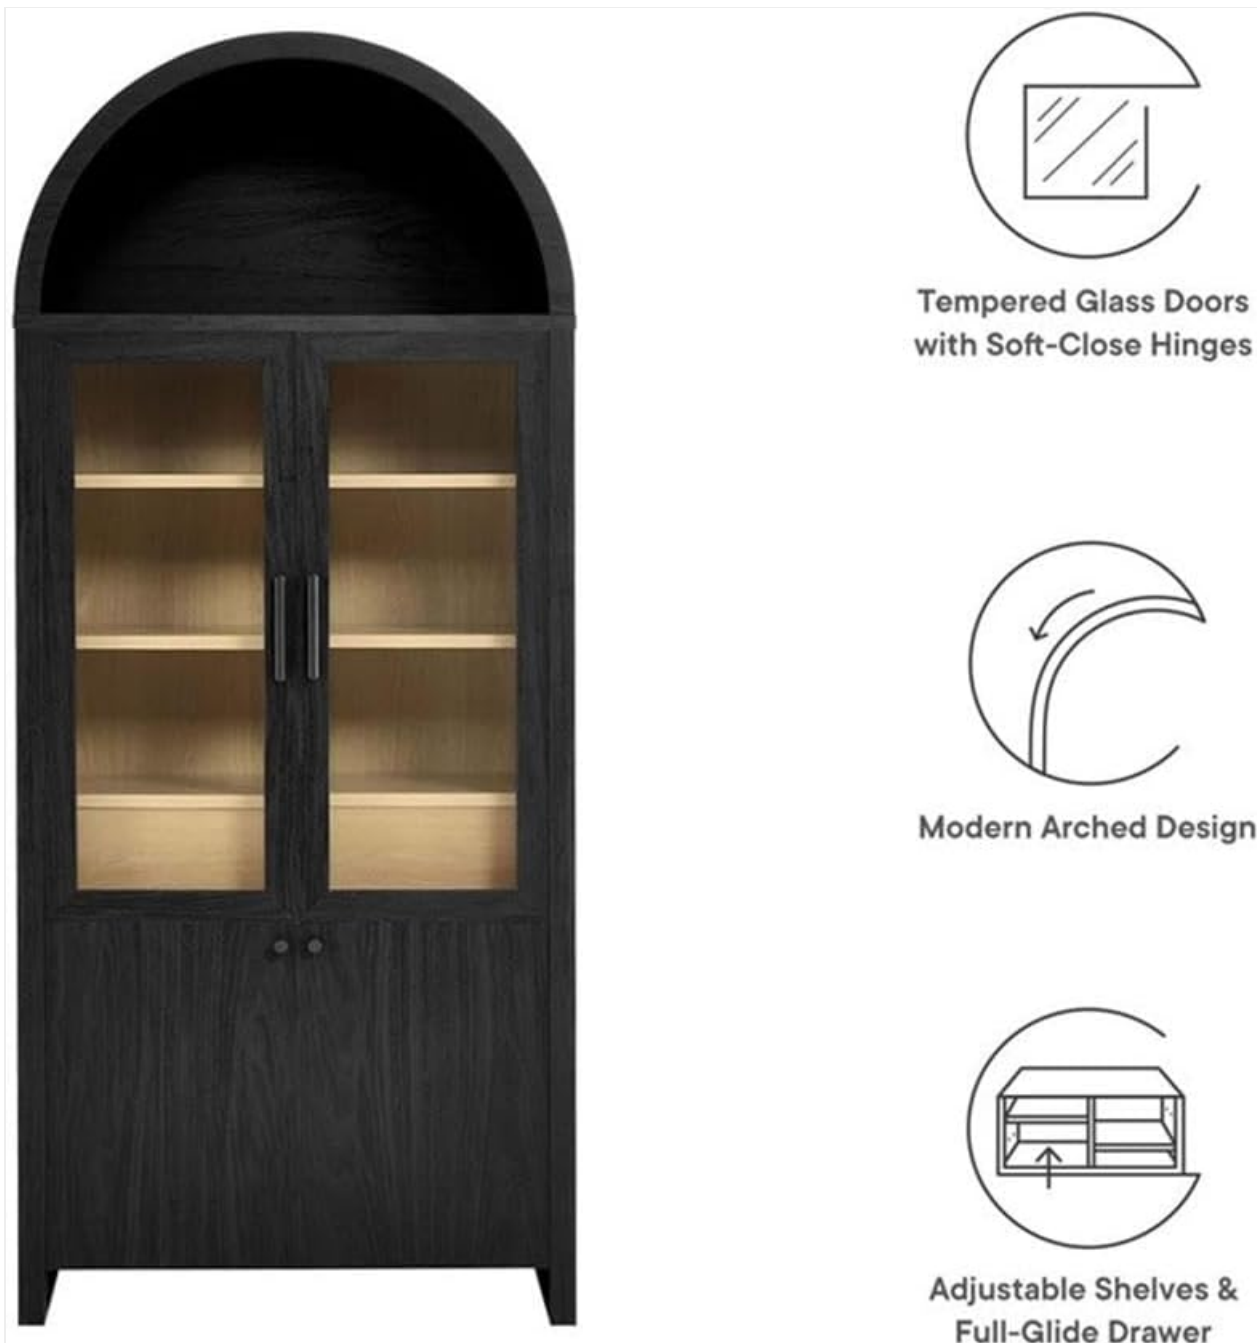


Figure 5.3: Visual summary of key product features.

6. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your display cabinet.

- **Cleaning Wood Surfaces:** Wipe wood surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the finish. Dry immediately with a clean cloth.
- **Cleaning Glass Surfaces:** Use a standard glass cleaner and a lint-free cloth for the tempered glass doors. Spray cleaner onto the cloth, not directly onto the glass, to prevent overspray onto wood surfaces.
- **Dusting:** Regularly dust all surfaces with a soft, dry cloth.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.
- **Heat and Moisture:** Protect the cabinet from extreme temperature changes and high humidity. Use coasters under hot or wet items.
- **Periodic Checks:** Periodically check all fasteners and tighten them if necessary, but do not overtighten.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose fasteners; improper assembly.	Ensure cabinet is on a level surface. Check and tighten all assembly fasteners. Re-check assembly steps. Install wall anchoring device.
Doors do not close properly or are misaligned.	Loose hinges; improper hinge adjustment; cabinet not level.	Check hinge screws and tighten. Adjust hinge screws for proper door alignment (refer to hinge adjustment instructions, usually found in the main assembly manual). Ensure cabinet is level.
Drawer sticks or does not glide smoothly.	Misaligned drawer slides; obstruction; overloaded drawer.	Check that drawer slides are correctly installed and aligned. Remove any obstructions. Do not exceed the drawer's weight capacity (22 lbs).
Shelf is not stable.	Shelf pins not fully inserted; shelf not seated correctly.	Ensure all four shelf pins are fully inserted into the desired holes. Verify the shelf is resting evenly on all pins.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	16.5" x 30.8" x 71.1"
Item Weight	124 pounds
Material	MDF, Particleboard, Tempered Glass
Color	Black Oak
Shelf Weight Capacity	73 lbs per shelf
Drawer Weight Capacity	22 lbs
Special Features	Adjustable Shelves, Soft-Close Hinges, Full-Glide Drawer, Modern Arched Design
Assembly Required	Yes
Model Number	PR-4753-2835737
UPC	198508003514

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation included with your purchase or contact Pemberly Row customer service directly.

You may find contact information on the manufacturer's official website or through the retailer where the product was purchased.

Manufacturer: Pemberly Row

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question