

[Manuals.plus](#) /

> [Braun](#) /

> Braun QuickStyle 7 GS7077BK Vertical Steamer User Manual

Braun GS7077BK

Braun QuickStyle 7 GS7077BK Vertical Steamer User Manual

Model: GS7077BK | Brand: Braun

INTRODUCTION

The Braun QuickStyle 7 GS7077BK is a powerful and efficient vertical steamer designed for quick and effective wrinkle removal and fabric refreshing. Featuring FastSteam technology, a heated plate, and the ActiClean Easy system, it provides superior performance and ease of use. This manual provides comprehensive instructions for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not leave the appliance unattended while it is connected to the power supply.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Use the appliance only for its intended household use as described in this manual.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The heated plate and steam nozzle become very hot during use. Avoid direct contact with skin.
- Only use tap water in the water tank. Do not add perfumes, vinegar, starch, or other chemicals.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Braun QuickStyle 7 GS7077BK vertical steamer.



Figure 1: Front view of the Braun QuickStyle 7 GS7077BK vertical steamer, showcasing its sleek black design with rose gold accents, steam nozzle, and water tank.

Qu'y a-t-il dans la boîte



Style rapide 7



Brosse



Crochet de porte

Figure 2: Contents of the box, including the QuickStyle 7 steamer, a fabric brush attachment, and a door hook for convenient steaming.

Main Components:

- **Steam Nozzle/Heated Plate:** For steam emission and direct fabric contact.
- **Water Tank:** Removable tank for filling with water (250 ml capacity).
- **Power Button:** To turn the appliance on/off.
- **Steam Trigger:** To activate steam.
- **Power Cord:** 3-meter long for extended reach.
- **Fabric Brush Attachment:** For thicker fabrics and improved steam penetration.
- **Door Hook:** For hanging garments during steaming.

SETUP

1. **Unpack the Steamer:** Carefully remove all packaging materials and ensure all components are present as shown in Figure 2.
2. **Fill the Water Tank:**

- Remove the water tank from the main unit.
 - Open the rubber cap and fill the tank with clean tap water up to the 'MAX' line (250 ml capacity).
 - Close the cap securely and reinsert the water tank into the steamer until it clicks into place.
3. **Attach Accessories (Optional):** If steaming thicker fabrics, attach the fabric brush by aligning it with the steam nozzle and pressing firmly until it locks.
 4. **Prepare Garment:** Hang the garment on a hanger, preferably using the included door hook, or lay it flat on a clean, heat-resistant surface.
 5. **Plug In:** Insert the power plug into a suitable electrical outlet. The power indicator light will illuminate.

OPERATING INSTRUCTIONS

The Braun QuickStyle 7 GS7077BK is ready for use in approximately 35 seconds.

Caractéristiques


Puissance de 1 600 W



Chauffage
rapide en 35
secondes



Débit de vapeur
de 35 g/min

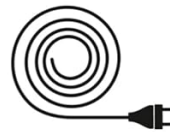

Cordon
d'alimentation
extra-long de 3 m



Figure 3: Demonstrates the steamer in use, highlighting its quick heat-up time and continuous steam output for efficient wrinkle removal.

Technologie FastSteam

La technologie de base exclusive fournit un apport continu de vapeur puissante pour un défroissage rapide et facile.



Figure 4: Illustrates the FastSteam technology, providing a continuous and powerful steam supply for quick and easy de-wrinkling.

- 1. Power On:** Press the power button. The indicator light will blink while heating up and become solid when ready (approx. 35 seconds).
- 2. Steaming Garments:**
 - Hold the steamer upright, ensuring the steam nozzle is facing away from you.
 - Press and hold the steam trigger to release continuous steam. For continuous steam without holding the trigger, there is a lock function available.
 - Move the steam nozzle slowly over the fabric, from top to bottom, allowing the steam to penetrate and relax the fibers.
 - For stubborn wrinkles, gently press the heated plate against the fabric while steaming. The Dual FreeGlide 3D technology allows for smooth gliding in any direction.
 - The iCare technology ensures a safe temperature for all ironable fabrics, preventing burns or damage.
- 3. Disinfection Function:** The steamer can eliminate up to 99.99% of bacteria and viruses from your clothes and home textiles. For best results, ensure the heated plate is in contact with the fabric and move slowly (approx. 0.5 cm/sec).

4. After Use:

- Release the steam trigger and press the power button to turn off the appliance.
- Unplug the power cord from the outlet.
- Allow the steamer to cool down completely before emptying the water tank and storing.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Braun QuickStyle 7 GS7077BK.



Systeme ActiClean Facile

Cette technologie protège votre défroisseur contre le calcaire et peut prolonger la durée de vie de votre défroisseur.

Figure 5: Depicts the ActiClean Easy system, which protects the steamer from limescale and extends its lifespan through quick and simple cleaning.

1. **Empty Water Tank:** After each use, remove the water tank and empty any remaining water. This prevents limescale buildup.
2. **ActiClean Easy System (Descaling):**
 - The ActiClean Easy system protects your steamer from limescale.
 - Refer to the specific instructions in your product's full manual for detailed descaling procedures.

Generally, this involves removing the limescale collector, emptying it, rinsing, and reinserting.

- Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store Properly:** Store the cooled and emptied steamer in a dry place, away from direct sunlight and moisture. Its compact design makes it easy to store.

TROUBLESHOOTING

If you encounter issues with your steamer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Steamer not heated up. Limescale buildup.	Refill water tank. Wait for the indicator light to become solid. Perform descaling using ActiClean Easy system.
Water leaking from nozzle.	Overfilled water tank. Steamer not hot enough. Condensation.	Do not fill past 'MAX' line. Allow steamer to fully heat up before use. This is normal, especially during initial use.
Steamer not turning on.	Not plugged in. Power outlet issue. Appliance malfunction.	Ensure power cord is securely plugged in. Test outlet with another appliance. Contact customer support if problem persists.
Wrinkles not removing effectively.	Not enough steam. Steaming too quickly. Fabric type.	Ensure water tank is full and steamer is fully heated. Move steamer slower over fabric. Some fabrics may require multiple passes or direct contact with the heated plate.

SPECIFICATIONS

Detailed technical specifications for the Braun QuickStyle 7 GS7077BK.

Brand	Braun
Model Number	GS7077BK
Color	Black
Power	1600 Watts
Voltage	240 Volts
Steam Output	Up to 35 g/min continuous steam
Water Tank Capacity	250 ml

Heat-up Time	Approx. 35 seconds
Power Cord Length	3 meters
Product Dimensions (L x W x H)	13.6 x 11.8 x 27 cm
Item Weight	1.14 Kilograms
Key Technologies	FastSteam, Dual FreeGlide 3D, ActiClean Easy, iCare

WARRANTY AND SUPPORT

Braun products are manufactured to the highest standards of quality, safety, and reliability. This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service, please visit the official Braun household website or contact their customer service department. You can find contact information on the Braun website or in the warranty documentation.

Official Website: www.braunhousehold.com