

## Vikeri ZY-CB02

# Vikeri 2025 Upgrade Rotating Electric Cleaning Brush User Manual

Model: ZY-CB02

## 1. INTRODUCTION

Thank you for choosing the Vikeri 2025 Upgrade Rotating Electric Cleaning Brush. This powerful and versatile cleaning tool is designed to make your household cleaning tasks easier and more efficient. With its adjustable handle, interchangeable brush heads, and two-speed settings, it is suitable for a wide range of surfaces and cleaning needs. Please read this manual carefully before first use to ensure proper operation, maintenance, and safety.

## 2. SAFETY INSTRUCTIONS

- Always ensure the charging port is completely dry before connecting the Type-C charging cable.
- The brush head is IPX5 waterproof, meaning it can withstand splashes and light water jets. **Do not immerse the main unit or charging port in water.**
- Keep the device out of reach of children and pets.
- Do not use the brush on delicate surfaces that may be scratched or damaged by abrasive cleaning. Test on an inconspicuous area first.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided charging cable and compatible power adapter.
- Turn off the device before changing brush heads or performing any maintenance.

## 3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Main Electric Cleaning Brush Unit
- 1 x Adjustable Telescopic Handle (extendable from 35cm to 137cm)

- 8 x Interchangeable Brush Heads (various types for different cleaning tasks)
- 1 x Type-C Charging Cable
- 1 x Wall Mount Hook
- 1 x Mesh Storage Bag for accessories



Figure 3.1: Complete package contents of the Vikeri Electric Cleaning Brush.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Vikeri Electric Cleaning Brush:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Adjustable Handle:** Allows for extended reach, preventing bending or kneeling.
- **Brush Head Attachment Point:** Where interchangeable brush heads connect.
- **Power Button:** To turn the device on/off and switch speeds.
- **Type-C Charging Port:** For recharging the internal battery.

## Powerful Motor & Rechargeable Battery



**90min**  
Long Working Time



**3Hours**  
Charging Time



**3000mAh**  
Battery



**75DB**  
Low Noise



Figure 4.1: Internal view of the main unit, showing the motor and battery.

## 5. SETUP

### 5.1 Assembly

1. **Attach Brush Head:** Align the desired brush head with the attachment point on the main unit and twist clockwise until it clicks securely into place.
2. **Attach Handle (Optional):** If using the extended handle, align the main unit with the handle's connection point and twist clockwise to secure. To extend the handle, twist the locking collars counter-clockwise to loosen, pull the sections to the desired length (35cm to 137cm), and then twist the collars clockwise to lock.



Figure 5.1: Assembly instructions for the brush and handle.

## 5.2 Charging the Battery

Before first use, fully charge the device. The battery has a capacity of 3000mAh and provides up to 90 minutes of working time on a full charge.

1. Ensure the charging port is dry.
2. Connect the Type-C charging cable to the charging port on the main unit.
3. Plug the other end of the cable into a compatible USB power adapter (not included).
4. The indicator light will show charging status. A full charge takes approximately 3 hours.



Figure 5.2: Type-C fast charging port.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off and Speed Selection

1. **Power On:** Press the power button once to turn on the device. It will start in low-speed mode (300 RPM).
2. **Change Speed:** Press and hold the power button for 2 seconds to switch to high-speed mode (500 RPM).
3. **Power Off:** Press the power button again to turn off the device.



## 2 SPEED MODE OPTIONS



Figure 6.1: Two speed mode options for efficient cleaning.

### 6.2 Using Interchangeable Brush Heads

The Vikeri Electric Cleaning Brush comes with 8 different brush heads, each designed for specific cleaning tasks:

- **Large Flat Brush:** Ideal for large flat surfaces like tile floors, walls, and sinks.
- **Small Flat Brush:** Suitable for smaller flat areas, stove tops, and kitchen counters.
- **Pointed Brush:** Excellent for cleaning corners, grout lines, faucets, and tight crevices.
- **Fiber Sponge:** For kitchen stoves, range hoods, and gas cooktops.
- **Sponge Brush:** Gentle cleaning for car surfaces and kitchen utensils.
- **Small Cloth Pad:** For general cleaning, suitable for smaller areas.
- **Large Cloth Pad:** For windows and wooden floors.
- **Imitation Wool Cloth Pad:** For furniture, car seats, and leather surfaces.



Figure 6.2: Overview of the 8 interchangeable brush heads and their applications.

### 6.3 Waterproof Rating

The brush head of the device has an IPX5 waterproof rating, meaning it is protected against low-pressure water jets from any direction. This makes it safe for use in wet environments like bathrooms and kitchens. However, remember that the main unit, especially the charging port, is not designed to be submerged in water.

## IPX5 WATERPROOF BRUSH HEAD

Note: Please do not put the charging port in the water



Figure 6.3: IPX5 waterproof brush head.

## 7. MAINTENANCE

### 7.1 Cleaning the Brush Heads

After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. For stubborn grime, you can use a mild soap. Allow the brush heads to air dry completely before storing them.

### 7.2 Cleaning the Main Unit

Wipe the main unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water. Ensure the charging port is clean and dry.

### 7.3 Storage

Store the cleaning brush and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided wall mount hook for convenient storage.





Figure 7.1: Convenient wall-mounted storage.

## 8. TROUBLESHOOTING

| Problem                                    | Possible Cause  | Solution   |
|--|---|--|
| Device does not turn on.                   | Battery is depleted.  | Charge the device fully (approx. 3 hours).   |
| Brush head stops spinning or spins slowly. | Low battery. / Excessive pressure applied. / Obstruction in brush head. | Recharge the battery. / Reduce pressure. / Check for and remove any debris.        |
| Device not charging.                       | Charging cable or adapter faulty. / Charging port is wet or dirty.      | Try a different Type-C cable and adapter. / Ensure charging port is clean and dry. |
| Brush head is loose.                       | Not properly attached.  | Twist the brush head clockwise until it clicks securely.                           |

If you encounter any issues not listed here, please contact Vikeri customer support for assistance.

## 9. SPECIFICATIONS

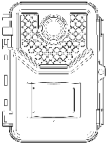 
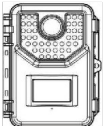 

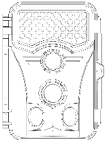 


- **Model:** ZY-CB02
- **Brand:** Vikeri
- **Color:** White
- **Product Dimensions:** 16.9 x 7.2 x 44 cm (main unit)
- **Item Weight:** 1.26 Kilograms
- **Material:** Stainless steel (handle), ABS plastic, various brush materials
- **Battery Capacity:** 3000mAh
- **Working Time:** Up to 90 minutes (on full charge)
- **Charging Time:** Approximately 3 hours
- **Speed Modes:** Low (300 RPM), High (500 RPM)
- **Waterproof Rating:** IPX5 (brush head only)
- **Adjustable Handle Length:** 35 cm to 137 cm



## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Vikeri directly through their official channels. You can also visit the [Vikeri Store on Amazon](#) for more information and contact options.

### Related Documents - ZY-CB02

|   |  |
|---|--|
| <br>MODEL: A1<br>Instruction Manual  | <a href="#">Vikeri A1 Trail Camera Instruction Manual</a><br>This instruction manual provides detailed guidance for the Vikeri A1 Trail Camera, covering setup, functions, installation, troubleshooting, and warranty information.  |
| <br>English   German   Spanish   French   Italian<br>MODEL: A1<br>Instruction Manual | <a href="#">Vikeri A1 Trail Camera Instruction Manual</a><br>This instruction manual provides detailed guidance on setting up and operating the Vikeri A1 Trail Camera. Learn about package contents, product diagrams, quick start procedures, power supply options, camera parameters, button functions, setting configurations, and warranty information. |
|    | <a href="#">VIKERI Trail Camera E2 User Manual: Features, Installation, and Operation</a><br>Comprehensive user manual for the VIKERI Trail Camera E2. Learn about its features, technical specifications, installation guide, operation, troubleshooting, and warranty information.   |
| <br>MODEL: 4K<br>Instruction Manual  | <a href="#">Vikeri 4K Trail Camera Instruction Manual</a><br>This manual provides comprehensive instructions for the Vikeri 4K Trail Camera, covering setup, operation, features, and troubleshooting. Learn how to install, configure, and maintain your trail camera for optimal wildlife monitoring.  |
|    | <a href="#">Smart Home Device WiFi Version User Manual</a><br>User manual for the Smart Home Device WiFi Version, detailing specifications, features, safety precautions, installation, and control with Alexa and Google Assistant.   |
| <br>ZY-C8 PAN TILT WIRED CAMERA  | <a href="#">Mubview ZY-C8 Pan Tilt Wired Camera Quick Start Guide</a><br>Comprehensive guide for setting up and using the Mubview ZY-C8 Pan Tilt Wired Camera, covering installation, app connection, alert settings, and troubleshooting.   |