

## AmpliGame A16

# AmpliGame A16 PC Speakers User Manual

Model: A16

## 1. PRODUCT OVERVIEW

The AmpliGame A16 PC Speakers are designed to provide enhanced audio for gaming, streaming, and general computer use. Featuring Bluetooth 5.0 connectivity, RGB illumination, and multiple audio input options, these speakers offer a versatile audio solution for various environments.

### Key Features:

- **Enhanced Gaming Sound Quality:** Delivers clear and loud audio for an immersive experience.
- **RGB Illumination:** Four distinct RGB modes to complement your setup.
- **Delicate Design:** Features keyboard-style buttons and a portable form factor.
- **Bluetooth 5.0:** Offers wireless connectivity up to 100 feet for various devices.
- **Easy to Use:** Equipped with six function buttons and multiple audio interfaces.

### What's in the Box:

- AmpliGame A16 Gaming Speakers
- 3.5mm to 3.5mm Audio Cable
- USB-C to USB Charging Cable



Image 1.1: The AmpliGame A16 PC Speakers, showcasing its design and RGB lighting.

## 2. SETUP INSTRUCTIONS

---

Follow these steps to set up your AmpliGame A16 PC Speakers.

### 2.1 Charging the Speakers

1. Connect the provided USB-C to USB Charging Cable to the speaker's DC 5V port.
2. Plug the other end of the cable into a USB power source (e.g., computer USB port, USB wall adapter).
3. Allow the speakers to charge fully before first use. The battery life is approximately 6 hours on a full charge.

### 2.2 Connecting to an Audio Source

The AmpliGame A16 speakers support multiple connection methods:

#### Bluetooth Connection:

1. Power on the speakers by pressing the Power On/Off button.
2. The speakers will automatically enter pairing mode (indicated by a flashing light).
3. On your device (smartphone, laptop, tablet), navigate to Bluetooth settings and select "AmpliGame A16" from the list of available devices.
4. Once connected, the light indicator will become solid. The Bluetooth range is up to 100 feet.

#### AUX-in Connection:

1. Connect one end of the provided 3.5mm to 3.5mm Audio Cable to the AUX port on the speakers.
2. Connect the other end of the cable to the 3.5mm audio output jack of your device (PC, PS5, TV, Projector).
3. The speakers will automatically switch to AUX mode.

#### USB Disk / TF Card Playback:

1. Insert a USB disk into the USB port or a TF (Micro SD) card into the TF slot on the speakers.
2. The speakers will automatically detect and play audio files from the inserted storage device.

# **Broad Compatibility**

## *Multi-interface*

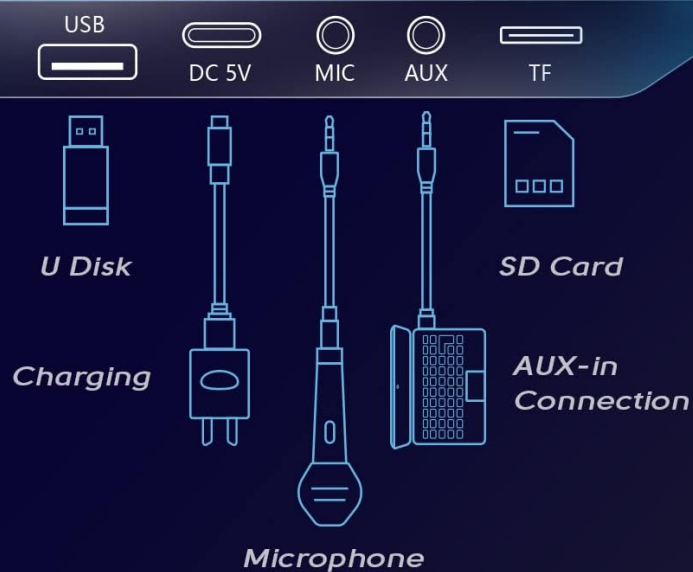


Image 2.1: Rear view of the AmpliGame A16 speakers illustrating various input options including USB, DC 5V, Mic, AUX, and TF card slot.

## **3. OPERATING INSTRUCTIONS**

Familiarize yourself with the speaker's controls and functions.

### **3.1 Function Buttons**

The AmpliGame A16 speakers feature six tactile buttons for easy control:



Image 3.1: Detailed view of the function buttons on the AmpliGame A16 speakers.

- **RGB Button:** Cycles through different RGB lighting modes.
- **Power On/Off Button:** Press to turn the speakers on or off.
- **M/EQ Mode Switch:** Switches between different audio equalization (EQ) modes.
- **Play/Pause Button:** Plays or pauses audio playback.
- **Previous Music / Volume Down Button:** Short press for previous track, long press to decrease volume.
- **Next Music / Volume Up Button:** Short press for next track, long press to increase volume.

### 3.2 RGB Lighting Control

The speakers offer four distinct RGB lighting modes:



Image 3.2: Visual representation of the various RGB lighting modes available on the AmpliGame A16 speakers. Press the **RGB Button** to cycle through the following modes:

- Music Mode
- Dynamic RGB Gradient
- Single Color Changing
- Colorful Lighting

## 4. MAINTENANCE

---

Proper care ensures the longevity and performance of your AmpliGame A16 PC Speakers.

### 4.1 Cleaning

- Use a soft, dry cloth to wipe the speaker's surface.
- Avoid using abrasive cleaners, solvents, or strong chemicals, as these can damage the ABS plastic and mirror materials.
- Do not spray cleaning liquids directly onto the speakers.

## 4.2 Storage

- Store the speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- Keep the speakers away from water or high humidity environments, as they are not waterproof.

## 4.3 Battery Care

- For optimal battery life, avoid fully discharging the speakers frequently.
- If storing for an extended period, charge the battery to approximately 50% every few months.

## 5. TROUBLESHOOTING

If you encounter issues with your AmpliGame A16 PC Speakers, refer to the following common problems and solutions.

| Problem                                                             | Possible Cause                                                                         | Solution                                                                                                                                                                                             |
|---------------------------------------------------------------------|----------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Speakers do not power on.                                           | Low battery or no power.                                                               | Charge the speakers using the provided USB-C cable. Ensure the power button is pressed firmly.                                                                                                       |
| Cannot connect via Bluetooth.                                       | Speakers not in pairing mode, device Bluetooth off, or out of range.                   | Ensure speakers are on and in pairing mode. Turn Bluetooth off and on on your device. Move device closer to speakers (within 100ft). Forget the device in Bluetooth settings and re-pair.            |
| No sound or low volume.                                             | Volume too low on speakers or connected device, incorrect input mode, or faulty cable. | Increase volume using the speaker's volume buttons and on your connected device. Ensure the correct input mode (Bluetooth, AUX, USB, TF) is selected. Check if audio cables are securely connected.  |
| Sound is distorted or unclear.                                      | Volume too high, poor audio source quality, or interference.                           | Reduce volume. Try a different audio source or file. Move speakers away from other electronic devices that may cause interference.                                                                   |
| Stereo channels are reversed (left sound from right speaker, etc.). | Incorrect audio settings on the source device or cable orientation.                    | Check your computer's or device's audio settings for stereo balance or channel inversion options. If using an AUX cable, ensure it is fully inserted and try reversing the cable ends if applicable. |

## 6. SPECIFICATIONS

| Feature                           | Detail         |
|-----------------------------------|----------------|
| Model Name                        | A16            |
| Brand                             | AmpliGame      |
| Speaker Type                      | Single Speaker |
| Connectivity Technology           | Bluetooth      |
| Wireless Communication Technology | Bluetooth 5.0  |

| Feature                      | Detail                                              |
|------------------------------|-----------------------------------------------------|
| Bluetooth Range              | 100 Feet (approx. 30 meters)                        |
| Audio Output Mode            | Stereo                                              |
| Speaker Maximum Output Power | 10 Watts                                            |
| Power Source                 | Battery Powered                                     |
| Battery Type                 | 1 Lithium Polymer battery (included)                |
| Battery Life                 | Approx. 6 hours                                     |
| Material                     | ABS Plastic, Mirror Material                        |
| Color                        | Black                                               |
| Product Dimensions           | 3.15"D x 15"W x 1.8"H (8cm D x 38.1cm W x 4.57cm H) |
| Item Weight                  | 2.18 pounds (0.99 kg)                               |
| Control Method               | Touch (Button)                                      |
| Compatible Devices           | Desktop, Laptop, Smartphone                         |
| UPC                          | 850058839158                                        |

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

The AmpliGame A16 PC Speakers come with a **Limited Warranty**. Please refer to the product packaging or the seller's terms and conditions for specific details regarding warranty coverage and duration.

### 7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the seller or visit the official AmpliGame brand store for further support.

AmpliGame Brand Store: <https://www.amazon.com/stores/AmpliGame/page/C4200A2E-8789-45E9-9AAF-5FECA1A6BBAF>

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**