

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Saker](#) /

> Saker 20-inch 22V Cordless Hedge Trimmer Instruction Manual

## Saker GJ69048-X51738-01-US

# Saker 20-inch 22V Cordless Hedge Trimmer

## INSTRUCTION MANUAL



### Introduction

Thank you for choosing the Saker 20-inch 22V Cordless Hedge Trimmer. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new tool. Please read it thoroughly before use and keep it for future reference.

### Safety Instructions

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear appropriate personal protective equipment (PPE):** Always wear safety glasses, gloves, and sturdy footwear. Hearing protection is recommended.
- **Keep work area clear:** Ensure the area is free from debris, children, and pets.
- **Inspect the trimmer:** Before each use, check for damaged parts, loose fasteners, or any other condition that may affect safe operation.
- **Dual Safety System:** The trimmer is equipped with a double-lock mechanism. It activates only when both the top handle and the switch are simultaneously pressed. Do not attempt to bypass this safety feature.
- **Avoid contact with blades:** Keep hands and feet away from the cutting blades at all times, especially when the tool is running.
- **Secure grip:** Always hold the trimmer firmly with both hands during operation.
- **Store safely:** When not in use, store the trimmer in a dry, secure place out of reach of children.



Figure 1: The dual safety system requires both the power switch and security switch to be pressed simultaneously for operation.

## Setup

### Unpacking Contents

Carefully remove all items from the packaging. Ensure all components are present and undamaged.

- Saker Cordless Hedge Trimmer unit
- 22V Lithium-Ion Battery
- Battery Charger
- Blade Cover
- Instruction Manual

### Battery Installation and Charging

Before first use, fully charge the battery. Ensure the trimmer is turned off before installing or removing the battery.

1. **Charging the Battery:** Connect the charger to a standard power outlet. Slide the battery onto the

charger. The indicator light on the battery will show red during charging and turn green when fully charged. A full charge typically takes 2.5 hours.

2. **Installing the Battery:** Align the battery with the battery slot on the bottom of the trimmer handle. Slide the battery into place until it clicks securely.
3. **Removing the Battery:** Press the battery release button, then slide the battery out of the slot.



Figure 2: Battery charging status indicators. Red indicates charging, green indicates fully charged.

Your browser does not support the video tag.

Video 1: This video demonstrates the Saker Cordless Hedge Trimmer in action, highlighting its ease of use, battery installation, and effective trimming capabilities on various hedges.

## Operating Instructions

### Starting and Stopping the Trimmer

1. **To Start:** Ensure the battery is securely installed. Grip the trimmer firmly with both hands. Simultaneously press the security switch (located on the top handle) and the power switch (located on the main handle). The blades will begin to move.
2. **To Stop:** Release either the security switch or the power switch. The blades will stop immediately.

## Trimming Techniques

For optimal results and safety, follow these trimming guidelines:

- **Hold firmly:** Maintain a firm grip with both hands on the ergonomic wrap-around handle.
- **Even strokes:** Use smooth, sweeping motions to cut hedges and shrubs. The dual-action blades cut efficiently in both forward and backward movements.
- **Cutting capacity:** The trimmer is designed to cut branches up to 9/16 inches (0.56 inches) thick. Do not force the trimmer through thicker branches.
- **Working height:** The lightweight design allows for easy handling for both high and low trimming tasks without excessive fatigue.
- **Blade protection:** Always use the blade cover when the trimmer is not in use or during transport.



Figure 3: The 20-inch dual-action blades provide efficient cutting for branches up to 9/16 inches thick.

# LIGHTWEIGHT & ERGONOMIC



Figure 4: The lightweight and ergonomic design ensures comfortable use for extended periods.

Your browser does not support the video tag.

Video 2: Watch this video to see the Saker Battery Powered Hedge Trimmer's simple operation and how it makes trimming hedges effortless.

## Maintenance

### Blade Care

Regular maintenance of the blades ensures optimal cutting performance and extends the life of your trimmer.

- **Cleaning:** After each use, disconnect the battery and use a stiff brush or cloth to remove sap, leaves, and debris from the blades.
- **Lubrication:** Apply a light machine oil or blade lubricant to the blades after cleaning to prevent rust and ensure smooth operation.
- **Sharpening:** If the blades become dull, they can be sharpened by a qualified service technician. Do not attempt to sharpen them yourself unless you have proper training and tools.

## Storage

Proper storage protects your trimmer and ensures it's ready for the next use.

- Always attach the blade cover before storing or transporting the trimmer.
- Store the trimmer in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- Ensure the battery is fully charged before long-term storage and recharge it every 3-6 months to maintain battery health.

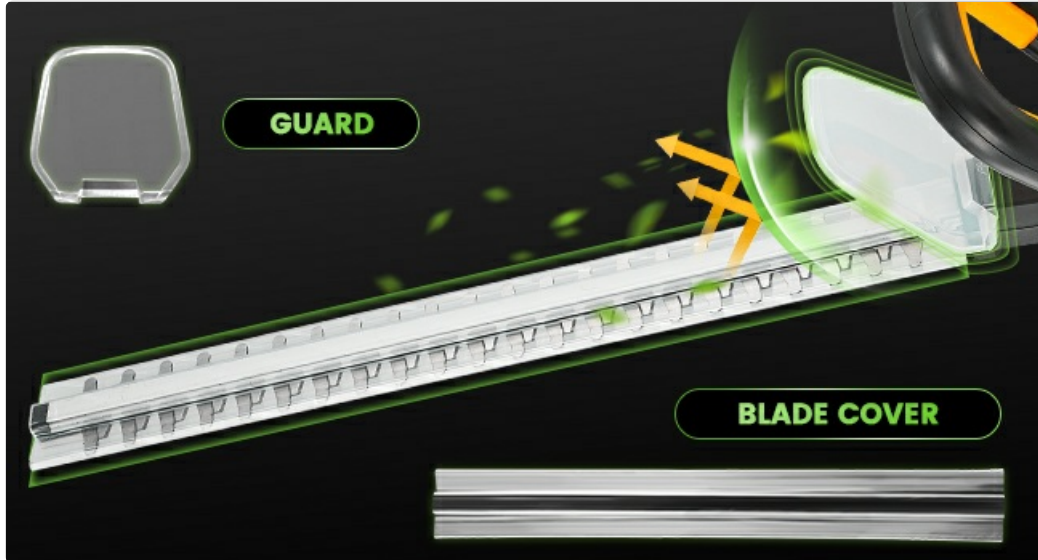


Figure 5: Always use the blade cover for safe storage and transport.

## Troubleshooting

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged Battery not properly installed Safety switches not engaged simultaneously	Charge battery fully Reinstall battery until it clicks Ensure both safety and power switches are pressed at the same time
Reduced cutting performance	Dull blades Blades clogged with debris Attempting to cut branches too thick	Clean and lubricate blades; sharpen if necessary Clean blades thoroughly Only cut branches within the specified 9/16" capacity
Excessive vibration	Damaged blades Loose components	Inspect blades for damage; replace if needed Check all fasteners and tighten if loose
Battery not charging	Charger not plugged in Faulty battery or charger	Ensure charger is securely plugged into a working outlet Contact customer support for assistance

## Specifications

Technical details for the Saker Cordless Hedge Trimmer.

Feature	Detail
Brand	Saker
Model Number	GJ69048-X51738-01-US
Power Source	Battery Powered (22V)
Blade Length	20 Inches
Cutting Capacity	9/16 Inches (0.56 inches)
Blade Material	High Carbon Steel
Item Weight	5.3 Pounds
No-Load Speed	Up to 1200 RPM
Battery Type	2.0Ah Lithium-Ion
Charging Time	Approx. 2.5 hours
Runtime	30-60 minutes (depending on load)

## Warranty Information

---

Saker products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or contact Saker customer support.

## Customer Support

---

If you have any questions, require assistance, or encounter any issues with your Saker Cordless Hedge Trimmer, please do not hesitate to contact our customer service team. We are committed to providing exceptional support and ensuring your satisfaction.

Contact information can typically be found on the product packaging or on the official Saker website.