

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Saker](#) /

› [Saker Cordless Hedge Trimmer Instruction Manual](#)

Saker LZ

Saker Cordless Hedge Trimmer Instruction Manual

Model: LZ | Brand: Saker

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Saker Cordless Hedge Trimmer. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Saker Cordless Hedge Trimmer, showing the main unit, two 22V/2.0Ah lithium-ion batteries, and the battery charger. The product packaging is also visible in the background.

SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury.

- Dual-Lock Mechanism:** The trimmer is equipped with a double-lock mechanism for your protection. It will only activate when both the top handle (security switch) and the main power switch are pressed simultaneously. This design significantly reduces the risk of accidental activation.
- Blade Protection:** The durable shell provides enhanced protection against accidental contact with the sharp blades. Always ensure the blade cover is in place when the trimmer is not in use or during transport.
- Personal Protective Equipment (PPE):** Always wear appropriate safety glasses, gloves, and sturdy footwear when operating the hedge trimmer. Consider hearing protection for extended use.
- Clear Work Area:** Ensure the work area is clear of debris, children, and pets before starting the trimmer.
- Inspect Before Use:** Before each use, inspect the trimmer for any damage, loose parts, or worn blades. Do not

operate if damaged.



Image: A close-up view of the Saker Cordless Hedge Trimmer's handle, highlighting the "Power Switch" (A) and "Security Switch" (B). Text indicates that both must be pressed simultaneously to initiate operation, demonstrating the dual safety system.



Image: A diagram illustrating the transparent guard and the blade cover for the hedge trimmer, emphasizing their role in protecting the user and the blade.

COMPONENTS AND FEATURES

Familiarize yourself with the main components of your Saker Cordless Hedge Trimmer:

- **Dual-Action Blades:** 20-inch blades designed for efficient cutting in both forward and backward motions, minimizing vibrations. Made from SK5 steel for durability and sharpness.
- **Ergonomic Wrap-Around Handle:** Provides enhanced maneuverability and comfort during use, reducing fatigue.
- **22V/2.0Ah Lithium-Ion Battery:** Rechargeable battery providing up to 60 minutes of continuous operation. Features a status display.
- **Brushless Motor:** Delivers efficient cutting performance with a no-load speed of up to 1200 RPM.
- **Blade Guard:** Transparent guard for protection during operation.
- **Battery Charger:** For rapid charging of the lithium-ion batteries.

OUTSTANDING CUTTING PERFORMANCE

20" MAX
CUTTING LENGTH

**SK5
STEEL
CUTTING EDGES**



20-inch Double Action Blades



Long-Term Durability



Sharpness Maintenance



Corrosion Protection



Image: A detailed view of the 20-inch dual-action blades made from SK5 steel, highlighting the 9/16-inch cutting width. Icons indicate long-term durability, sharpness maintenance, and corrosion protection.

POWERFUL MOTOR



NO-LOAD STROKE RATE FOR MORE EFFICIENT CUTTING & SERVICE LIFE

Image: A close-up illustration of the powerful brushless motor inside the Saker Hedge Trimmer, emphasizing its efficiency and no-load stroke rate for effective cutting.

SETUP

- Charge the Battery:** Before first use, fully charge the lithium-ion battery. Connect the charger to a power outlet and insert the battery. The red light indicates charging in progress, and the green light indicates a full charge. A full charge takes approximately 2.5 hours.
- Install the Battery:** Align the charged battery with the battery slot on the trimmer handle and slide it in until it clicks securely into place. Ensure it is firmly seated to prevent dislodgement during operation.
- Inspect Blades:** Verify that the blades are clean and free from any obstructions. Remove the blade cover before use.

22V 2.0AH LITHIUM-ION BATTERY



RECHARGEABLE
QUICK 2.5-HOUR FULL CHARGE



EXTENDED 30-60 MINUTE RUNTIME
BATTERY STATUS DISPLAY

2000MAH



RED LIGHT
Battery charging
in progress



GREEN LIGHT
Battery charging finished,
battery fully charged

Image: An illustration of the 22V/2.0Ah lithium-ion battery, showing its charging status display. A red light indicates charging, while a green light signifies a full charge. The image also notes a 2.5-hour quick charge time and 30-60 minute runtime.

OPERATING INSTRUCTIONS

- Starting the Trimmer:** To start the trimmer, simultaneously press and hold both the security switch on the top handle and the power switch on the main grip. Release both switches to stop the trimmer.
- Trimming Technique:**
 - Hold the trimmer firmly with both hands.
 - Maintain a balanced stance.
 - Move the trimmer smoothly and evenly along the hedge or bush. The dual-action blades cut effectively in both directions.
 - The trimmer is capable of cutting branches up to 9/16 inches (0.56 inches) thick. Do not force the trimmer through thicker branches.

3. **Battery Status:** Monitor the battery status display on the battery to ensure sufficient power for your task. Recharge as needed.

LIGHTWEIGHT & ERGONOMIC



Image: A person demonstrating the use of the Saker Cordless Hedge Trimmer, highlighting its lightweight design and the full wrap-around handle for enhanced maneuverability and comfort during cutting.

9/16" CUTTING CAPACITY

Capable of Handling Branches Up to 0.56 Inches Thick,
Delivering Effortless Precision



Image: A diagram illustrating the 9/16-inch cutting capacity of the Saker Hedge Trimmer, showing it can handle branches up to 0.56 inches thick with effortless precision.

Your browser does not support the video tag.

Video: An official product video demonstrating the Saker Cordless Hedge Trimmer in use, showcasing its cutting performance and ease of handling for various trimming tasks.

MAINTENANCE

- Cleaning:** After each use, disconnect the battery and carefully clean the blades and housing. Remove any sap, leaves, or debris using a stiff brush or cloth.
- Blade Care:** Periodically apply a light machine oil to the blades to prevent rust and ensure smooth operation. If blades become dull, they may need sharpening or replacement by a qualified service technician.
- Storage:** Store the trimmer in a dry, secure location, out of reach of children. Always attach the blade cover before storage.
- Battery Storage:** Store batteries in a cool, dry place. For long-term storage, it is recommended to store batteries with a partial charge (around 50%).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or not properly inserted. Safety switches not engaged simultaneously.	Ensure battery is fully charged and securely inserted. Press both the security switch and power switch at the same time.
Reduced cutting performance	Blades are dull or dirty. Cutting branches too thick.	Clean blades and apply oil. Consider sharpening or replacing blades. Do not attempt to cut branches exceeding 9/16 inches.
Trimmer stops during operation	Battery is depleted. Overload protection activated.	Recharge the battery. Reduce the load on the trimmer. Allow the motor to cool if it feels hot.

SPECIFICATIONS

Brand: Saker

Model Number: LZ

Power Source: Battery Powered

Battery Type: 22V/2.0Ah Lithium-Ion

Blade Length: 20 Inches

Blade Material: Steel (SK5)

Cutting Capacity: 9/16 Inches (0.56 inches)

No-Load Speed: Up to 1200 RPM

Item Weight: 5.3 Pounds (approximately 2.4 kg)

Product Dimensions: 37.8 x 7.48 x 3.54 inches

WARRANTY AND SUPPORT

Saker is committed to providing exceptional support and ensuring customer satisfaction. If you have any questions, encounter any challenges with your Saker Cordless Hedge Trimmer, or require warranty service, please do not hesitate to contact Saker customer service.

For assistance, please visit the official Saker store on Amazon or refer to the contact information provided with your product packaging.

Visit the Saker Store on Amazon

© 2025 Saker. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - LZ

 <p>L(z) 03 to 80 50/60 Hz</p> <p>The Lz Range is Dust Protected to EN60079-31. The L Range is for non-hazardous environments only.</p>  <p>Installation and Maintenance L(z) Series Vibrators ENGLISH <small>Other European languages on request</small></p> <p>INVICTA VIBRATORS A Division of Shandt Engineering Limited Invicta Engineering Limited Unit 10, Shandt Engineering Limited Lynwood Business Park, Lynwood Road Luton, Bedfordshire, LU2 8EY, UK Tel: +44 (0) 1582 898 000 Fax: +44 (0) 1582 898 001 Email: info@invictavibrators.co.uk</p> <p>Download PDF Catalog Request a quote</p> 	<p><u>Invicta L(z) Series Vibrators: Installation and Maintenance Manual</u></p> <p>Official installation and maintenance manual for Invicta L(z) Series dust-protected rotary electric vibrators. Covers operational conditions, safety, technical specifications, and ATEX compliance for industrial use.</p>
 <p>JUKI Computer-controlled, Direct-drive, High-speed, 1-needle, Lockstitch, Zigzag Stitching Machine</p> <p>LZ-2290A Series IP-100 / SC-915 ENGINEER'S MANUAL</p> 	<p><u>JUKI LZ-2290A Series Engineer's Manual: Adjustment and Maintenance</u></p> <p>Comprehensive engineer's manual for the JUKI LZ-2290A Series computer-controlled, direct-drive, high-speed zigzag stitching machine, covering standard adjustments, maintenance procedures, and operational details for technical personnel.</p>

 <p>Elite Screens Saker and Saker Tab-Tension (SK/SKT) Series Limit Switch Adjustment Guide</p> <p>Step-by-step instructions for adjusting the limit switches on Elite Screens Saker and Saker Tab-Tension (SK/SKT) projector screens, covering how to adjust the drop distance and retraction.</p>	
 <p>Lesenz LZ Alert UV Disinfection Lamp Wireless Charger User Manual</p> <p>User manual for the Lesenz LZ Alert, a 10W UV disinfection lamp and wireless charger. Details functions, specifications, alarm clock settings, and safety precautions.</p>	
 <p>LG Air Conditioner Owner's Manual and Operation Guide</p> <p>Comprehensive owner's manual for LG Air Conditioners (Ventilators), covering safety instructions, operation, maintenance, and troubleshooting. Includes details on features, remote control usage, ventilation modes, and cleaning procedures.</p>	
 <p>Saker Foam Cannon Dual Connector Accessory Instruction Manual</p> <p>Instruction manual for the Saker Foam Cannon Dual Connector Accessory, detailing its features, installation, operation, and safety precautions for use with pressure washers. Supports up to 4000 PSI.</p>	