

06-5FHW53-D006X

Generic Replacement Remote Control for MILEXUS 06-5FHW53-D006X TV: Instruction Manual

Model: 06-5FHW53-D006X (Compatible TV Model)

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Generic Replacement Remote Control, compatible with MILEXUS 06-5FHW53-D006X Smart 4K LCD LED HDTV TV. Please read this manual thoroughly before use to ensure optimal performance and longevity of your remote control.

SETUP

1. Inserting Batteries

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

2. Initial Use

This remote control is pre-programmed for the MILEXUS 06-5FHW53-D006X Smart 4K LCD LED HDTV TV. No additional programming is required. Once batteries are correctly installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:



Image: Front view of the remote control, displaying the layout of all functional buttons.

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button (⏸):** Mutes or unmutes the TV sound.
- **Source Button (SOURCE):** Cycles through input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Smart App Button (Smart App):** Accesses the TV's smart application menu.
- **WWW Button:** Likely for web browser access.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV menu or application.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these

can damage the surface or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	<ul style="list-style-type: none">• Dead or incorrectly inserted batteries.• Obstruction between remote and TV.• Remote control sensor on TV is blocked.	<ul style="list-style-type: none">• Replace batteries with new ones, ensuring correct polarity.• Remove any objects blocking the line of sight to the TV.• Ensure the TV's remote sensor is clear.
Buttons are unresponsive.	<ul style="list-style-type: none">• Low battery power.• Infrared emitter on remote is dirty or damaged.	<ul style="list-style-type: none">• Replace batteries.• Clean the front of the remote control.

SPECIFICATIONS

Product Model Number: 6a385831-2a75-4976-b567-e264b0b4e867

Compatible TV Model: MILEXUS 06-5FHW53-D006X Smart 4K LCD LED HDTV TV

Power Source: 2 x AAA Batteries (not included)

Special Feature: No Programming Required

Max Number of Supported Devices: 1

Color: As shown (Black)

Manufacturer: Generic

WARRANTY AND SUPPORT

This product is a generic replacement remote control. For specific warranty information, please refer to the seller's policy at the time of purchase. Typically, replacement remote controls come with a limited return period. For technical support or further inquiries, please contact the seller directly through the platform where the purchase was made.

Note: This remote control is manufactured by Generic and is designed to be compatible with the specified MILEXUS TV model. It is not an official MILEXUS product.