

[Manuals.plus](#) /

› [SENXINGYAN](#) /

› SENXINGYAN Portable Bluetooth Speaker (Model SXY-US-M3) User Manual

SENXINGYAN SXY-US-M3

SENXINGYAN Portable Bluetooth Speaker

MODEL: SXY-US-M3 USER MANUAL

1. Introduction

Thank you for purchasing the SENXINGYAN Portable Bluetooth Speaker (Model SXY-US-M3). This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Image: The red SENXINGYAN Portable Bluetooth Speaker, showcasing its compact and cylindrical design.

2. Key Features

- **Powerful Sound Quality:** 20W output with bass diaphragms, supporting immersive 360° stereo sound when two speakers are paired.
- **Dynamic LED Lighting:** Multi-LED light dynamic modes with 10 different color-changing themes to enhance your listening experience.
- **IPX6 Waterproof:** Designed to withstand water splashes and jets, making it suitable for outdoor and wet environments.
- **Extended Playtime:** Up to 16 hours of continuous music playback on a single charge.
- **Versatile Connectivity:** Bluetooth 5.3 for seamless wireless connection, along with support for FM radio, TF card, and USB playback.
- **Portable Design:** Lightweight and compact with a durable cylindrical shape, ideal for home, cycling, outdoor activities, and beach use.

- **Smart Functions:** Features a memory function for automatic reconnection to the last paired device and automatic power-off after 15 minutes of disconnection.

3. Package Contents

Please check the box for the following items:

- SENXINGYAN Portable Bluetooth Speaker (SXY-US-M3)
- USB-C Charging Cable
- AUX Audio Cable
- User Manual

4. Controls and Ports

Familiarize yourself with the speaker's buttons and ports for easy operation:



Image: Top view of multiple speakers highlighting the LED light rings and control panel.

1. **Power Button:** Long press to power on/off. Short press to switch between modes (Bluetooth, FM, AUX, TF, USB).
2. **Play/Pause Button:** Short press to play or pause music. In FM mode, long press to auto-search for stations, short press to stop searching.
3. **Volume Up / Next Track Button (+):** Short press for next track. Long press to increase volume.
4. **Volume Down / Previous Track Button (-):** Short press for previous track. Long press to decrease volume.
5. **Mode Button (M):** Short press to cycle through input modes (Bluetooth, FM, AUX, TF, USB).
6. **LED Light Button:** Short press to cycle through LED light modes. Long press to turn LED lights on/off.
7. **USB-C Charging Port:** For charging the speaker.
8. **AUX Input Port:** For connecting external audio devices via 3.5mm audio cable.
9. **TF Card Slot:** For playing music directly from a TF (Micro SD) card.
10. **USB Port:** For playing music directly from a USB drive.

5. Setup

5.1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status and turn off when fully charged.

5.2. Powering On/Off

- **To Power On:** Long press the Power Button until you hear an audible prompt and the LED lights illuminate.
- **To Power Off:** Long press the Power Button again until the speaker powers down.

5.3. Bluetooth Pairing

The speaker will automatically enter Bluetooth pairing mode upon powering on if no other device is connected. The LED light will flash, indicating it's ready to pair.

1. Ensure the speaker is powered on and in Bluetooth mode (LED light flashing).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "SXY-US-M3" from the list of devices.
4. Once connected, you will hear a confirmation tone, and the LED light will stop flashing.

The speaker has a memory function and will automatically connect to the last paired device when powered on, if that device is within range and has Bluetooth enabled.

6. Operating Instructions

6.1. Playing Music

- **Bluetooth:** After successful pairing, start playing music on your connected device.
- **TF Card/USB:** Insert a TF card or USB drive with music files into the respective port. The speaker will automatically switch to TF/USB mode and begin playback.
- **AUX Input:** Connect an external audio device using the 3.5mm AUX cable. Press the Mode (M) button to switch to AUX mode.

6.2. Adjusting Volume

- **Increase Volume:** Long press the Volume Up (+) button.
- **Decrease Volume:** Long press the Volume Down (-) button.

6.3. Skipping Tracks

- **Next Track:** Short press the Volume Up (+) button.
- **Previous Track:** Short press the Volume Down (-) button.

6.4. Play/Pause

- Short press the Play/Pause button to pause or resume music playback.

7. FM Radio Mode

The speaker supports FM radio functionality.



Image: The speaker in FM Radio Mode with its antenna extended for better reception.

1. Press the Mode (M) button to switch to FM radio mode.
2. Long press the Play/Pause button to automatically search for available FM stations. The speaker will scan and save stations.
3. Short press the Play/Pause button again to stop the auto-search.
4. Use the Volume Up (+) and Volume Down (-) buttons (short press) to navigate between saved stations.

Note: FM mode is an additional feature and may not offer the same reception quality as dedicated professional radios.

8. True Wireless Stereo (TWS) Pairing

For an enhanced audio experience, you can pair two SXY-US-M3 speakers together for 360° stereo sound.



Image: Two speakers paired wirelessly to a laptop for True Wireless Stereo sound.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.

2. On one speaker (this will be the primary speaker), long press the Play/Pause button until you hear a pairing tone.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation tone.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 5.3.
5. Music will now play through both speakers in stereo.

9. LED Light Modes

The speaker features dynamic LED lighting to complement your music.



Image: The speaker's LED ambient light ring showcasing different color modes.

- **Change Mode:** Short press the LED Light Button to cycle through the 10 different color-changing themes (4 breathing modes + 6 solid color modes).
- **Turn On/Off:** Long press the LED Light Button to turn the LED lights on or off.

10. Maintenance

To ensure the longevity and optimal performance of your speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The speaker is IPX6 waterproof, meaning it can resist high-pressure, heavy sprays of water. However, it is not designed for submersion. Ensure the charging port cover is securely closed when exposed to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.



Bluetooth 5.3
Widely Compatible



16 Hours
Working Time



Advanced technology ensures stable
and fast connections

Image: The speaker enduring water splashes, highlighting its waterproof design.

11. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is in Bluetooth pairing mode (flashing LED). Turn on Bluetooth on your device. Move speaker closer to your device (within 10 meters).

Problem	Possible Cause	Solution
No sound.	Volume too low; incorrect mode selected; device not playing.	Increase speaker and device volume. Press Mode (M) button to select correct input. Ensure music is playing on your device.
FM radio reception is poor.	Weak signal; no external antenna.	Move to an area with better signal. Ensure the charging cable (which acts as an antenna) is plugged in for better reception.
TWS pairing fails.	Speakers already paired to other devices; too far apart.	Ensure both speakers are disconnected from other devices. Place speakers close to each other during TWS pairing.

12. Specifications

Feature	Detail
Brand	SENXINGYAN
Model Number	SXY-US-M3
Connectivity Technology	Bluetooth 5.3
Speaker Maximum Output Power	20 Watts
Audio Output Mode	Stereo, Mono, Surround
Battery Average Life	16 Hours
Water Resistance	IPX6 Waterproof
Control Method	Button
Compatible Devices	Smartphone, Tablet, Laptop
Item Dimensions (D x W x H)	3"D x 5"W x 4"H

13. Warranty and Support

SENXINGYAN is committed to providing excellent customer service and product quality.

- **Return and Exchange:** 30-day return and exchange policy.
- **Warranty:** 18-month warranty from the date of purchase.
- **Customer Service:** 24-hour customer service available.
- **Technical Support:** Lifetime technical support.

For any inquiries or support needs, please contact SENXINGYAN customer service through your purchase platform or the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question