

- Manuals.plus /
- › KAFF /
 - › KAFF ALBURY DC 75 BLDC Motor Filter-less Smart Auto Clean Slant Kitchen Chimney 75 CM User Manual

KAFF ALBURY DC 75

KAFF ALBURY DC 75 Kitchen Chimney User Manual

Model: ALBURY DC 75 | Brand: KAFF

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your KAFF ALBURY DC 75 BLDC Motor Filter-less Smart Auto Clean Slant Kitchen Chimney. Please read these instructions thoroughly before installation and use, and retain them for future reference.

The KAFF ALBURY DC 75 is a modern kitchen chimney designed for effective smoke and odor extraction. It features a powerful BLDC motor, filter-less technology for reduced maintenance, smart auto-clean functionality, and intuitive touch and gesture controls.



Figure 1: Front view of the KAFF ALBURY DC 75 chimney, showcasing its sleek black finish and control panel.

2. SAFETY INFORMATION

To prevent personal injury or property damage, always observe the following safety precautions:

- Ensure the chimney is installed by a qualified technician in accordance with local regulations and this manual.
- Verify that the power supply voltage matches the rating indicated on the chimney's label.
- Do not operate the chimney if the power cord is damaged. Contact customer service for repair.
- Maintain adequate ventilation in the room when the chimney is in use, especially if other fuel-burning appliances are present.
- Do not flambé under the chimney.
- Clean the chimney regularly to prevent grease buildup, which can be a fire hazard.
- Keep children away from the appliance during operation and cleaning.

- Do not attempt to repair or modify the chimney yourself. Refer all servicing to authorized personnel.

3. PACKAGE CONTENTS

Before installation, ensure all components are present and undamaged:

- KAFF ALBURY DC 75 Kitchen Chimney Unit
- Ducting Pipe (if included)
- Mounting Bracket and Hardware
- User Manual (this document)
- Warranty Card

If any items are missing or damaged, contact your retailer or KAFF customer support immediately.

4. INSTALLATION GUIDE

Proper installation is crucial for the chimney's performance and safety. It is recommended that installation be performed by a certified technician.

4.1 Mounting the Chimney

1. **Determine Mounting Height:** The recommended distance between the cooking surface and the bottom of the chimney should be between 65 cm and 75 cm for optimal performance.
2. **Mark Drilling Points:** Use the provided template or measure carefully to mark the positions for the mounting bracket on the wall.
3. **Drill Holes:** Drill holes of appropriate size for the wall plugs and screws.
4. **Secure Mounting Bracket:** Attach the mounting bracket firmly to the wall using the provided screws.
5. **Hang the Chimney:** Carefully lift the chimney and hook it onto the mounting bracket. Ensure it is securely seated.

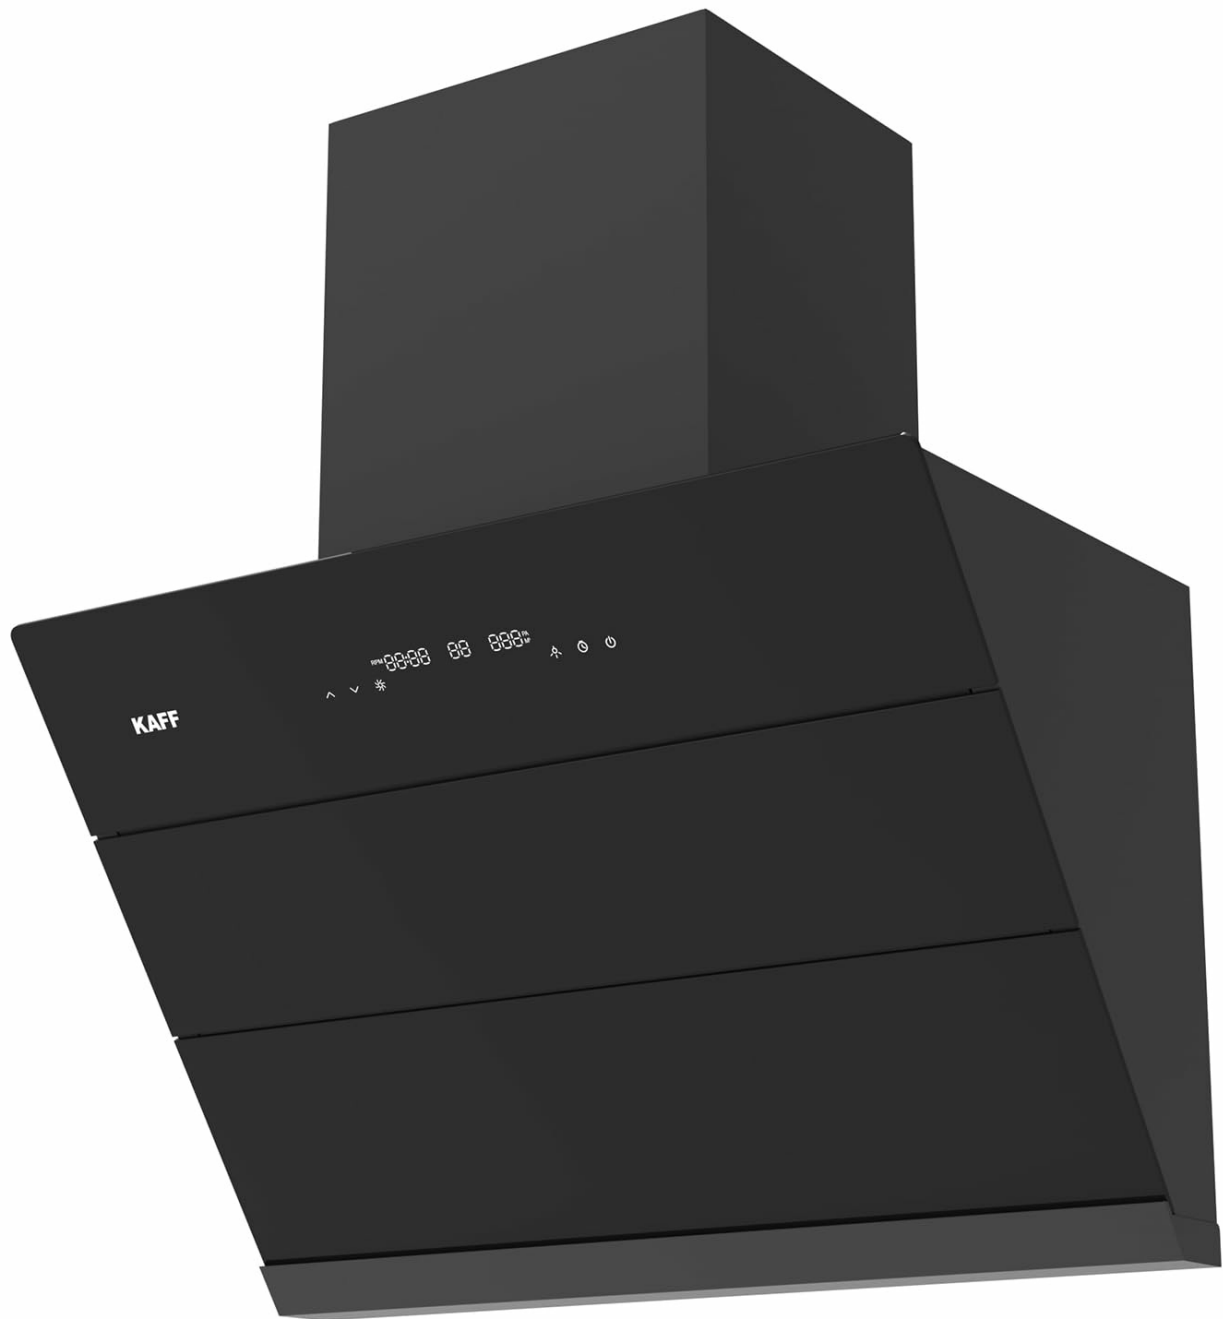


Figure 2: Side view of the chimney, illustrating its slant design and potential mounting position.

4.2 Ducting Connection

Connect the ducting pipe to the chimney's exhaust outlet and route it to the external vent. Ensure the ducting is as straight and short as possible to maximize suction efficiency. Use appropriate clamps to secure all connections.

4.3 Electrical Connection

Connect the chimney to a grounded electrical outlet. Ensure the power supply is switched off before making any connections. If in doubt, consult a qualified electrician.

5. OPERATING INSTRUCTIONS

The KAFF ALBURY DC 75 features a touch control panel and gesture control for convenient operation.

5.1 Control Panel Overview

The intuitive display panel includes various touch-sensitive buttons for different functions:

- **Power Button:** Turns the chimney on/off.
- **Speed Adjustment Buttons:** Increase or decrease suction speed (9 speeds available).
- **Light Button:** Controls the LED lighting.
- **Auto Clean Button:** Activates the smart auto-clean function.
- **Gesture Control Sensor:** For hands-free operation.

5.2 Basic Operation

1. **Power On:** Press the **Power** button once. The chimney will start at a low speed.
2. **Adjust Suction Speed:** Use the **Speed Up** or **Speed Down** buttons to select one of the 9 available speeds. Higher speeds are recommended for heavy cooking.
3. **Control Lights:** Press the **Light** button to turn the LED lights on or off.
4. **Power Off:** Press the **Power** button again to turn off the chimney.

5.3 Smart Auto Clean Function

The Smart Auto Clean feature helps maintain the chimney's internal components by heating and melting accumulated oil, which then drains into the oil collector.

- **Activation:** Press the **Auto Clean** button on the control panel. The chimney will initiate a cleaning cycle.
- **Duration:** The auto-clean cycle typically runs for a preset duration. Refer to the display for progress.
- **Post-Clean:** After the cycle, ensure to empty and clean the oil collector.

5.4 Gesture Control

The chimney can be operated hands-free using gesture control:

- **Power On/Off:** Wave your hand from left to right in front of the gesture sensor to turn the chimney on or off.
- **Increase Speed:** Wave your hand from right to left to increase the suction speed.
- **Decrease Speed:** Wave your hand from left to right (after turning on) to decrease the suction speed.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your chimney.

6.1 Filter-less Design

The ALBURY DC 75 features a filter-less design, eliminating the need for traditional mesh filters. This reduces routine filter cleaning, as oil is collected directly in the oil collector.

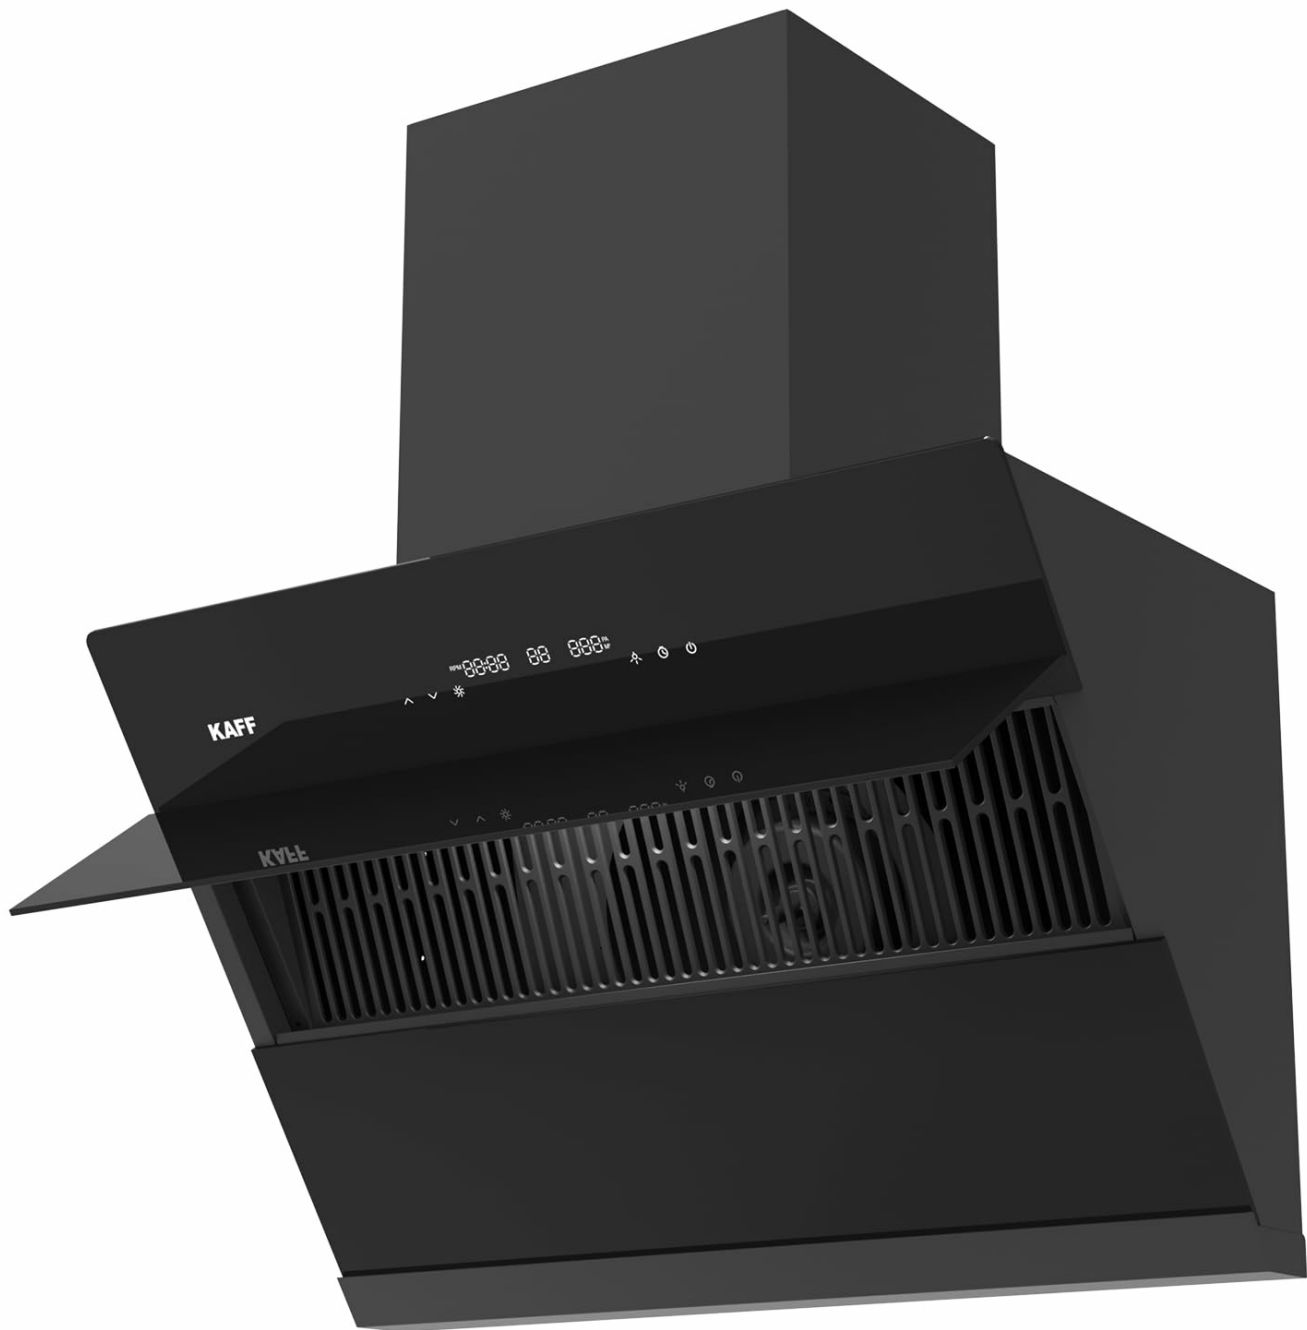


Figure 3: Internal view of the chimney, highlighting the filter-less design and the removable oil collector.

6.2 Cleaning the Oil Collector

The oil collector should be emptied and cleaned regularly, especially after using the Smart Auto Clean function.

1. **Power Off:** Ensure the chimney is switched off and disconnected from the power supply.
2. **Remove Collector:** Carefully slide out the oil collector located at the bottom of the chimney.
3. **Empty and Wash:** Dispose of the collected oil. Wash the collector with warm, soapy water. Rinse thoroughly and dry completely.
4. **Reinstall:** Slide the clean and dry oil collector back into its position.

6.3 Cleaning the Exterior

Clean the exterior surfaces with a soft cloth dampened with mild detergent. Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the finish.

6.4 LED Lights

The chimney uses energy-saving Frosted LED lights. If a light needs replacement, contact authorized service personnel.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
Chimney does not turn on	No power supply Power cord not connected	Check power outlet and circuit breaker Ensure power cord is securely plugged in
Low suction power	Ducting obstruction Incorrect mounting height Open windows/doors creating cross-draft	Check ducting for blockages Verify chimney is within recommended height range Close windows/doors to improve suction
Unusual noise during operation	Loose components Ducting vibration Motor issue	Check for loose screws or parts Ensure ducting is securely fastened Contact customer service if noise persists
Auto Clean not effective	Oil collector full Infrequent cleaning	Empty and clean the oil collector Run auto-clean cycle more frequently based on usage
Gesture control not responding	Sensor obstructed Incorrect gesture	Ensure sensor area is clean and clear Practice gestures as described in section 5.4

8. PRODUCT SPECIFICATIONS

Feature	Specification
Model	ALBURY DC 75
Brand	KAFF
Type	Slant Kitchen Chimney
Motor Type	BLDC Motor
Suction Capacity	1280 m³/hr
Size	75 CM
Control Type	Touch with 9 Speed Gesture Control
Special Features	Filter-less, Smart Auto Clean, Built-In Oil Collector, Energy Saving Frosted LED

Feature	Specification
Product Dimensions (D x W x H)	78.3D x 42.7W x 60.5H Centimeters
Finish Type	Stainless Steel (Black)

9. WARRANTY AND CUSTOMER SUPPORT

Your KAFF ALBURY DC 75 Kitchen Chimney is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical assistance, service requests, or to purchase genuine spare parts, please contact KAFF customer support. Keep your purchase receipt and product serial number handy when contacting support.

For more information, visit the official [KAFF Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3VBNKNH>

More documents and user manuals: <https://manuals.plus/>